



Emotron VFX 2.0 AC drive



Instruction manual

English

Valid from software version 4.42

emotron

DEDICATED DRIVE

 | A CG Product

Emotron VFX 2.0

INSTRUCTION MANUAL - ENGLISH

Valid from Software version 4.42

Document number: 01-5326-01

Edition: r5

Date of release: 07-10-2019

© Copyright CG Drives & Automation Sweden AB 2005 - 2019

CG Drives & Automation Sweden AB retains the right to change specifications and illustrations in the text, without prior notification. The contents of this document may not be copied without the explicit permission of CG Drives & Automation Sweden AB.

Safety Instructions

Congratulations for choosing a product from CG Drives & Automation!

Before you begin with installation, commissioning or powering up the unit for the first time it is very important that you carefully study this Instruction manual. Following symbols can appear in this instruction or on the product itself. Always read these first before continuing.

NOTE: Additional information as an aid to avoid problems.



CAUTION!
Failure to follow these instructions can result in malfunction or damage to the AC drive.



Warning!
Failure to follow these instructions can result in serious injury to the user in addition to serious damage to the AC drive.



HOT SURFACE!
Failure to follow these instructions can result in injury to the user.

Handling the AC drive

Installation, commissioning, demounting, taking measurements, etc, of or on the AC drive may only be carried out by personnel technically qualified for the task. A number of national, regional and local regulations govern handling, storage and installation of the equipment. Always observe current rules and legislation.

Opening the AC drive



WARNING!
Always switch off the mains voltage before opening the AC drive and wait at least 7 minutes to allow the capacitors to discharge.

Always take adequate precautions before opening the AC drive. Although the connections for the control signals and the switches are isolated from the main voltage, do not touch the control board when the AC drive is switched on.

Incorrect connection

The AC drive is not protected against incorrect connection of the mains voltage, and in particular against connection of the mains voltage to the motor outlets U, V and W. The AC drive can be damaged in this way. Risk for personal injury.

Precautions to be taken with a connected motor

If work must be carried out on a connected motor or on the driven machine, the mains voltage must always be disconnected from the AC drive first. Wait at least 7 minutes before starting work.

Earthing

The AC drive must always be earthed via the mains safety earth connection.

Earth leakage current



CAUTION!
This AC drive has an earth leakage current which does exceed 3.5 mA AC. Therefore the minimum size of the protective earth conductor must comply with the local safety regulations for high leakage current equipment which means that according to the standard IEC61800-5-1 the protective earth connection must be assured by one of following conditions:

PE conductor cross-sectional area shall for phase cable size $\leq 16 \text{ mm}^2$ (6 AWG) be $>10 \text{ mm}^2$ Cu (16 mm^2 Al) or use a second PE conductor with same area as original PE conductor.

For cable size above 16 mm^2 (6 AWG) but smaller or equal to 35 mm^2 (2 AWG) the PE conductor cross-sectional area shall be at least 16 mm^2 (6 AWG).

For cables $>35 \text{ mm}^2$ (2 AWG) the PE conductor cross-sectional area should be at least 50 % of the used phase conductor.

When the PE conductor in the used cable type is not in accordance with the above mentioned cross-sectional area requirements, a separate PE conductor should be used to establish this.

Residual current device (RCD) compatibility

This product cause a DC current in the protective conductor. Where a residual current device (RCD) is used for protection in case of direct or indirect contact, only a Type B RCD is allowed on the supply side of this product. Use RCD of 300 mA minimum.

EMC Regulations

In order to comply with the EMC Directive, it is absolutely necessary to follow the installation instructions. All installation descriptions in this manual follow the EMC Directive.

Mains voltage selection

The AC drive may be ordered for use with the mains voltage range listed below.

VFX48: 230-480 V

VFX52: 440-525 V

VFX69: 500-690 V

Voltage tests (Megger)

Do not carry out voltage tests (Megger) on the motor, before all the motor cables have been disconnected from the AC drive.

Condensation

If the AC drive is moved from a cold (storage) room to a room where it will be installed, condensation can occur. This can result in sensitive components becoming damp. Do not connect the mains voltage until all visible dampness has evaporated.

Power factor capacitors for improving $\cos\phi$

Remove all capacitors from the motor and the motor outlet.

Precautions during Autoreset

When the automatic reset is active, the motor will restart automatically provided that the cause of the trip has been removed. If necessary take the appropriate precautions.

Transport

To avoid damage, keep the AC drive in its original packaging during transport. This packaging is specially designed to absorb shocks during transport.

IT Mains supply

The AC drives can be modified for an IT mains supply, (non-earthed neutral), please contact your supplier for details.

Alarms

Never disregard an alarm. Always check and remedy the cause of an alarm.

Heat warning



HOT SURFACE!

Be aware of specific parts on the AC drive having high temperature.

DC-link residual voltage



WARNING!

After switching off the mains supply, dangerous voltage can still be present in the AC drive. When opening the AC drive for installing and/or commissioning activities wait at least 7 minutes. In case of malfunction a qualified technician should check the DC-link or wait for one hour before dismantling the AC drive for repair.

Contents

Safety Instructions	1	4.5	Connecting the Control Signals.....	51
Contents.....	3	4.5.1	Cables	51
1. Introduction.....	7	4.5.2	Types of control signals	53
1.1 Delivery and unpacking	7	4.5.3	Screening.....	53
1.2 Using of the instruction manual	7	4.5.4	Single-ended or double-ended connection?	53
1.2.1 Instruction manuals for optional equipment.....	7	4.5.5	Current signals ((0)4-20 mA).....	54
1.3 Warranty	8	4.5.6	Twisted cables.....	54
1.4 Type code number.....	9	4.6	Connecting options	54
1.5 Standards	10	5. Getting Started.....	55	
1.5.1 Product standard for EMC	10	5.1	Connect the mains and motor cables	55
1.6 Dismantling and scrapping.....	11	5.1.1	Mains cables	55
1.6.1 Disposal of old electrical and electronic equipment .	11	5.1.2	Motor cables.....	55
1.7 Glossary	12	5.2	Using the function keys	56
1.7.1 Abbreviations and symbols.....	12	5.3	Remote control.....	56
1.7.2 Definitions.....	12	5.3.1	Connect control cables	56
2. Mounting	13	5.3.2	Switch on the mains	56
2.1 Lifting instructions.....	13	5.3.3	Set the Motor Data.....	57
2.2 Stand-alone units	14	5.3.4	Run the AC drive.....	57
2.2.1 Cooling	14	5.4	Local control	57
2.2.2 Mounting schemes.....	15	5.4.1	Switch on the mains	57
2.3 Cabinet mounting.....	22	5.4.2	Select manual control.....	57
2.3.1 Cooling	22	5.4.3	Set the Motor Data.....	57
2.3.2 Recommended free space in front of cabinet	22	5.4.4	Enter a Reference Value.....	57
2.3.3 Mounting schemes, cabinets	23	5.4.5	Run the AC drive.....	57
3. Installation	25	6. Applications.....	59	
3.1 Before installation.....	25	6.1	Application overview	59
3.1.1 Remove/open front cover	25	6.1.1	Cranes.....	59
3.1.2 Remove/open the lower front cover on Frame size E2, F2 and FA2 (IP20/21).....	26	6.1.2	Crushers.....	59
3.2 Cable connections for small and medium frame sizes	26	6.1.3	Mills.....	60
3.2.1 Mains cables	26	6.1.4	Mixers	60
3.2.2 Motor cables.....	29	7. Main Features	61	
3.3 Connection of motor and mains cables for larger frame sizes.....	32	7.1	Parameter sets.....	61
3.3.1 Connection of mains and motor cables on IP20 modules	34	7.1.1	One motor and one parameter set	62
3.4 Cable specifications.....	36	7.1.2	One motor and two parameter sets.....	62
3.4.1 Stripping lengths	36	7.1.3	Two motors and two parameter sets	62
3.4.2 Fuse data.....	38	7.1.4	Autoreset at trip	62
3.4.3 Cable connection data for mains, motor and PE cables according to IEC ratings	39	7.1.5	Reference priority.....	63
3.4.4 Cable connection data for mains, motor and PE cables according to NEMA ratings.....	43	7.1.6	Preset references.....	63
3.5 Thermal protection on the motor	45	7.2	Remote control functions	64
3.6 Motors in parallel	45	7.3	Performing an Identification Run	66
4. Control Connections.....	47	7.4	Using the Control Panel Memory.....	66
4.1 Control board.....	47	7.5	Load Monitor and Process Protection [400].....	67
4.2 Terminal connections	48	7.5.1	Load Monitor [410].....	67
4.3 Inputs configuration with the switches.....	49	8. EMC and standards.....	69	
4.4 Connection example	50	8.1	EMC standards.....	69
		8.2	Stop categories and emergency stop	69
		9. Serial communication.....	71	
		9.1	Modbus RTU	71
		9.2	Parameter sets.....	71
		9.3	Motor data	72
		9.4	Start and stop commands.....	72
		9.5	Reference signal	72
		9.5.1	Process value	72
		9.6	Description of the Elnt formats	73

10. Operation via the Control Panel	75	11.5.10 Pump/Fan Control [390]	147
10.1 General	75	11.5.11 Crane Option [3A0]	154
10.1.1 Two different control panels.....	75	11.6 Load Monitor and Process Protection [400].....	157
10.2 Control panel with 4-line display.....	75	11.6.1 Load Monitor [410].....	157
10.2.1 The display.....	75	11.6.2 Process Protection [420].....	162
10.2.2 Editing mode.....	77	11.7 I/Os and Virtual Connections [500].....	164
10.2.3 Fault logger.....	78	11.7.1 Analogue Inputs [510].....	164
10.2.4 Real Time clock	78	11.7.2 Digital Inputs [520].....	170
10.2.5 LED indicators	78	11.7.3 Analogue Outputs [530]	172
10.2.6 Control keys	78	11.7.4 Digital Outputs [540]	176
10.2.7 The Toggle and Loc/Rem Key	79	11.7.5 Relays [550]	178
10.2.8 Function keys	80	11.7.6 Virtual Connections [560]	180
10.3 Control panel with 2-line display.....	80	11.8 Logical Functions and Timers [600]	181
10.3.1 The display.....	80	11.8.1 Comparators [610]	181
10.3.2 Indications on the display.....	81	11.8.2 Logic Output Y [620].....	191
10.3.3 LED indicators	81	11.8.3 Logic Output Z [630].....	193
10.3.4 Control keys	81	11.8.4 Timer1 [640]	194
10.3.5 The Toggle and Loc/Rem Key	82	11.8.5 Timer2 [650]	196
10.3.6 Function keys	83	11.8.6 Counters [660].....	197
10.4 The menu structure.....	83	11.8.7 Clock Logic [670]	200
10.4.1 The main menu	84	11.9 View Operation/Status [700]	201
10.5 Programming during operation	84	11.9.1 Operation [710].....	201
10.6 Editing values in a menu	84	11.9.2 Status [720]	204
10.7 Copy current parameter to all sets	84	11.9.3 Stored values [730].....	208
10.8 Programming example.....	85	11.10 View Trip Log [800].....	209
11. Functional Description	87	11.10.1 With four line PPU and real time clock	209
11.1 2-line LCD display.....	87	11.10.2 Trip Message log [810].....	209
11.2 4-line LCD display.....	88	11.10.3 Trip Messages [82P] - [89P].....	210
11.3 Menus	89	11.10.4 Reset Trip Log [8A0]	210
11.3.1 1st Line [110].....	89	11.11 System Data [900].....	211
11.3.2 2nd Line [120]	90	11.11.1 VSD Data [920]	211
11.3.3 3rd Line [130]	90	11.12 Bluetooth (Optional) device ID number	212
11.3.4 4th Line [140]	90	11.12.1 Real Time clock	212
11.3.5 5th Line [150]	90	12. Troubleshooting, Diagnoses and	
11.3.6 6th Line [160]	90	Maintenance	215
11.3.7 View mode [170].....	90	12.1 Trips, warnings and limits.....	215
11.4 Main Setup [200].....	91	12.2 Trip conditions, causes and remedial action	216
11.4.1 Operation [210].....	91	12.2.1 Technically qualified personnel.....	217
11.4.2 Remote Signal Level/Edge [21A].....	96	12.2.2 Opening the AC drive	217
11.4.3 Mains supply voltage [21B].....	96	12.2.3 Precautions to take with a connected motor	217
11.4.4 Motor Data [220]	97	12.2.4 Autoreset Trip	217
11.4.5 Motor Protection [230].....	104	12.3 Maintenance	221
11.4.6 Parameter Set Handling [240].....	108	13. Options.....	223
11.4.7 Trip Autoreset/Trip Conditions [250].....	110	13.1 Control panel	223
11.4.8 Serial Communication [260]	117	13.2 External control panel kits (4-line).....	223
11.5 Process and Application Parameters [300]	122	13.2.1 Control panel kit, including blank panel.....	223
11.5.1 Set/View Reference Value [310]	122	13.2.2 Control panel kit, including control panel.....	223
11.5.2 Process Settings [320]	122	13.3 External control panel options (2-line).....	224
11.5.3 Start/Stop settings [330]	127	13.4 Handheld Control Panel 2.0	224
11.5.4 Mechanical brake control.....	131	13.5 Gland kits.....	225
11.5.5 Speed [340].....	136	13.6 EmoSoftCom.....	225
11.5.6 Torques [350].....	139	13.7 Brake chopper	225
11.5.7 Preset References [360]	141	13.8 I/O Board	227
11.5.8 PI Speed Control [370]	142	13.9 Encoder.....	227
11.5.9 PID Process Control [380].....	143	13.10 PTC/PT100	227

13.11	Crane option board	227
13.12	Serial communication and fieldbus	227
13.13	Standby supply board option.....	228
13.14	Safe Stop option.....	229
13.15	EMC filter class C1/C2	231
13.16	Output chokes	231
13.17	Liquid cooling	231
13.18	Top cover for IP20/21 version	231
13.19	Other options.....	231
13.20	AFE - Active Front End.....	231
14.	Technical Data	233
14.1	Electrical specifications related to model	233
14.2	General electrical specifications.....	240
14.3	Operation at higher temperatures	241
14.4	Dimensions and Weights.....	242
14.5	Environmental conditions.....	245
14.6	Fuses and glands.....	246
14.6.1	According to IEC ratings.....	246
14.6.2	Fuses according to NEMA ratings	250
14.7	Control signals.....	251
15.	Menu List	253
	Index	259

1. Introduction

Emotron VFX is intended for controlling the speed and torque of standard three phase asynchronous electrical motors. The AC drive (Frequency converter) is equipped with direct torque control which uses built-in digital signal processor - DSP, giving the AC drive the capability of high dynamic performance even at very low speeds without using feedback signals from the motor. Therefore the inverter is designed for use in high dynamic applications where low speed high torque and high-speed accuracy are demanded. In “simpler” application such as fans or pumps, the VFX direct torque control offers other great advantages such as insensitivity to mains disturbances or load shocks. Several options are available, listed in chapter 13. page 225, that enable you to customize the AC drive for your specific needs.

NOTE: Read this instruction manual carefully before starting installation, connection or working with the AC drive.

Users

This instruction manual is intended for:

- installation engineers
- maintenance engineers
- service engineers

Motors

The AC drive is suitable for use with standard 3-phase asynchronous motors. Under certain conditions it is possible to use other types of motors. Contact your supplier for details.

1.1 Delivery and unpacking

Check for any visible signs of damage. Inform your supplier immediately of any damage found. Do not install the AC drive if damage is found.

Check that all items are present and that the type number is correct.

1.2 Using of the instruction manual

Within this instruction manual the abbreviation “AC drive” is used to indicate the complete variable speed drive as a single unit.

Check that the software version number on the first page of this manual matches the software version in the AC drive. See chapter 11.11.1 page 213

With help of the index and the table of contents it is easy to track individual functions and to find out how to use and set them.

The Quick Setup Card can be put in a cabinet door, so that it is always easy to access in case of an emergency.

1.2.1 Instruction manuals for optional equipment

In the following table we have listed available options and the name of the Instruction manual or data sheet/ Instruction plus document number. Further in this main manual we are often referring to these instructions.

Table 1 Available options and documents

Option	Valid instruction manual/ document number
I/O board	I/O board 2.0, instruction manual / 01-5916-01
Encoder board	Emotron Encoder board 2.0, Instruction manual / 01-5917-01
PTC/PT100 board	PTC/PT100 board 2.0, instruction manual / 01-5920-01
CRIO board (VFX)	Emotron AC Drive Crane option 2.0, Instruction manual
Crane interface (VFX)	
Fieldbus - Profibus	Fieldbus Option, Instruction manual / 01-3698-01
Fieldbus - DeviceNet	
Fieldbus - CANopen	
Ethernet - Modbus TCP	
Ethernet - EtherCAT	
Ethernet - Profinet IO 1-port	
Ethernet - Profinet IO 2-port	
Ethernet - EtherNet/IP 2-port	
RS232/RS485 isolated	Emotron isolated RS232 / 485 2.0 option Instruction manual / 01-5919-01
Control panel kit, Incl blank panel	Emotron FDU/VFX 2.0 External Control Panel, instruction manual / 01-5928-01
Control panel kit, Incl control panel	
Handheld Control Panel HCP2.0	Emotron HCP 2.0, instruction manual / 01-5925-01
Safe stop	Option Safe Stop (STO – Safe Torque Off), Technical description / 01-5921-01
Overshoot clamp	Overshoot clamp Datasheet/Instruction / 01-5933-11
Liquid cooling	Emotron FDU/VFX 2.0 Liquid Cooling, instruction manual / 01-4636-01
Output choke	Output coils Datasheet/Instruction / 01-3132-11
AFE- Active front end	Emotron VFX/FDU 2.0 AFE- Active Front End option, Instruction manual / 01-5386-01

1.3 Warranty

The warranty applies when the equipment is installed, operated and maintained according to instructions in this instruction manual. Duration of warranty as per contract. Faults that arise due to faulty installation or operation are not covered by the warranty.

1.4 Type code number

Fig. 1 gives an example of the type code numbering used on all AC drives. With this code number the exact type of the drive can be determined. This identification will be required for type specific information when mounting and installing. The code number is located on the product label, on the unit.

Type code	VFX	48	-017	-20	C	E	-	-	-	A	-	N	N	N	N	A	N	-	-
Position No	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19

Fig. 1 Type code number

Position for 002-074	Position for 090-3K0	Configuration	
1	1	AC drive type	VFX
2	2	Supply voltage	48=480 V mains 52=525 V mains 69=690 V mains
3	3	Rated current (A) continuous	-002=2.0 A - -3K0=3000 A
4	4	Protection class	20=IP20 - Intended for mounting inside a cabinet 21=IP21 - Intended for wall-mounting 54=IP54 - Intended for wall-mounting
5	5	Control panel	--=Blank panel C=2-line Control panel, standard IP2Y D=4-line Control panel, standard IP2X/54 E=4-line Control panel with Bluetooth (option IP2X/54)
6	6	EMC option	E=Standard EMC (Category C3) F=Extended EMC (Category C2) I=IT-Net
7	7	Brake chopper option	--=No chopper B=Chopper built in D=DC+/- interface
8	8	Stand-by power supply option	--=No SBS S=SBS included
-	9	Safe stop option (Only valid for 090-3k0)	--=No safe stop T=Safe stop incl.
9	10	Brand label	A=Standard
10	-	Painted AC drive	A=Standard paint
11	11	Coated boards, option	--=Standard, not coated boards IP54 V=Coated boards, option IP54 (standard IP2X)
12	12	Option position 1	N=No option
13	13	Option position 2	C=Crane I/O (max. 1) E=Encoder (max. 1)
14	14	Option position 3	P=PTC/PT100 (max. 2) I=Extended I/O (max. 3) S=Safe Stop (only 002-105, IP2X/54 size B-D2 (69)) (max. 1)

Position for 002-074	Position for 090-3K0	Configuration	
15	15	Option position, communication	N= No option D= DeviceNet P= Profibus S= RS232/485 M= Modbus/TCP E= EtherCAT F= Modbus/TCP 2-port, M12 A= Profinet IO 1-port B= Profinet IO 2-port G= EtherNet/IP 2-port C= CANopen
16	16	Software type	A= Standard software, Language set 1 I = Std sw Language set 2 See menu "Language [21 1]" on page 91
17	-	Motor PTC. (Only valid for 002-105/B-D2(69))	N= No option P= PTC
18	-	Gland kit. (Only valid for 002-074/IP54)	--= Glands not included G= Gland kit included
19	17	Approval/certification	--= CE approved D= Marine DNV Product certificate (above 100 kW) + CE approved M= Marine version + CE approved U=UL/cUL approved

1.5 Standards

The AC drives described in this instruction manual comply with the standards listed in Table 2. For the declarations of conformity and manufacturer's certificate, contact your supplier for more information or visit www.emotron.com/ www.cgglobal.com.

1.5.1 Product standard for EMC

Product standard EN(IEC)61800-3, second edition of 2004 defines the:

First Environment (Extended EMC) as environment that includes domestic premises. It also includes establishments directly connected without intermediate transformers to a low voltage power supply network that supplies buildings used for domestic purposes.

Category C2: Power Drive System (PDS) of rated voltage <1.000 V, which is neither a plug in device nor a movable device and, when used in the first environment, is intended to be installed and commissioned only by a professional.

Second environment (Standard EMC) includes all other establishments.

Category C3: PDS of rated voltage <1.000 V, intended for use in the second environment and not intended for use in the first environment.

Category C4: PDS or rated voltage equal or above 1.000 V, or rated current equal to or above 400 A, or intended for use in complex systems in the second environment.

The AC drive complies with the product standard EN(IEC) 61800-3:2004 (Any kind of metal screened cable may be used). The standard AC drive is designed to meet the

requirements according to category C3, for a motor cable length of maximum 80 m.

By using the optional "Extended EMC" filter the AC drive fulfils requirements according to category C2.



WARNING!

In a domestic environment this product may cause radio interference, in which case it may be necessary to take adequate additional measures.



WARNING!

The standard AC drive, complying with category C3, is not intended to be used on a low-voltage public network which supplies domestic premises; radio interference is expected if used in such a network. Contact your supplier if you need additional measures.

Table 2 Standards

Market	Standard	Description
European	EMC Directive	2014/30/EU
	Low Voltage Directive	2014/35/EU
	WEEE Directive	2012/19/EU
All	EN 60204-1	Safety of machinery - Electrical equipment of machines Part 1: General requirements.
	EN(IEC)61800-3:2004	Adjustable speed electrical power drive systems Part 3: EMC requirements and specific test methods. EMC Directive: Declaration of Conformity and CE marking
	EN(IEC)61800-5-1 Ed. 2.0	Adjustable speed electrical power drive systems Part 5-1. Safety requirements - Electrical, thermal and energy. Low Voltage Directive: Declaration of Conformity and CE marking
	IEC 60721-3-3	Classification of environmental conditions. Air quality chemical vapours, unit in operation. Chemical gases 3C2, Solid particles 3S2. Optional with coated boards Unit in operation. Chemical gases Class 3C3, Solid particles 3S2.
North & South America	ULC508C	UL Safety standard for Power Conversion Equipment
	USL	USL (United States Standards - Listed) complying with the requirements of UL508C Power Conversion Equipment
	UL 840	UL Safety standard for Power Conversion Equipment. Insulation coordination including clearances and creepage distances for electrical equipment.
	CNL	CNL (Canadian National Standards - Listed) complying with the requirements of CAN/CSA C22.2 No. 14-10 Industrial Control Equipment.
Russian	EAC	For all sizes.

1.6 Dismantling and scrapping

The enclosures of the drives are made from recyclable material as aluminium, iron and plastic. Each drive contains a number of components demanding special treatment, for example electrolytic capacitors. The circuit boards contain small amounts of tin and lead. Any local or national regulations in force for the disposal and recycling of these materials must be complied with.

1.6.1 Disposal of old electrical and electronic equipment



This symbol on the product or on its packaging indicates that this product shall be taken to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potentially negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling this product, please contact the local distributor of the product.

1.7 Glossary

1.7.1 Abbreviations and symbols

In this manual the following abbreviations are used:

Table 3 Abbreviations

Abbreviation/ symbol	Description
DSP	Digital signals processor
AC drive	Frequency converter
PEBB	Power Electronic Building Block
IGBT	Insulated Gate Bipolar Transistor
CP	Control panel, the programming and presentation unit on the AC drive
HCP	Handheld control panel (option)
EInt	Communication format
UInt	Communication format (Unsigned integer)
Int	Communication format (Integer)
Long	Communication format
SELV	Safety Extra Low Voltage
	The function cannot be changed in run mode

1.7.2 Definitions

In this manual the following definitions for current, torque and frequency are used:

Table 4 Definitions

Name	Description	Quantity
I_{IN}	Nominal input current of AC drive	A_{RMS}
I_{NOM}	Nominal output current of AC drive	A_{RMS}
I_{MOT}	Nominal motor current	A_{RMS}
P_{NOM}	Nominal power of AC drive	kW
P_{MOT}	Motor power	kW
T_{NOM}	Nominal torque of motor	Nm
T_{MOT}	Motor torque	Nm
f_{OUT}	Output frequency of AC drive	Hz
f_{MOT}	Nominal frequency of motor	Hz
n_{MOT}	Nominal speed of motor	rpm
I_{CL}	Maximum output current	A_{RMS}
Speed	Actual motor speed	rpm
Torque	Actual motor torque	Nm
Sync speed	Synchronous speed of the motor	rpm

2. Mounting

This chapter describes how to mount the AC drive.

Before mounting it is recommended that the installation is planned out first.

- Be sure that the AC drive suits the mounting location.
- The mounting site must support the weight of the AC drive.
- Will the AC drive continuously withstand vibrations and/or shocks?
- Consider using a vibration damper.
- Check ambient conditions, ratings, required cooling air flow, compatibility of the motor, etc.
- Know how the AC drive will be lifted and transported.

Note: IP20 units are intended for cabinet mounting.

2.1 Lifting instructions

Note: To prevent personal risks and any damage to the unit during lifting, it is advised that the lifting methods described below are used.

Recommended for AC drive models -090 to -365

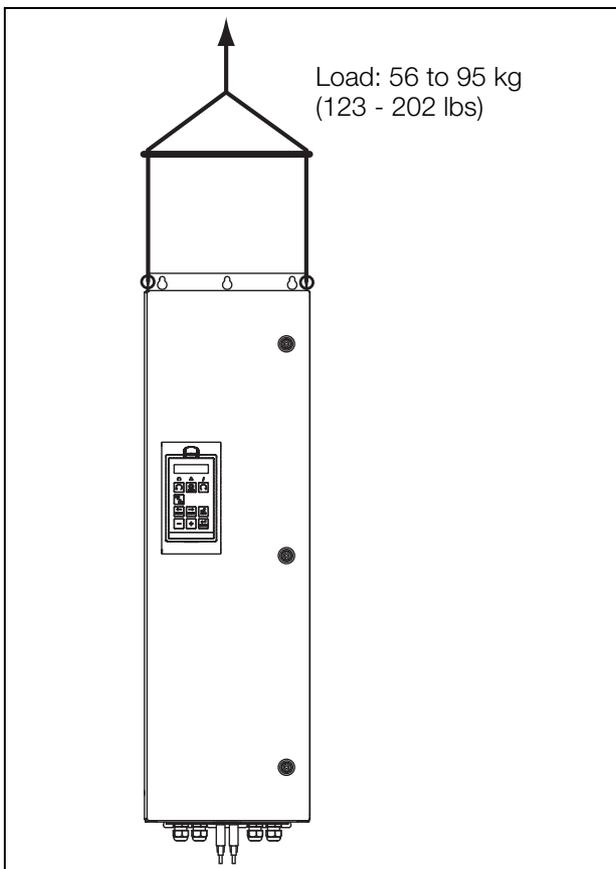


Fig. 2 Lifting AC drive model -090 to -365.

Recommended for AC drive models -300 to -3K0

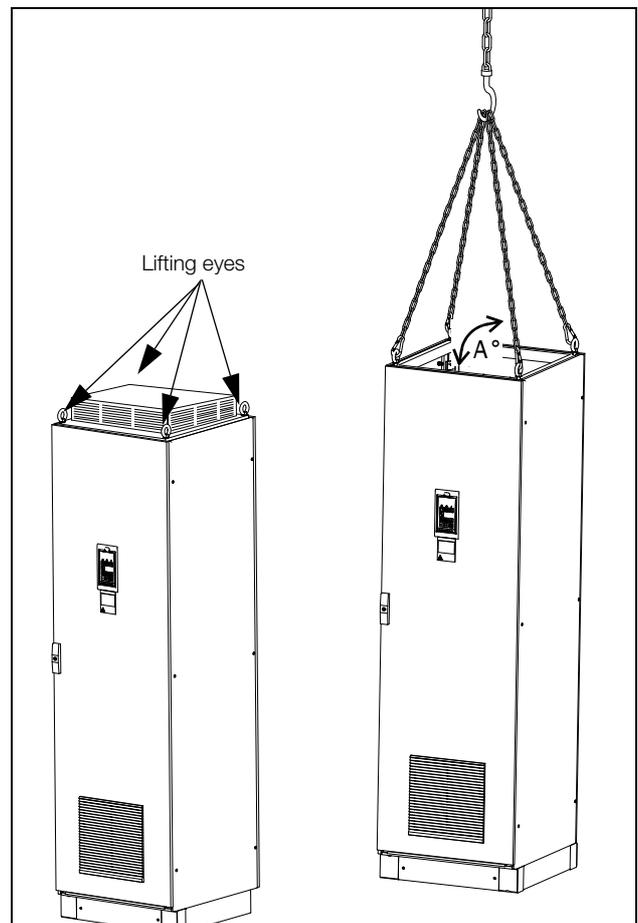


Fig. 3 Remove the roof unit and use the lifting eyes to lift single unit 600 mm (23.6 in) and 900 mm (35.4 in).

Single cabinet drives can be lifted/transported safely using the eye bolts supplied and lifting cables/chains as in illustration Fig. 3 above.

Depending on the cable/chain angle A (in Fig. 3), following loads are permitted:

Cable/chain angle A	Permitted load
45 °	4 800 N (1080 lbf)
60 °	6 400 N (1439 lbf)
90 °	13 600N (3057 lbf)

Regarding lifting instructions for other cabinet sizes, please contact CG Drives & Automation.

2.2 Stand-alone units

The AC drive must be mounted in a vertical position against a flat surface. Use the template (in the File archive on our homepage) to mark out the position of the fixing holes.

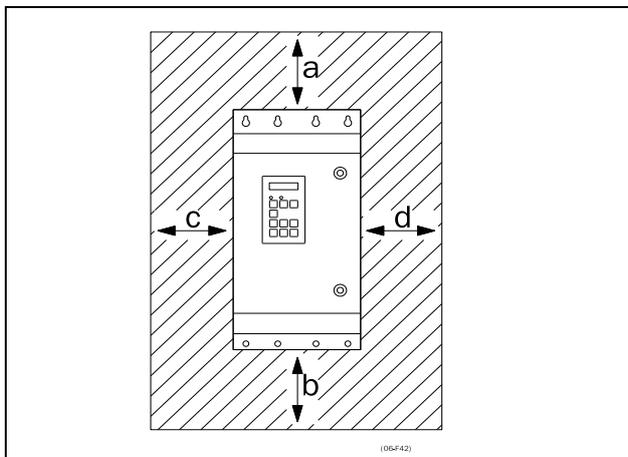


Fig. 4 AC drive mounting model 002 to 3K0

2.2.1 Cooling

Fig. 4 shows the minimum free space required around the AC drive for the models 002 to 3K0 in order to guarantee adequate cooling. Because the fans blow the air from the bottom to the top it is advisable not to position an air inlet immediately above an air outlet.

The following minimum separation between two AC drives, or a AC drive and a non-dissipating wall must be maintained. Valid if free space on opposite side.

Table 5 Mounting and cooling

		Frame size B - FA, C2-FA2, C69-F69, C2(69)-D2(69) [mm(in)]	Frame size C2, D2, E2, F2 with IP21 top cover option [mm(in)]	300-3K0 cabinet [mm(in)]
2x2xVFX, side-by-side mm (in)	a	200 (7.9)	200 (7.9)	100 (3.9)
	b	200 (7.9)	200 (7.9)	0
	c	0	50 (1.97)	0
	d	0	50 (1.97)	0
3 or more VFX units B/C/D/C2/ D2 side-by- side mm (in)	a	200 (7.9)	200 (7.9)	100 (3.9)
	b	200 (7.9)	200 (7.9)	0
	c	50 (1.97)	50 (1.97)	0
	d	50 (1.97)	50 (1.97)	0
3 or more VFX units E/F/E2/F2 side-by-side mm (in)	a	200 (7.9)	200 (7.9)	100 (3.9)
	b	200 (7.9)	200 (7.9)	0
	c	100 (3.9)	50 (1.97)	0
	d	100 (3.9)	50 (1.97)	0
VFX-wall, wall-one side mm (in)	a	100 (3.9)	100 (3.9)	100 (3.9)
	b	100 (3.9)	100 (3.9)	0
	c	0	50 (1.97)	0
	d	0	50 (1.97)	0

NOTE: When a 300 to 3K0 model is placed between two walls, a minimum distance at each side of 200 mm (7.9 in) must be maintained.

2.2.2 Mounting schemes

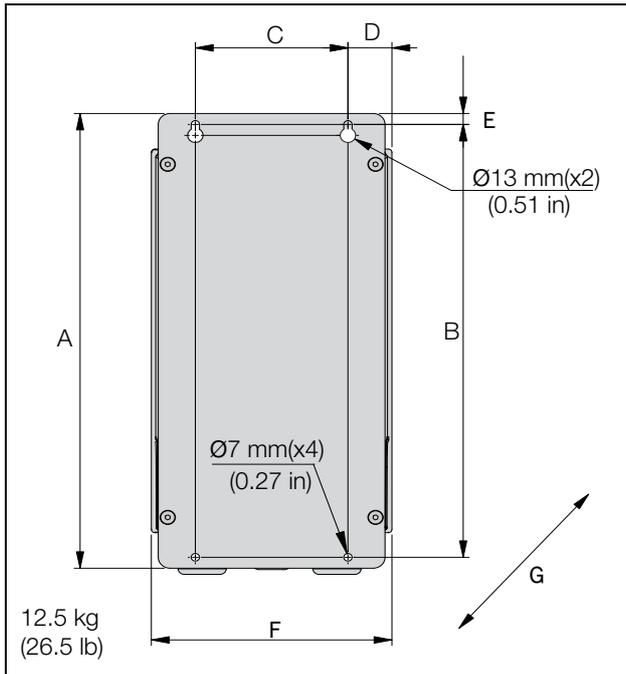


Fig. 5 Emotron VFX Model 48/52-003 to 018 (Frame size B).

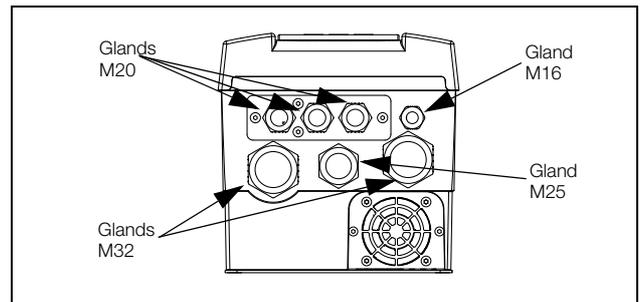


Fig. 6 Cable interface for mains, motor and communication, Emotron VFX Model 48/52-003 to 018 (Frame size B).

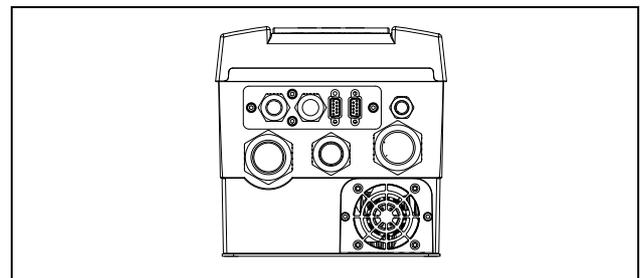


Fig. 7 Emotron VFX Model 48/52-003 to 018 (Frame size B) example with optional CRIO interface and D-sub connectors.

Table 6 Dimensions connected to Fig. 5.

Frame size	Emotron VFX model	Dimensions in mm (in)						
		A	B	C	D	E	F	G (depth)
B	003 - 018	416 (16.4)	396 (15.6)	128.5 (5.04)	37 (1.46)	10 (0.39)	202.6 (7.98)	203 (7.99)

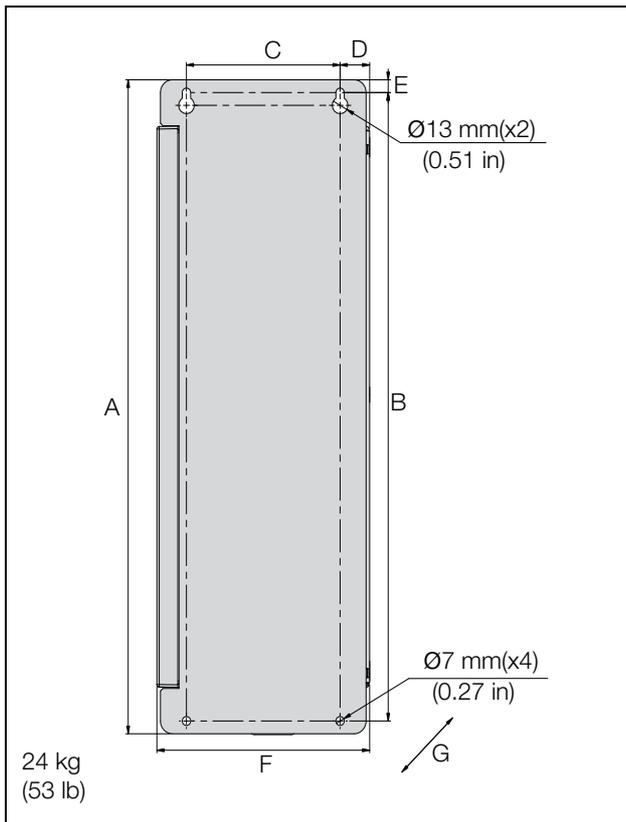


Fig. 8 Emotron VFX Model 48/52-026 to 046 (Frame size C).

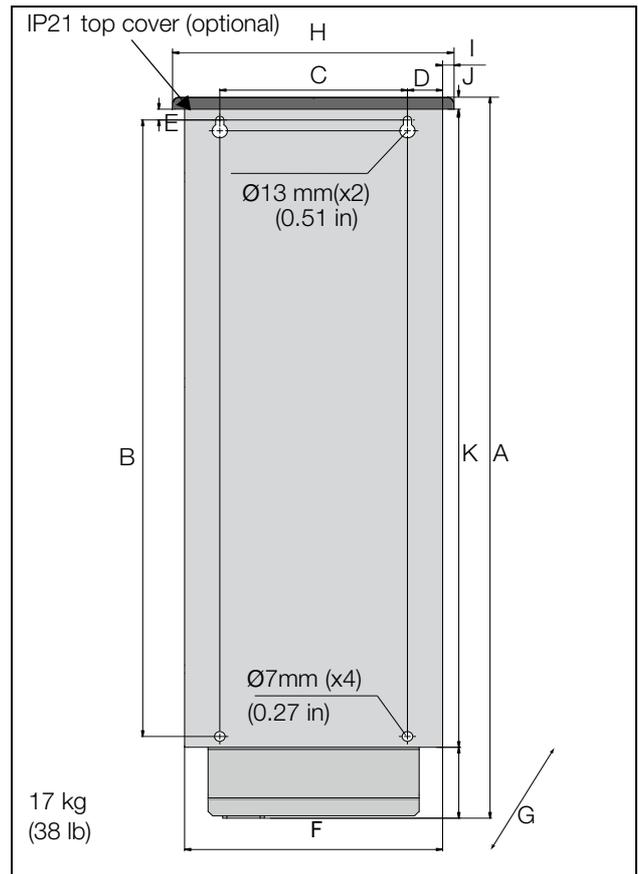


Fig. 10 Emotron VFX Model 48-025 to 48-058 (Frame size C2), Model 69-002 to 69-025 (Frame size C2(69)), backside view.

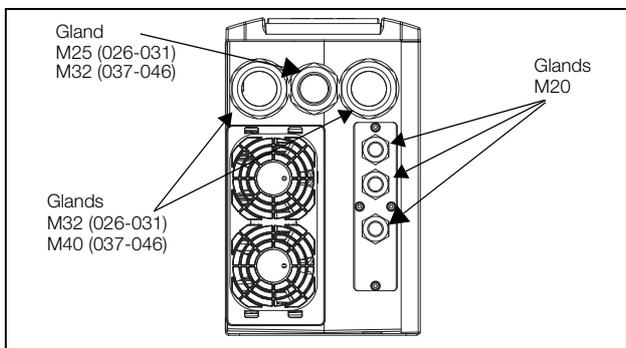


Fig. 9 Cable interface for mains, motor and communication, Emotron VFX Model 48/52-026 to 046 (Frame size C).

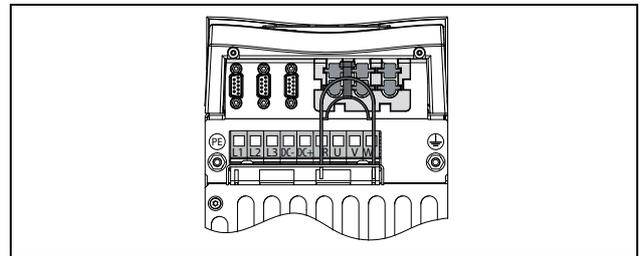


Fig. 11 Bottom view Emotron VFX Model 48-025 to 48-058 (Frame size C2) Model 69-002 to 69-025 (Frame size C2(69)), with cable interface for mains, motor, DC+/DC-, brake resistor and control.

Table 7 Dimensions connected to Fig. 8 and Fig. 10.

Frame size	Emotron VFX model	Dimensions in mm (in)										
		A	B	C	D	E	F	G (depth)	H	I	J	K
C	026 - 046	512 (20.2)	492 (19.4)	128.5 (5.04)	24.8 (0.95)	10 (0.39)	178 (7)	292 (11.5)	-	-	-	-
C2	025 - 058	585.5 (23)	471 (18.5)	128.5 (5.04)	23.8 (0.91)	13 (0.51)	167 (7)	267 (10.5) IP21 282 (11.1)	196 (7.7)	10 (0.39)	23.5 (0.9)	496 (19.5)
C2(69)	002 - 025											

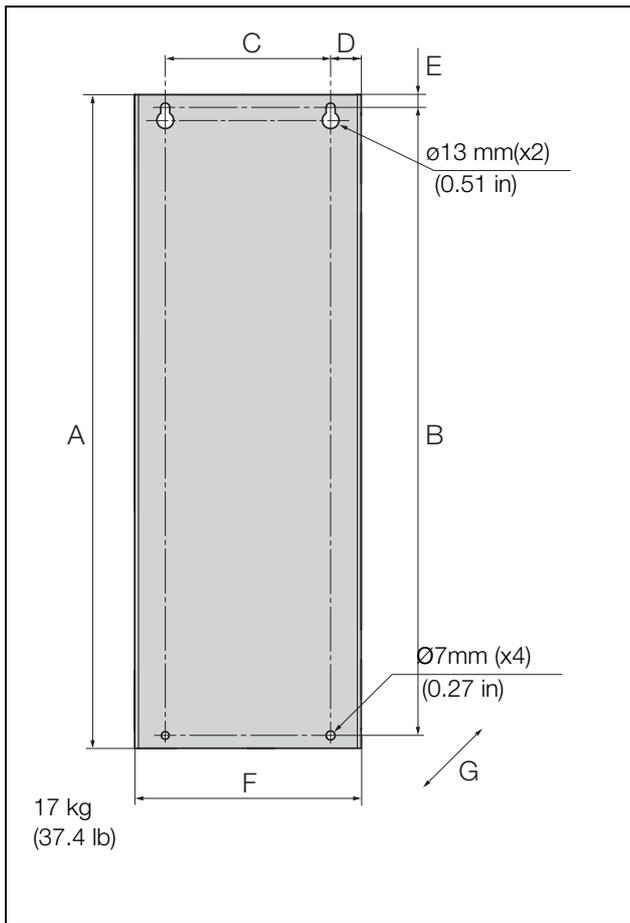


Fig. 12 Emotron VFX Model 69-002 to 025 (Frame size C69).

Table 8 Dimensions connected to Fig. 12.

Frame size	Emotron VFX model	Dimensions in mm (in)						
		A	B	C	D	E	F	G (depth)
C69	002-025	512 (20.2)	492 (19.4)	128.5 (5.06)	24.8 (0.98)	10 (0.39)	178 (7.01)	314 (12.36) Excl. PPU G 291.5 (11.5)

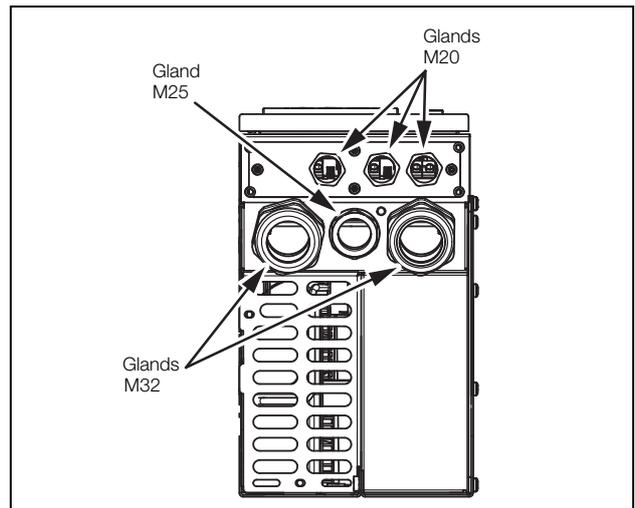


Fig. 13 Cable interface for mains, motor and communication, Emotron VFX Model 69-002 to 025 (Frame size C69).

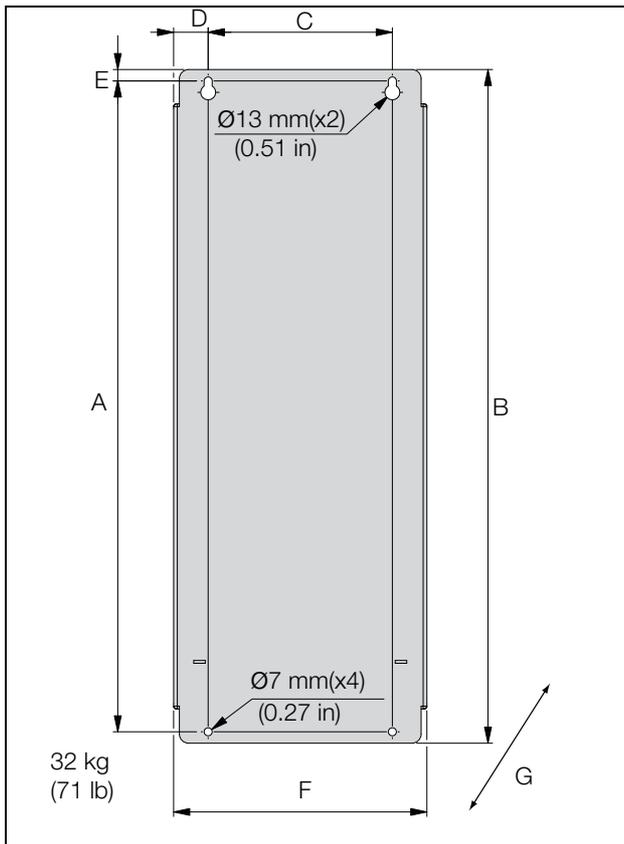


Fig. 14 Emotron VFX Model 48/52-061 to 074 (Frame size D), Model 69-033 to 69-058, (Frame size D69).

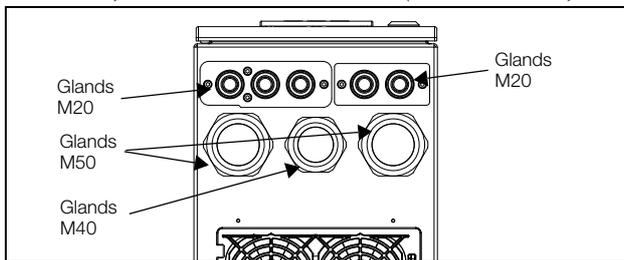


Fig. 15 Cable interface for mains, motor and communication, Emotron VFX Model 48/52-061 and 074 (Frame size D), Model 69-033 to 69-058 (Frame size D69).

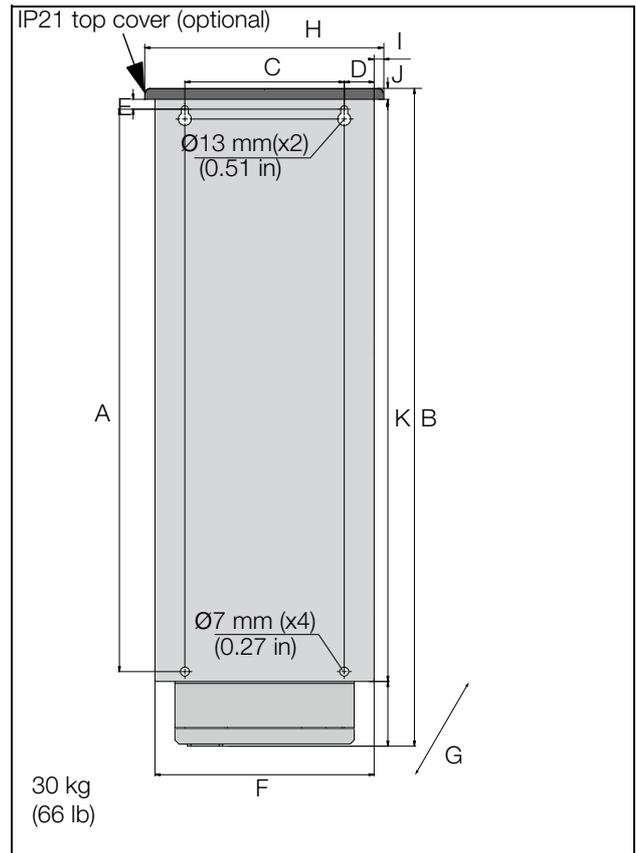


Fig. 16 Emotron VFX Model 48-060 to 48-105 (Frame size D2), Model 69-033 to 69-058 (Frame size D2(69)), backside view.

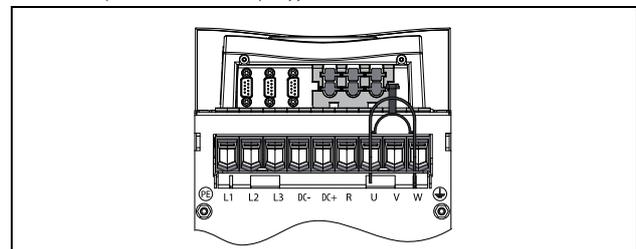


Fig. 17 Bottom view Emotron VFX Model 48-060 to 48-105 (Size D2), Model 69-033 to 69-058 (Frame size D2(69)), with cable interface for mains, motor, DC+/DC-, brake resistor and control.

NOTE: Glands for size B, C, D, C69 and D69 are available as option kit.

Table 9 Dimensions connected to Fig. 14 and Fig. 16.

Frame size	Emotron VFX model	Dimensions in mm (in)										
		A	B	C	D	E	F	G (depth)	H	I	J	K
D	061 - 074	570	590	160	30	10	220	295	-	-	-	-
D69	033 - 058	(22.4)	(23.2)	(6.3)	(0.9)	(0.39)	(8.7)	(11.6)	-	-	-	-
D2	060 - 105	570	669.5	160	30	13	220	291 (11.5)	240	10	12.5	590
D2(69)	033 - 058	(22.4)	(26.3)	(6.3)	(0.9)	(0.51)	(8.7)	IP21 - 307 (12.1)	(9.5)	(0.39)	(0.47)	(23.2)

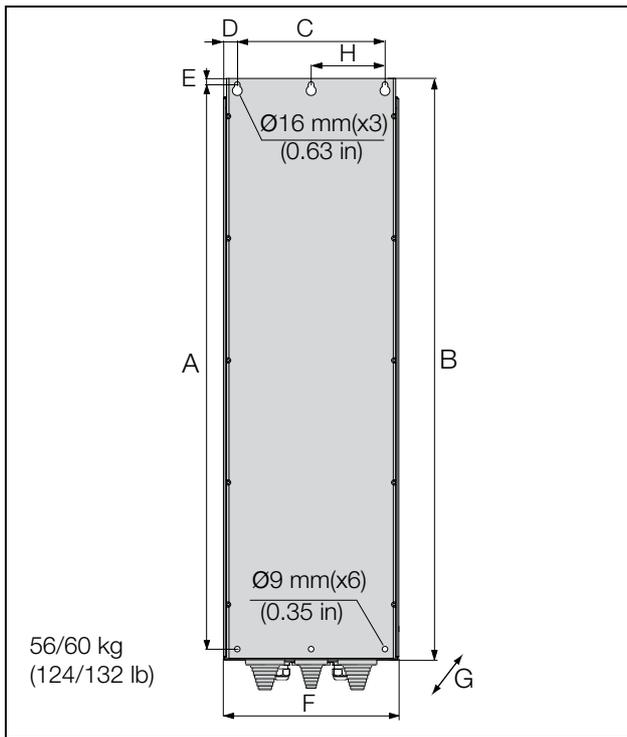


Fig. 18 Emotron VFX Model 48-090 to 175 (Frame size E).

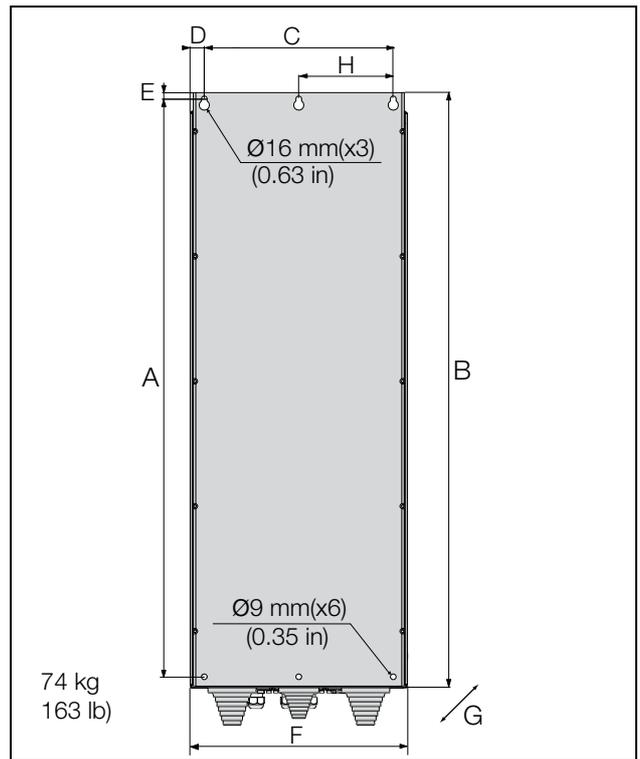


Fig. 20 Emotron VFX Model 48-210 to 295 (Frame size F),
Emotron VFX Model 69-82 to 200 (Frame size F69).

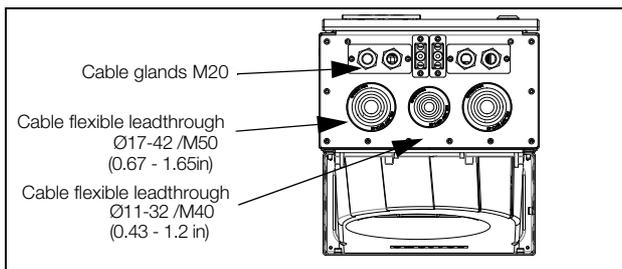


Fig. 19 Cable interface for mains, motor, DC+/DC-, brake resistor and communication, Emotron VFX Model 48-090 to 175 (Frame size E).

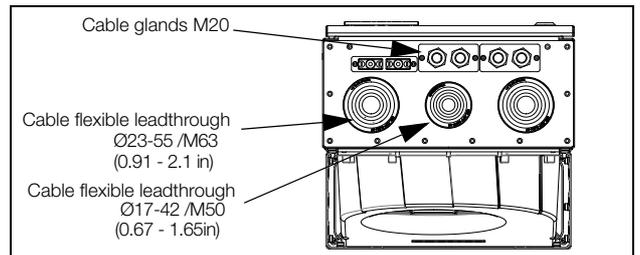


Fig. 21 Cable interface for mains, motor, DC+/DC-, brake resistor and communication, Emotron VFX Model 48-210 to 295 (Frame size F), Emotron VFX Model 69-082 to 200 (Frame size F69).

Table 10 Dimensions IP54 connected to Fig. 18 and Fig. 20.

Frame size	Emotron VFX model	Dimension in mm (in)							
		A	B	C	D	E	F	G (depth)	H
E	090 - 175	925 (36.4)	950 (37.4)	240 (9.5)	22.5 (0.88)	10 (0.39)	284.5 (11.2)	314 (12.4)	120
F	210 - 295	925 (36.4)	950 (37.4)	300 (11.8)	22.5 (0.88)	10 (0.39)	344.5 (13.6)	314 (12.4)	150
F69	082 - 200	1065 (41.9)	1090 (42.9)						

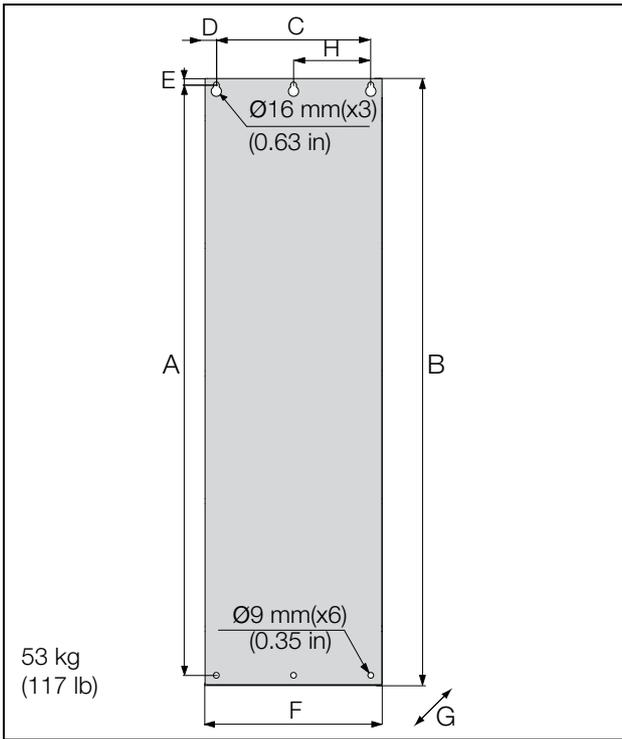


Fig. 22 Emotron VFX/ Model 48-142 to 48-171 (Frame size E2).

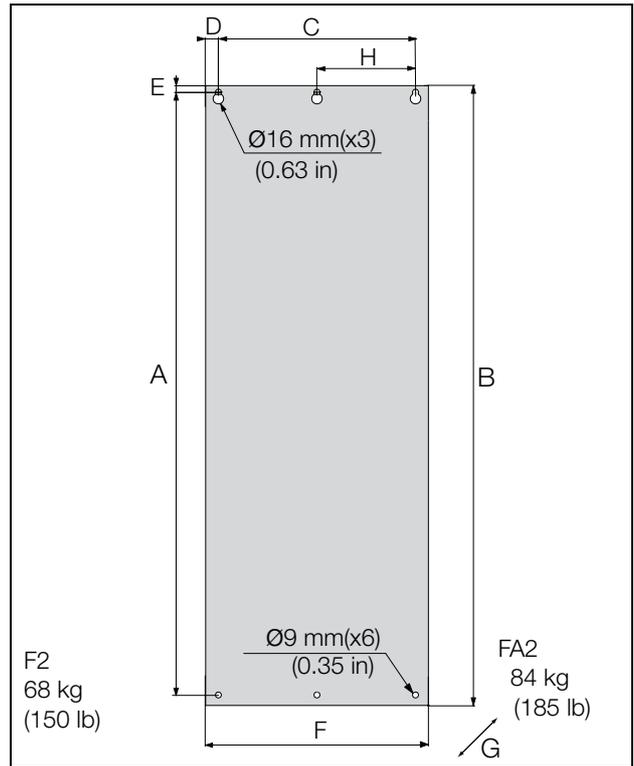


Fig. 24 Emotron VFX/ Model 48-205 to 48-293 (Frame size F2) and 48-365-20 (Frame size FA2).

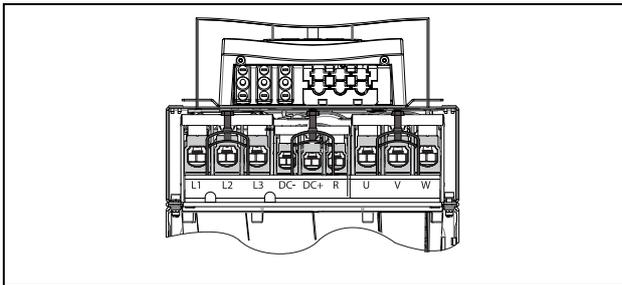


Fig. 23 Bottom view Emotron VFX/ Model 48-142 to 48-293 (Frame size E2 and F2), with cable interface for mains, motor, DC+/DC-, brake resistor and control. (principle drawing).

Table 11 Dimensions IP20 connected to Fig. 22 and Fig. 24.

Frame size	Emotron VFX model	Dimension in mm (in)							
		A	B	C	D	E	F	G (depth)	H
E2	142 - 171	925 (36.4)	950 (37.4)	240 (9.5)	22.5 (0.88)	10 (0.39)	275 (10.8)	294 (11.6) IP21 - 323 (12.7)	120 (4.7)
F2	205 - 293			300 (11.8)				335 (13.2)	294 (11.6) IP21 - 323 (12.7)
FA2	365	1065 (41.9)	1090 (42.9)	306 (12) IP21 - 323 (12.7)					

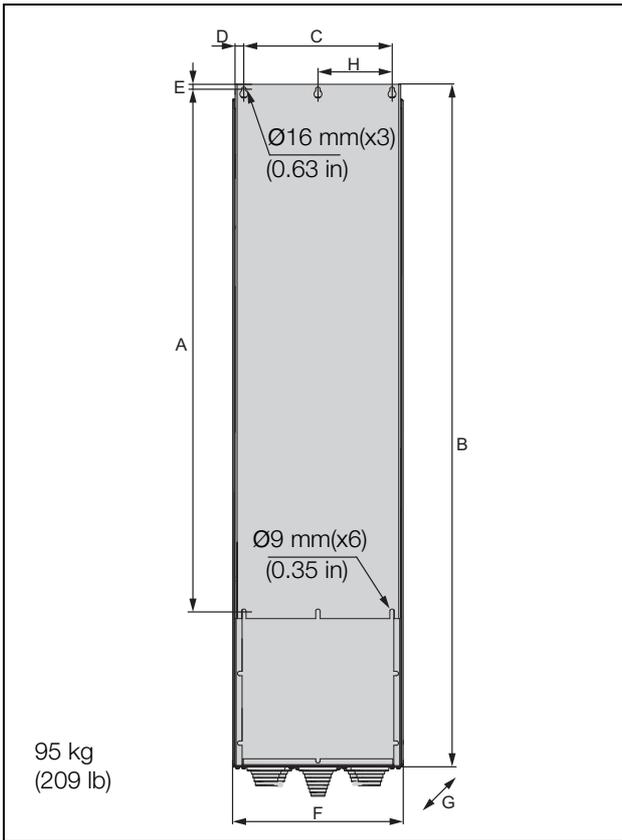


Fig. 25 Emotron VFX Model 48-365-54 (Frame size FA).

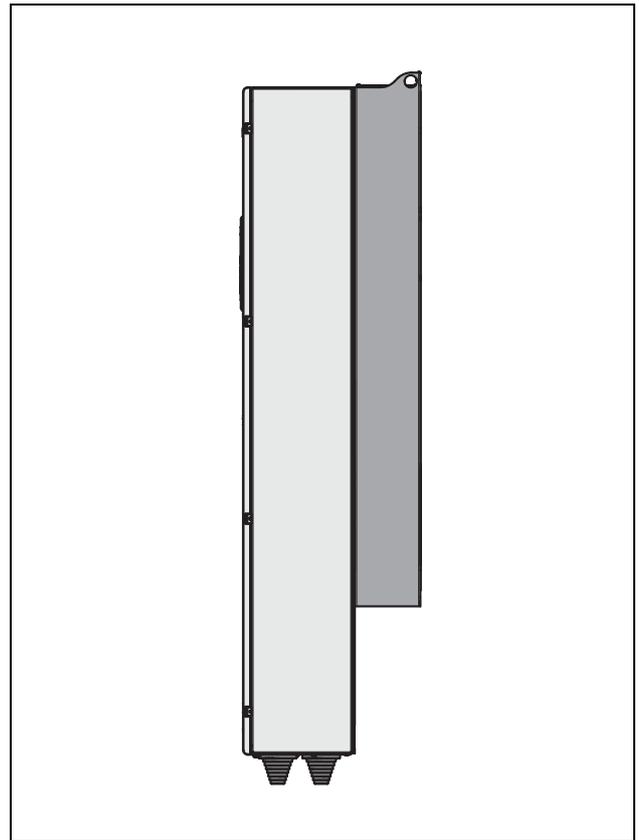


Fig. 27 Side view Emotron VFX Model 48-365-54 (Frame size FA).

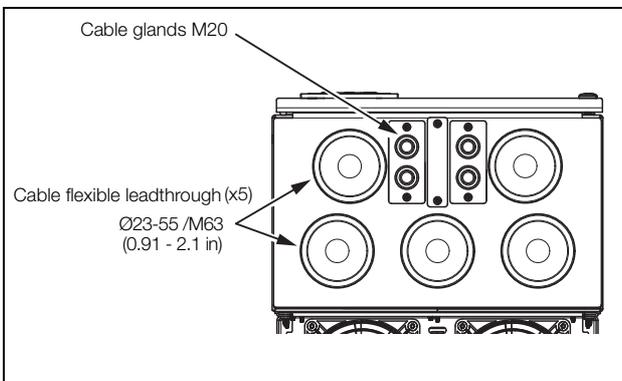


Fig. 26 Cable interface for mains, motor, DC+/DC-, brake resistor and communication, Emotron VFX Model 48-365-54 (Frame size FA).

Table 12 Dimensions IP54 connected to Fig. 25.

Frame size	Emotron VFX model	Dimension in mm (in)							
		A	B	C	D	E	F	G (depth)	H
FA	365	1055 (41.5)	1395 (54.9)	300 (11.8)	38 (1.5)	32 (1,26)	345 (13.6)	365 (14.4)	157 (6.18)

2.3 Cabinet mounting

2.3.1 Cooling

If the variable speed drive is installed in a cabinet, the rate of airflow supplied by the cooling fans must be taken into consideration.

Frame	Emotron VFX Model	Flow rate m ³ /h (ft ³ /min)
B	003 - 018	75 (144)
C - C2	025 - 031	120 (171)
C - C2	036 - 058	170 (100)
C69	002 - 025	170 (100)
C2(69)	002 - 025	170 (100)
D - D2	060 - 105	170 (100)
D69	033 - 058	170 (100)
D2(69)	033 - 058	170 (100)
E - E2	090 - 175	510 (300)
F - F2	205 - 295	800 (471)
FA - FA2	365	1020 (600)
F69	090 - 200	800 (471)
G	300 - 375	1020 (600)
H	430 - 500	1600 (942)
H69	250 - 400	1600 (942)
I	600 - 750	2400 (1413)
I69	430 - 595	2400 (1413)
J	860 - 1K0	3200 (1883)
J69	650 - 800	3200 (1883)
KA	1K15 - 1K25	4000 (2354)
KA69	905 - 995	4000 (2354)
K	1K35 - 1K5	4800 (2825)
K69	1K2	4800 (2825)
L	1K75	5600 (3296)
L69	1K4	5600 (3296)
M	2K0	6400 (3767)
M69	1K6	6400 (3767)
N	2K25	7200 (4238)
N69	1K8	7200 (4238)
O	2K5	8000 (4709)
O69	2K0	8000 (4709)
P69	2K2	8800 (5179)
Q69	2K4	9600 (5650)
R69	2K6	10400 (6121)
S69	2K8	11200 (6592)
T69	3K0	12000 (7063)

NOTE: For the models 48-860/69-650 to 69-3K0 the mentioned amount of air flow should be divided equally over the cabinets.

2.3.2 Recommended free space in front of cabinet

All cabinet mounted AC drives are designed in modules, so called PEBBs. These PEBBs can be folded out to be replaced. To be able to remove a PEBB in the future, we recommend 1.30 meter (39.4 in) free space in front of the cabinet, see Fig. 28.



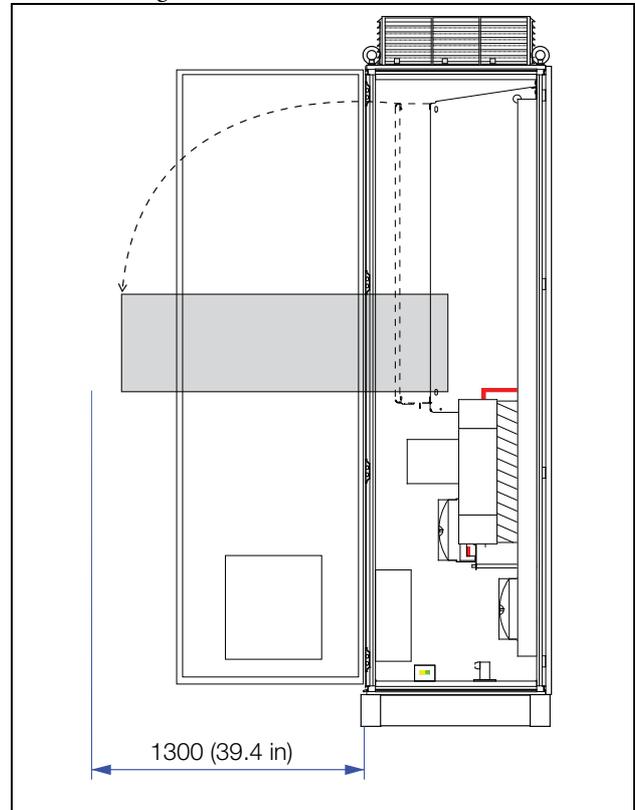


Fig. 28 Recommended free space in front of the cabinet mounted AC drive.


2.3.3 Mounting schemes, cabinets

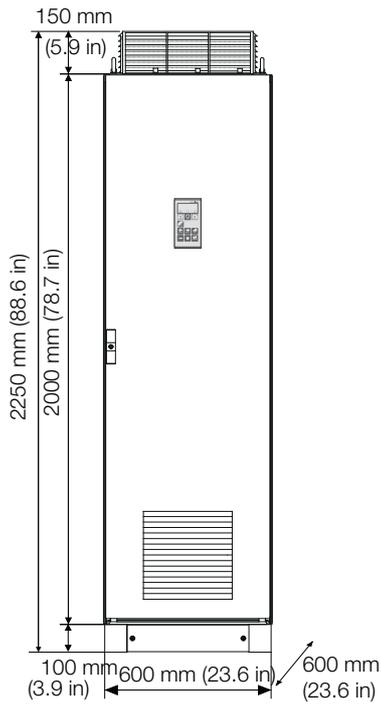


Emotron VFX48: Model 300 to 500 (Frame sizes G and H)
Emotron VFX69: Model 250 to 400 (Frame size H69)

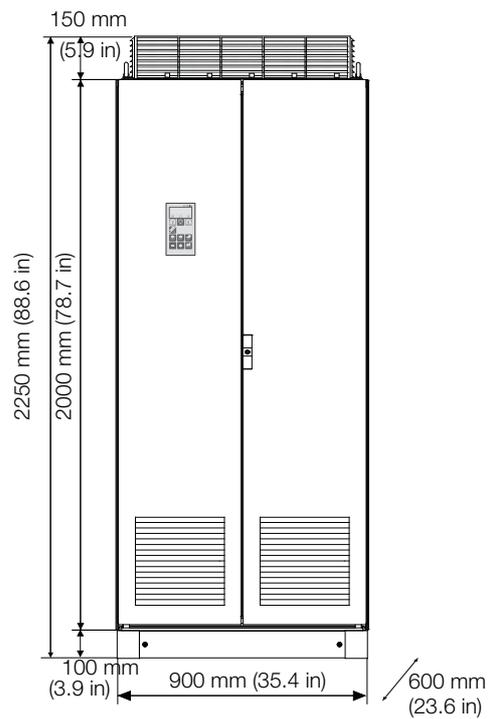


Emotron VFX48: Model 600 to 750 (Frame size I)
Emotron VFX69: Model 430 to 595 (Frame size I69)

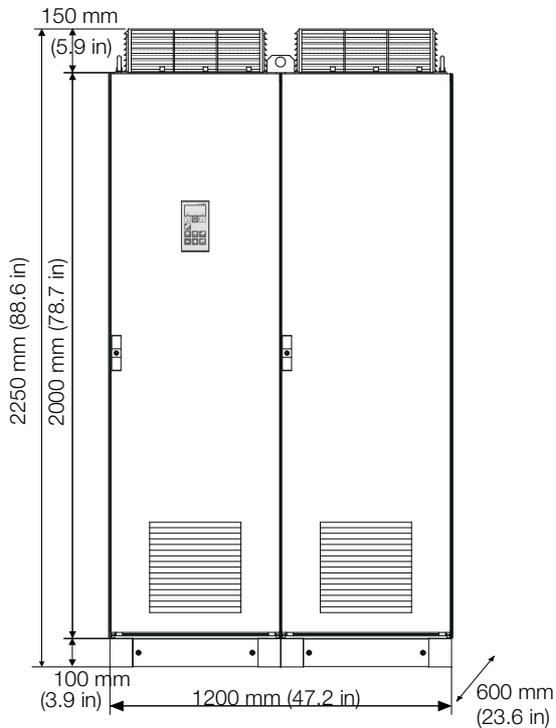


Emotron VFX48: Model 860 to 1K0 (Frame size J)
Emotron VFX69: Model 650 to 800 (Frame size J69)

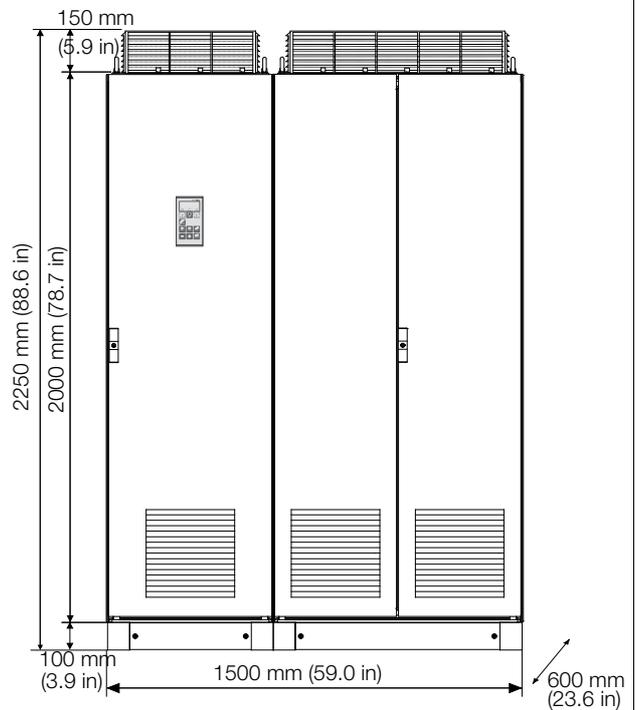


Emotron VFX48: Model 1K15 to 1K25 (Frame size KA)
Emotron VFX69: Model 905 to 995 (Frame size KA69)

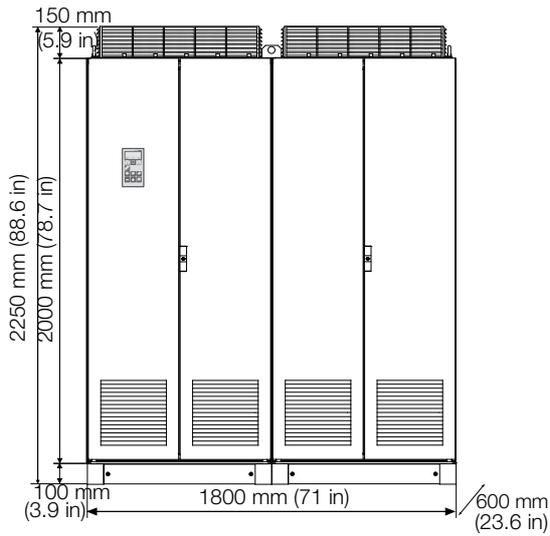


Emotron VFX48: Model 1K35 to 1K5 (Frame size K)
 Emotron VFX69: Model 1K2 (Frame size K69)

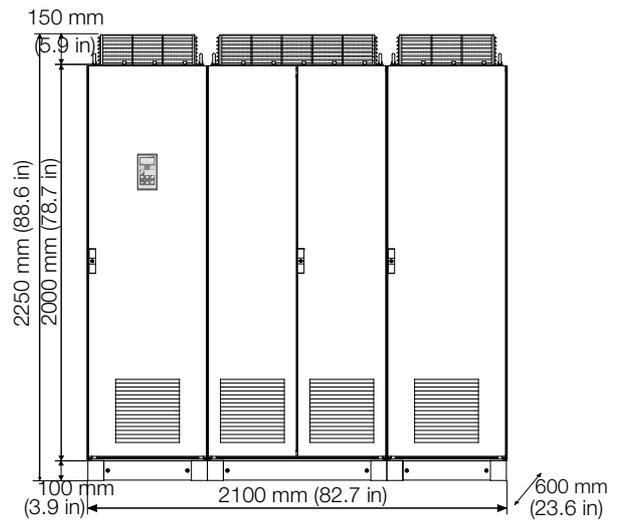


Emotron VFX48: Model 1K75 (Frame size L)
 Emotron VFX69: Model 1K4 (Frame size L69)

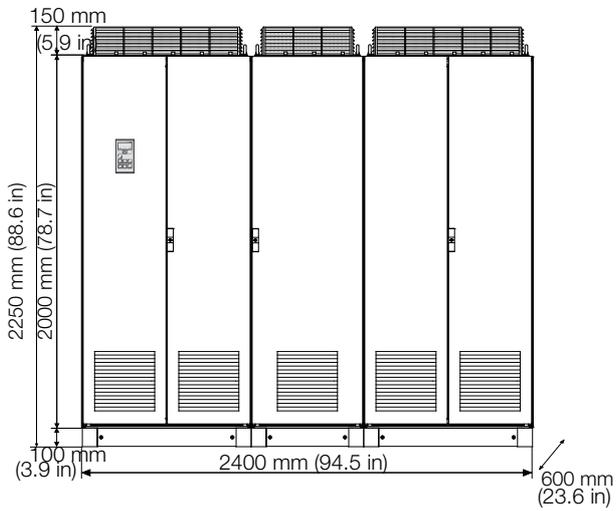

Emotron VFX48: Model 2K0 (Frame size M)
 Emotron VFX69: Model 1K6 (Frame size M69)

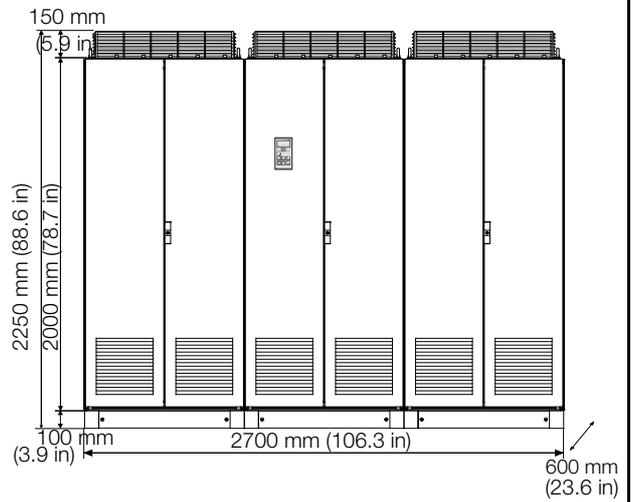

Emotron VFX48: Model 2K25 (Frame size N)
 Emotron VFX69: Model 1K8 (Frame size N69)

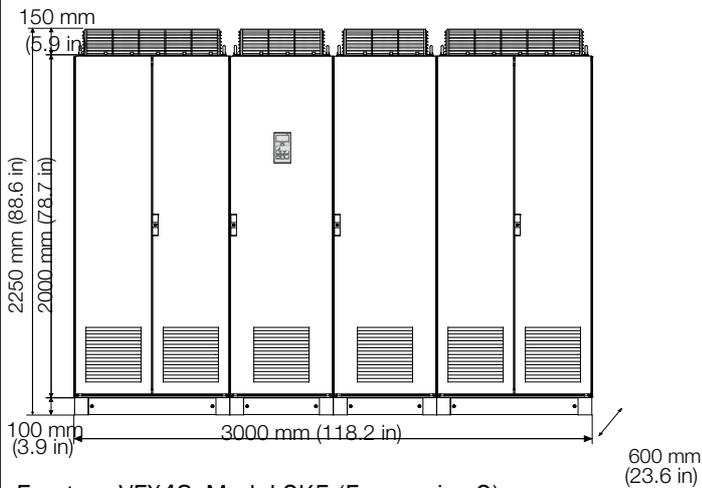

Emotron VFX48: Model 2K5 (Frame size O)
 Emotron VFX69: Model 2K0 (Frame size O69)

3. Installation

The description of installation in this chapter complies with the EMC standards and the Machine Directive.

Select cable type and screening according to the EMC requirements valid for the environment where the AC drive is installed.

3.1 Before installation

Read the following checklist and prepare for your application before installation.

- Local or remote control.
- Long motor cables (>100m (> 330 ft)), refer to section Long motor cables page 31.
- Motors in parallel, refer to menu Drive Mode [213], page 92.
- Functions used.
- Suitable AC drive size in proportion to the motor/application.

If the AC drive is temporarily stored before being connected, please check the technical data for environmental conditions. If the AC drive is moved from a cold storage room to the room where it is to be installed, condensation can form on it. Allow the AC drive to become fully acclimatised and wait until any visible condensation has evaporated before connecting the mains voltage.

3.1.1 Remove/open front cover

Frame sizes B - FA (IP54)

Remove/open the front cover to access the cable connections and terminals. On Frame size B and C loosen the four screws and remove the cover. On Frame size D and up unlock the hinged cover with the key and open it. On Frame size FA loosen the three screws on the hinged cover and open it.

Frame size C2 - F2 and FA2 (IP20/21)

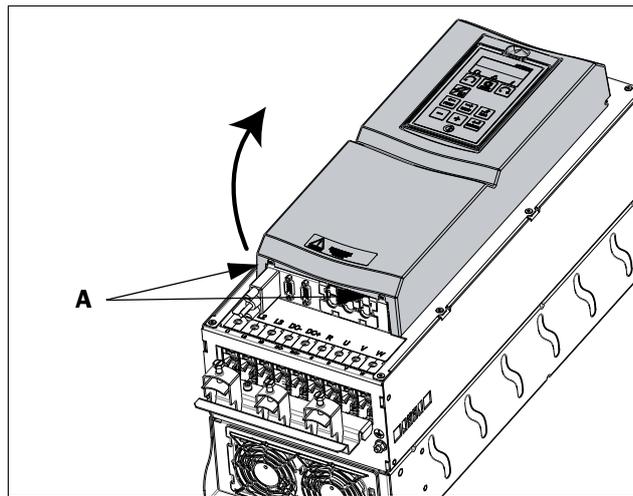


Fig. 29 Remove the front cover on frame size C2 - F2 and FA2 (principle drawing).

To be able to access all cable connections and terminals, first open and remove the front cover in following order.

- Loosen the two screws A (see Fig. 29) at the bottom of the cover a couple of turns (you do not have to remove the screws).
- Swing out the lower part of the cover a bit and remove the cover downwards. Be careful, don't swing out the cover too much as this could damage the "lips" at the upper hinges.
Now it is easy to access all terminals.

3.1.2 Remove/open the lower front cover on Frame size E2, F2 and FA2 (IP20/21)

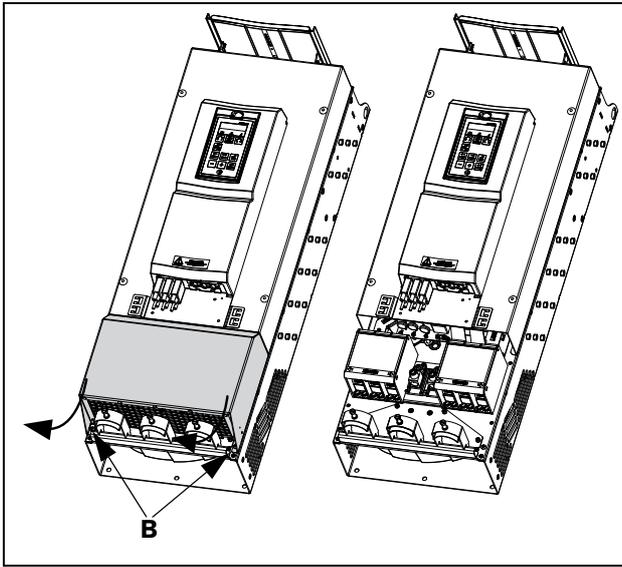


Fig. 30 Loosen the two screws and remove the lower cover (principle drawing)

In order to access the mains, motor, DC+/DC- and brake terminals, remove the lower cover in following order

- Loosen the two screws B (see Fig. 30).
- Pull down the cover a bit and lift it away.

3.2 Cable connections for small and medium frame sizes

IP54 - VFX48/52-003 to 074 (Frame sizes B, C and D)

IP54-VFX69-002 to 058 (Frame sizes C69 and D69)

IP20/21 - VFX48-025 to 365 (Frame sizes C2, D2, E2, F2 and FA2)

IP20/21 - VFX69-002 to 058 (Frame sizes C2(69) and D2(69))

3.2.1 Mains cables

Dimension the mains and motor cables according to local regulations. The cable must be able to carry the AC drive load current.

Recommendations for selecting mains cables

- To fulfil EMC purposes it is not necessary to use screened mains cables.
- Use heat-resistant cables, +75 °C (167 °F) or higher.
- Dimension the cables and fuses in accordance with local regulations and the nominal input current of the drive See table 65, page 248.
- PE conductor cross-sectional area shall for phase cable size < 16 mm² (6 AWG) be >10 mm² Cu (16 mm² Al) or a second PE conductor with same area as original PE conductor, for cable size above 16mm² (6 AWG) but smaller or equal to 35mm² (2 AWG) the PE conductor cross-sectional area shall be at least 16mm² (6 AWG). For cables >35mm² (>2 AWG) the PE conductor cross-sectional area should be at least 50% of the used phase conductor.
When the PE conductor in the used cable type is not in accordance with the above mentioned cross-sectional area requirements, a separate PE conductor should be used to establish this.
- The litz ground connection see fig. 42, is only necessary if the mounting plate is painted. All the AC drives have an unpainted back side and are therefore suitable for mounting on an unpainted mounting plate.

Connect the mains cables according to fig. 31 to 39. The AC drive has as standard a built-in RFI mains filter that complies with category C3 which suits the Second Environment standard.

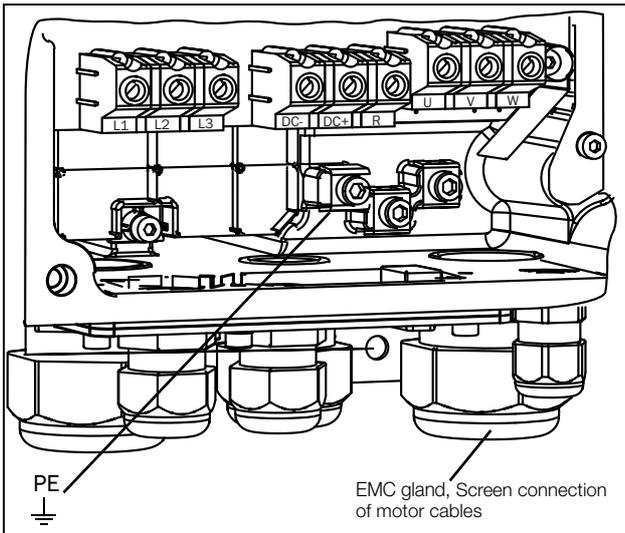


Fig. 31 Mains and motor connections, model 003-018, frame size B.

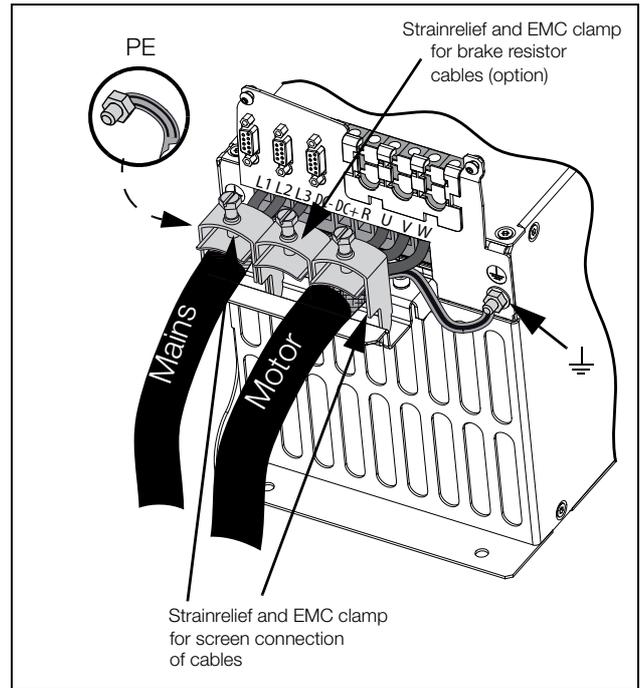


Fig. 34 Mains and motor connections model 48-025 to 48-058, frame size C2 and model 69-002 to 69-025 frame size C2(69).

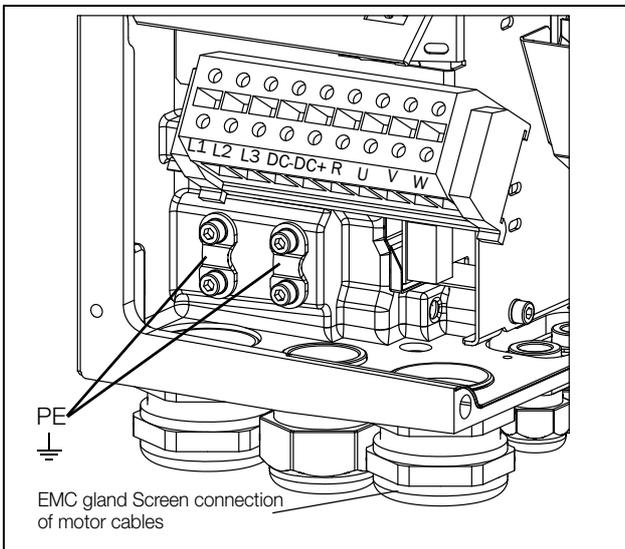


Fig. 32 Mains and motor connections, model 026-046, frame size C.

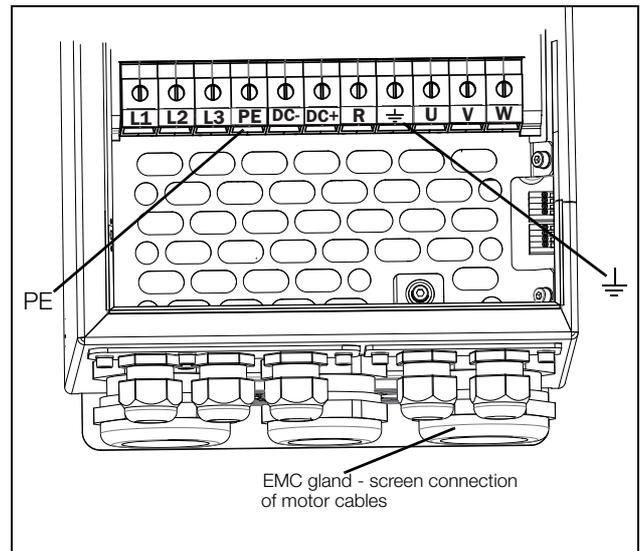


Fig. 35 Mains and motor connection, model 061 - 074, frame size D and model 69-033 to 69-058 frame size D69.

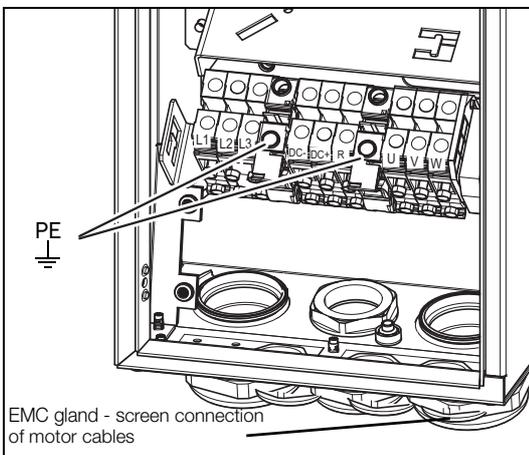


Fig. 33 Mains and motor connections, model 002-025, frame size C69.

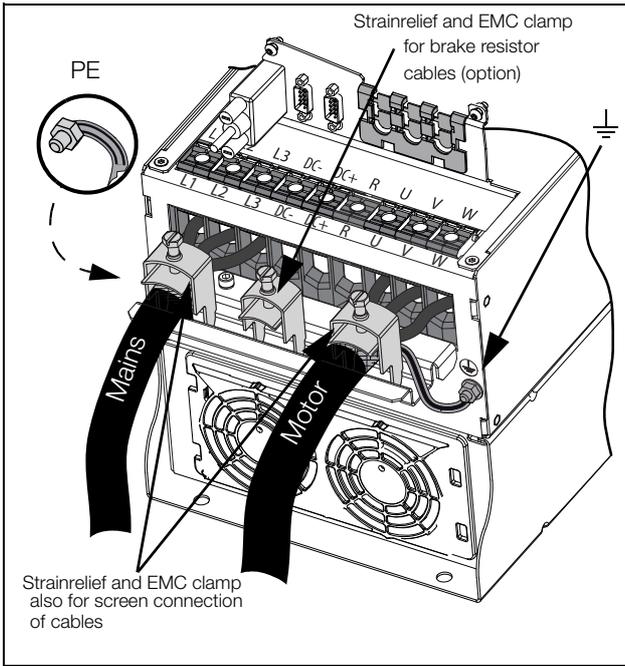


Fig. 36 Mains and motor connections model 48-060 to 48-105, frame size D2 and model 69-033 to 69-058 frame size D2(69).

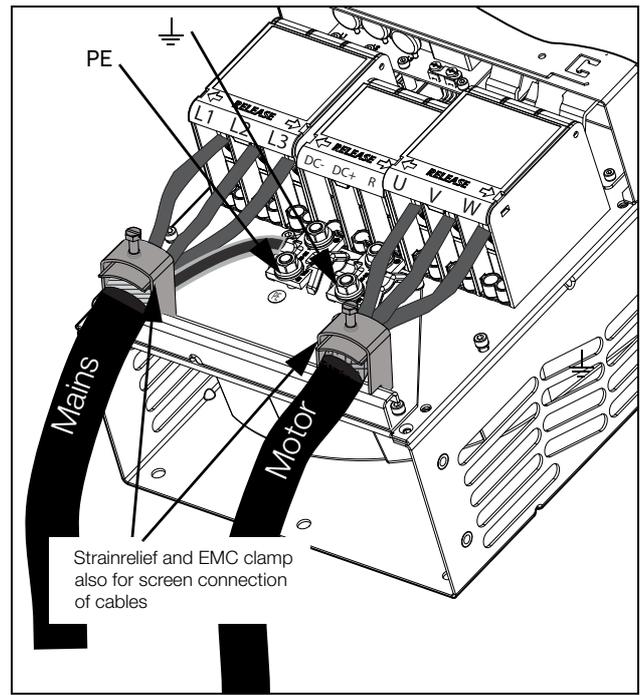


Fig. 38 Mains and motor connections model 48-142 to 48-293 (frame sizes E2 and F2) with the optional terminals for DC-, DC+ and Brake (principle drawing)

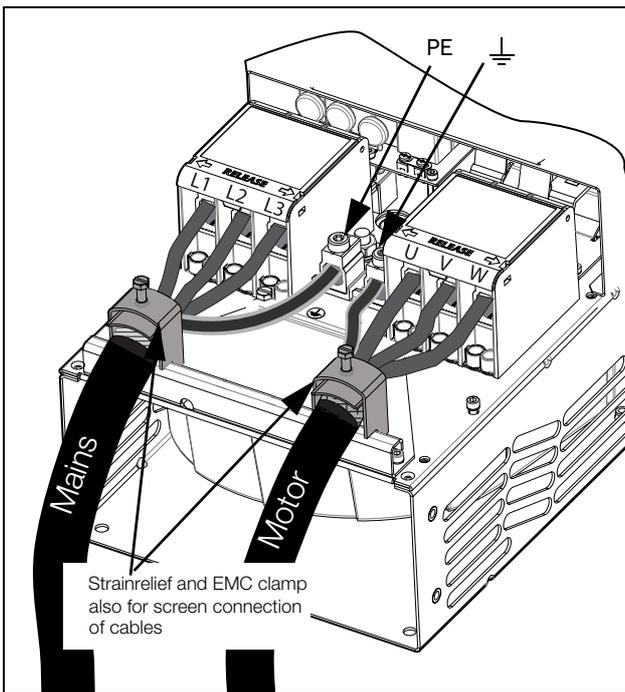


Fig. 37 Mains and motor connections model 48-142 to 48-293 (frame sizes E2 and F2) (principle drawing).

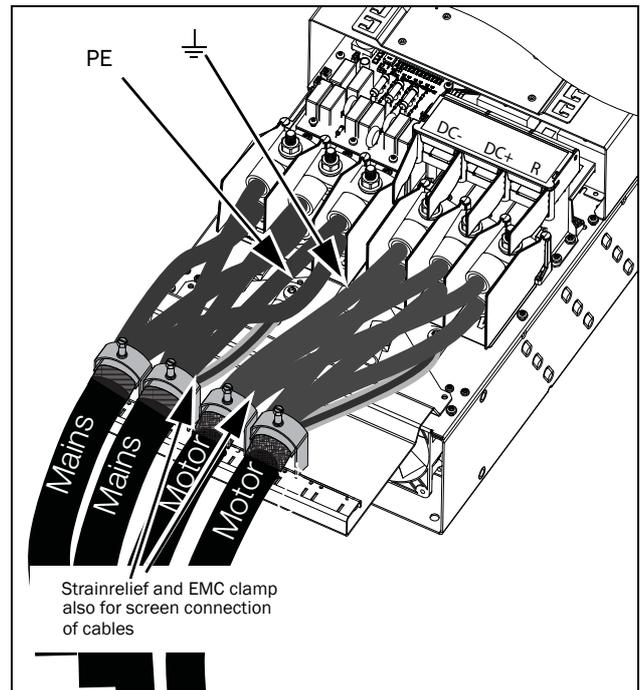


Fig. 39 Mains and motor connections model 48-365-20 (frame size FA2) with the optional terminals for DC-, DC+ and Brake (principle drawing)

Table 13 Mains and motor connections

L1,L2,L3 PE	Mains supply, 3 -phase Safety earth (protected earth)
\perp U, V, W	Motor earth Motor output, 3-phase
DC-,DC+,R	Brake resistor, DC-link connections (optional)

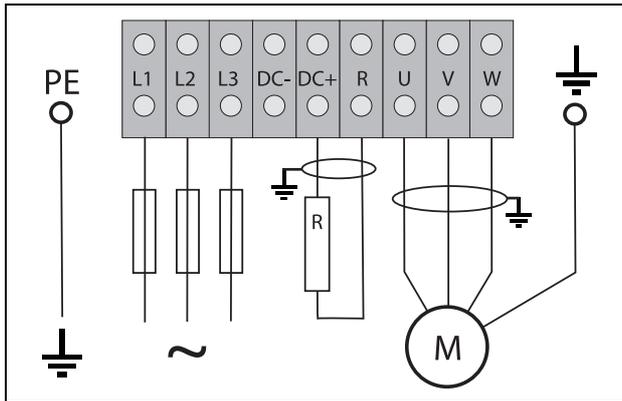


Fig. 40 Wiring example showing Protective earth, Motor earth and Brake Resistor connection

NOTE: The Brake and DC-link Terminals are only fitted if the DC+/DC- option or Brake Chopper Option is built-in.



WARNING!
The Brake Resistor must be connected between terminals DC+ and R.



WARNING!
In order to work safely, the mains earth must be connected to PE and the motor earth to \perp .

3.2.2 Motor cables

To comply with the EMC emission standards the AC drive is provided with a RFI mains filter. The motor cables must also be screened and connected on both sides. In this way a so-called “Faraday cage” is created around the AC drive, motor cables and motor. The RFI currents are now fed back to their source (the IGBTs) so the system stays within the emission levels.

Recommendations for selecting motor cables

- Use screened cables according to specification in table 14. Use symmetrical shielded cable; three phase conductors and a concentric or otherwise symmetrically constructed PE conductor, and a shield.
- PE conductor cross-sectional area shall for phase cable size $< 16 \text{ mm}^2$ (6 AWG) be $> 10 \text{ mm}^2$ Cu (16 mm^2 Al) or use a second PE conductor with same area as original PE conductor.
For cable size above 16 mm^2 (6 AWG) but smaller or equal to 35 mm^2 (2 AWG) the PE conductor cross-sectional area shall be at least 16 mm^2 (6 AWG).
For cables $> 35 \text{ mm}^2$ (2 AWG) the PE conductor cross-sectional area should be at least 50% of the used phase conductor.
- When the PE conductor in the used cable type is not in accordance with the above mentioned cross-sectional area requirements, a separate PE conductor should be used to establish this.
- Use heat-resistant cables, $+75 \text{ }^\circ\text{C}$ ($167 \text{ }^\circ\text{F}$) or higher.
- Dimension the cables in accordance with the rated current of the motor.
- Keep the motor cable between AC drive and motor as short as possible.
- The screening must be connected with a large contact surface of preferable 360° and always at both ends, to the motor housing and the AC drive housing. When painted mounting plates are used, do not be afraid to scrape away the paint to obtain as large contact surface as possible at all mounting points for items such as saddles and the bare cable screening. Relying just on the connection made by the screw thread is not sufficient.

NOTE: It is important that the motor housing has the same earth potential as the other parts of the machine.

- The litz ground connection, see fig. 42, is only necessary if the mounting plate is painted. All the AC drives have an unpainted back side and are therefore suitable for mounting on an unpainted mounting plate.

Connect the motor cables according to U - U, V - V and W - W, see Fig. 31, to Fig. 39.

NOTE: The terminals DC-, DC+ and R are options.

Switches between the motor and the AC drive

If the motor cables are to be interrupted by maintenance switches, output coils, etc., it is necessary that the screening is continued by using metal housing, metal mounting plates, etc. as shown in the Fig. 42.

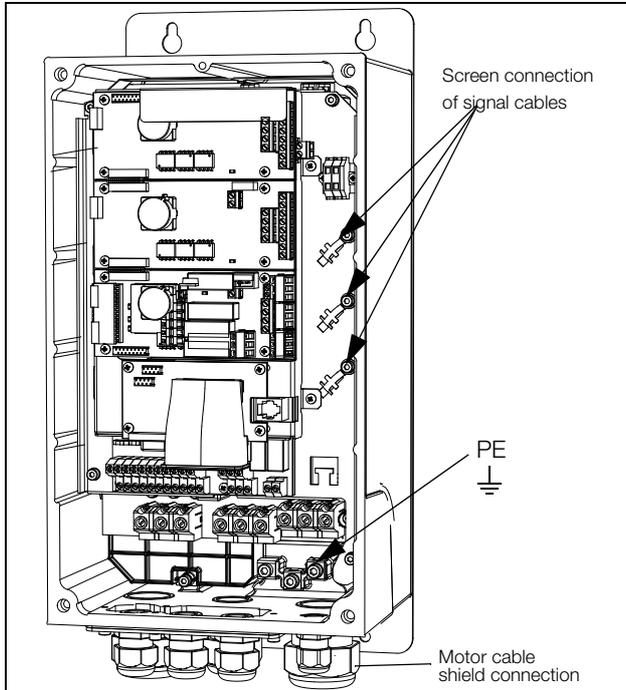


Fig. 41 Screen connection of cables.

Pay special attention to the following points:

- If paint must be removed, steps must be taken to prevent subsequent corrosion. Repaint after making connections!
- The fastening of the whole AC drive housing must be electrically connected with the mounting plate over an area which is as large as possible. For this purpose the removal of paint is necessary. An alternative method is to connect the AC drive housing to the mounting plate with as short a length of litz wire as possible.
- Try to avoid interruptions in the screening wherever possible.
- If the AC drive is mounted in a standard cabinet, the internal wiring must comply with the EMC standard. Fig. 42 shows an example of a AC drive built into a cabinet.

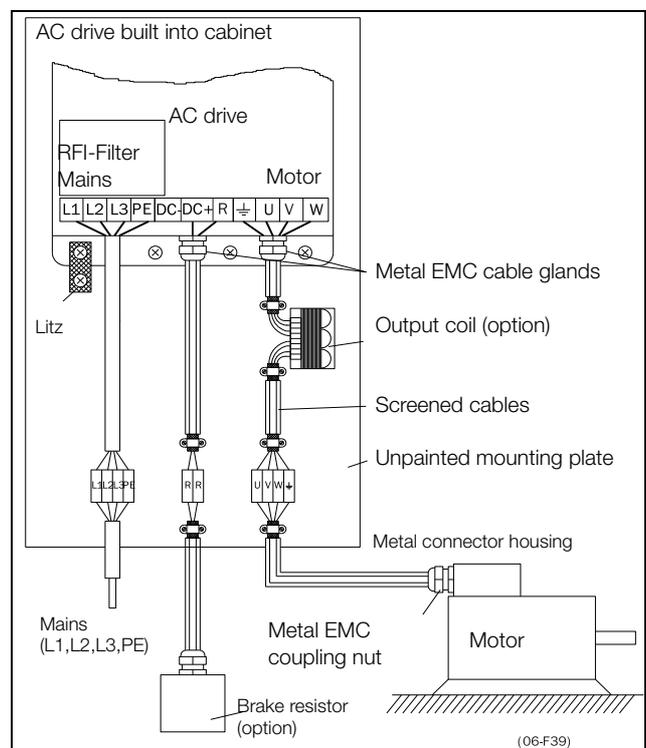


Fig. 42 AC drive in a cabinet on a mounting plate

Fig. 43 shows an example when there is no metal mounting plate used (e.g. if IP54 AC drives are used). It is important to keep the “circuit” closed, by using metal housing and cable glands.

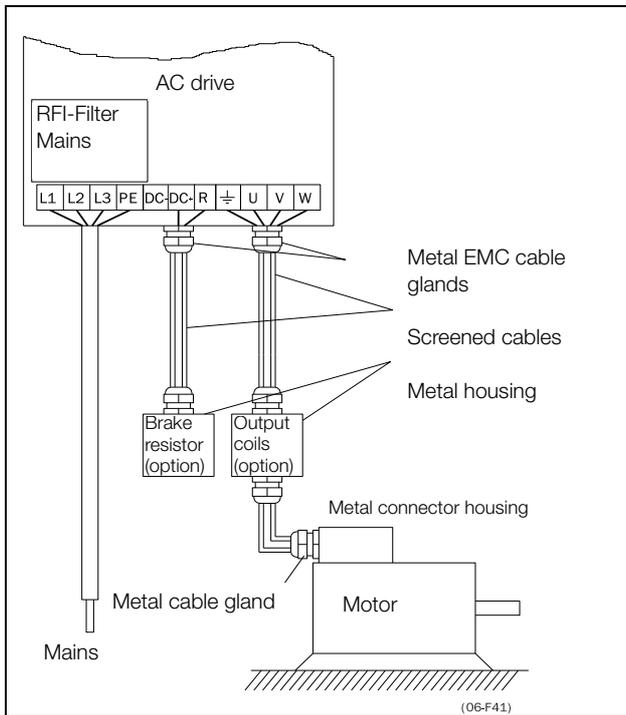


Fig. 43 AC drive as stand alone

Connect motor cables

1. Remove the cable interface plate from the AC drive housing.
2. Put the cables through the glands.
3. Strip the cable according to Table 15.
4. Connect the stripped cables to the respective motor terminal.
5. Put the cable interface plate in place and secure with the fixing screws.
6. Tighten the EMC gland with good electrical contact to the motor and brake chopper cable screens.

Placing of motor cables

- Separate the power cables (AC drive, soft starter, output coils, filters, magnetic switches, etc.) from the signal cables (relay control circuit, PLC, sensors, control PCBs, electronics, etc.).
- Keep the control cables as far from the power cables as possible.
- If power cables and control cables must be laid close to each other, try to ensure that they do not run parallel, at least for a distance of no more than 300 mm (12 in). If necessary, use a cable tray with a division or stack the cable trays.
- Ensure that where power cables and control cables cross, they do so at 90° to each other.

Long motor cables

If the connection to the motor is longer than 100 m (330 ft) (for powers below 7.5 kW (10.2 hp)) please contact CG Drives & Automation), it is possible that capacitive

current peaks will cause tripping at overcurrent. Using output coils can prevent this. Contact the supplier for appropriate coils.

Switching in motor cables

Switching in the motor connections is not advisable. In the event that it cannot be avoided (e.g. emergency or maintenance switches) only switch if the current is zero. If this is not done, the AC drive can trip as a result of current peaks.

3.3 Connection of motor and mains cables for larger frame sizes

IP54 - VFX 48-090 to 295 (Frame sizes E - F) and VFX 48-365-54 (Frame size FA) and VFX 69-082 to 200 (Frame size F69)
 IP20 - VFX 48-300 and up (Frame sizes G and up) and VFX 69-250 and up (Frame sizes H69 and up).

Emotron VFX48-090 to 48-295 Emotron VFX69-082 to 69-200

To simplify the connection of thick motor and mains cables to the AC drive, the cable interface plate can be removed.

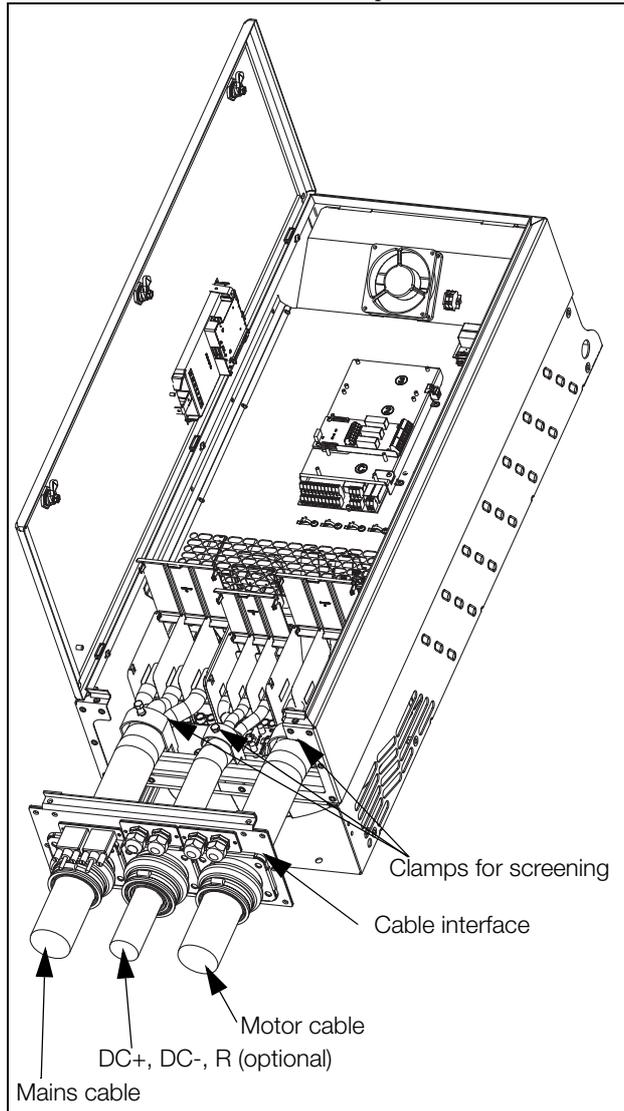


Fig. 44 Connecting motor and mains cables.

1. Remove the cable interface plate from the AC drive housing.
2. Put the cables through the glands.
3. Strip the cable according to Table 15.
4. Connect the stripped cables to the respective mains/ motor terminal.
5. Fix the clamps on appropriate place and tighten the cable in the clamp with good electrical contact to the cable screen.
6. Put the cable interface plate in place and secure with the fixing screws.

Emotron VFX48-365-54

To simplify the connection of thick motor and mains cables to the AC drive, the cable interface plate can be removed.

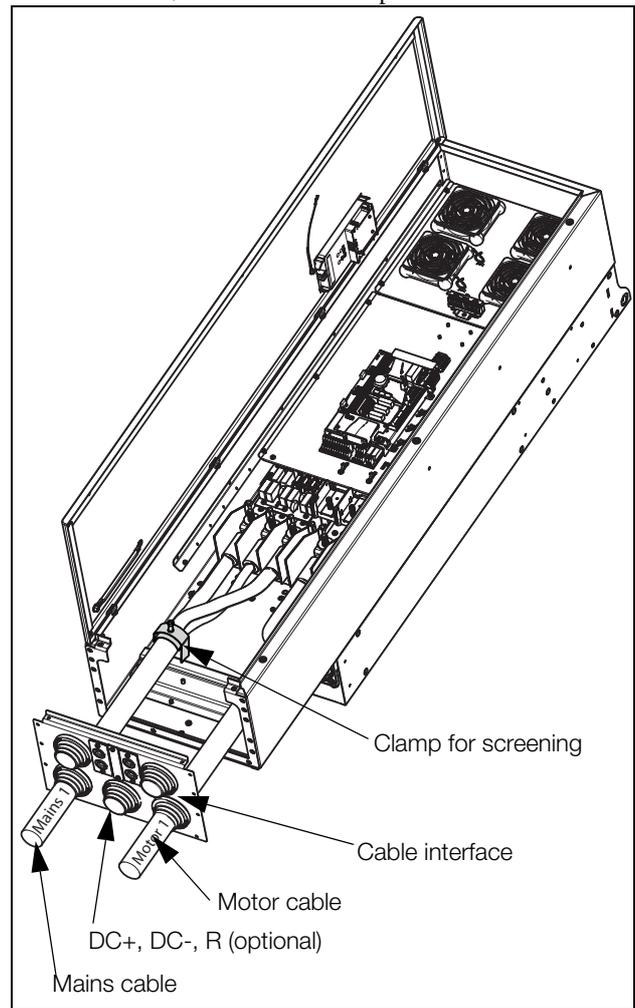


Fig. 45 Connection of lower mains and motor cables.

Start with the lower mains and motor cables (marked Mains 1 and Motor 1 in Fig. 46).

1. Remove the cable interface plate from the AC Drive housing.
2. Remove the upper mounting rail by loosen the four fastening screws.

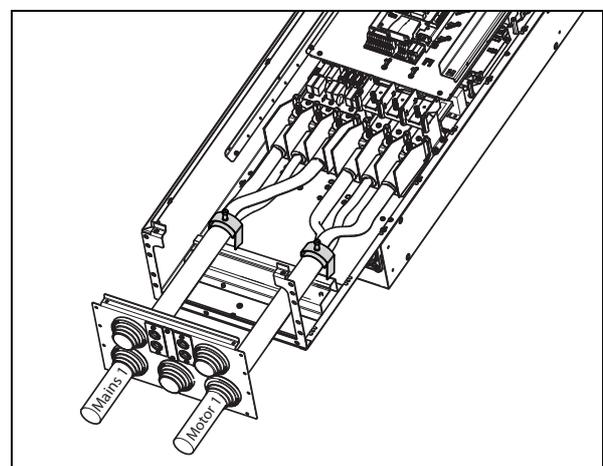


Fig. 46 Removed upper mounting rail.

- Put the two lower cables (Mains 1 and Motor 1 cables) through the lower glands in the cable interface plate.
- Strip the cables according to Table 17 and Fig. 55.
- Connect the cable lugs to the stripped cable ends.
- Connect the cable lugs to respective mains and motor terminal bolts.
- Fix the clamps on appropriate place and tighten the cable in the clamp with good electrical contact to the cable screen.

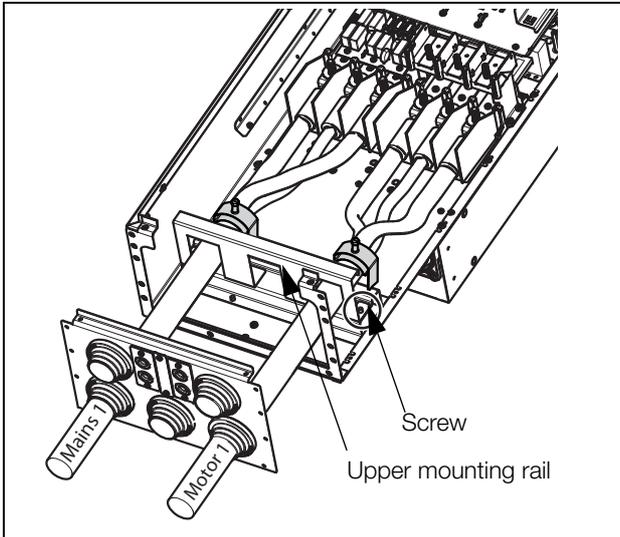


Fig. 47 Upper mounting rail mounted over the lower cables.

Continue with the upper mains and motor cables (marked Mains 2 and Motor 2 in Fig. 48).

- Mount the upper mounting rail over the lower, connected cables (Mains 1 and Motor 1 cables) at same place as before, with the four screws.
- Put the two upper cables (Mains 2 and Motor 2) through the glands in the cable interface plate.
- Strip the cables according to Table 17 and Fig. 55.
- Connect the cable lugs to the stripped cable ends.
- Connect the cable lugs to respective mains/motor terminal bolts.
- Fix the clamps on appropriate place and tighten the cable in the clamp with good electrical contact to the cable screen.
- Put the cable interface plate in place and secure with the fixing screws.

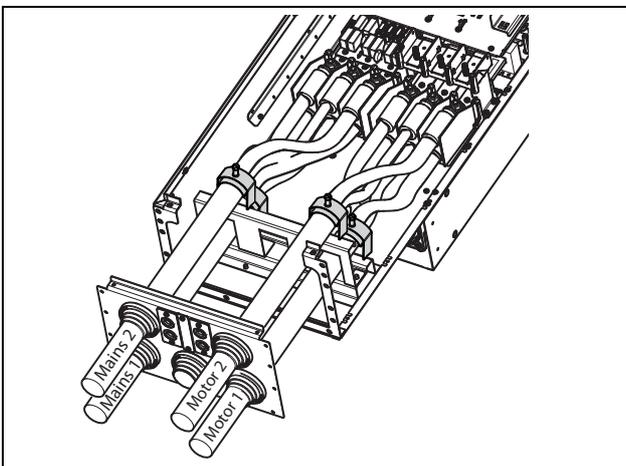


Fig. 48 All cables and cable clamps connected.

Emotron VFX48-090 mount extra ferrite core

Mount the ferrite core and its isolation sheet (included in the delivery) on the three motor phases U, V & W. The protective earth (PE) and the screen of the cable should be mounted outside the core see Fig. 49.



Fig. 49 Ferrite core mounted on the motor cables

The ferrite core is mounted on the motor cable to reduce disturbances and to fulfil the EMC standards. Since the core becomes very hot, the cables must be protected by a thermal isolation sheet that is attached on the core. The longer motor cables the hotter the core becomes.

NOTE: If the core is not mounted or mounted incorrect, the AC drive does not fulfil the EMC standards. If the protective isolation sheet is not mounted, the motor cable can be damaged from the hot core.

AC drive model 48-300 and 69-250 and up

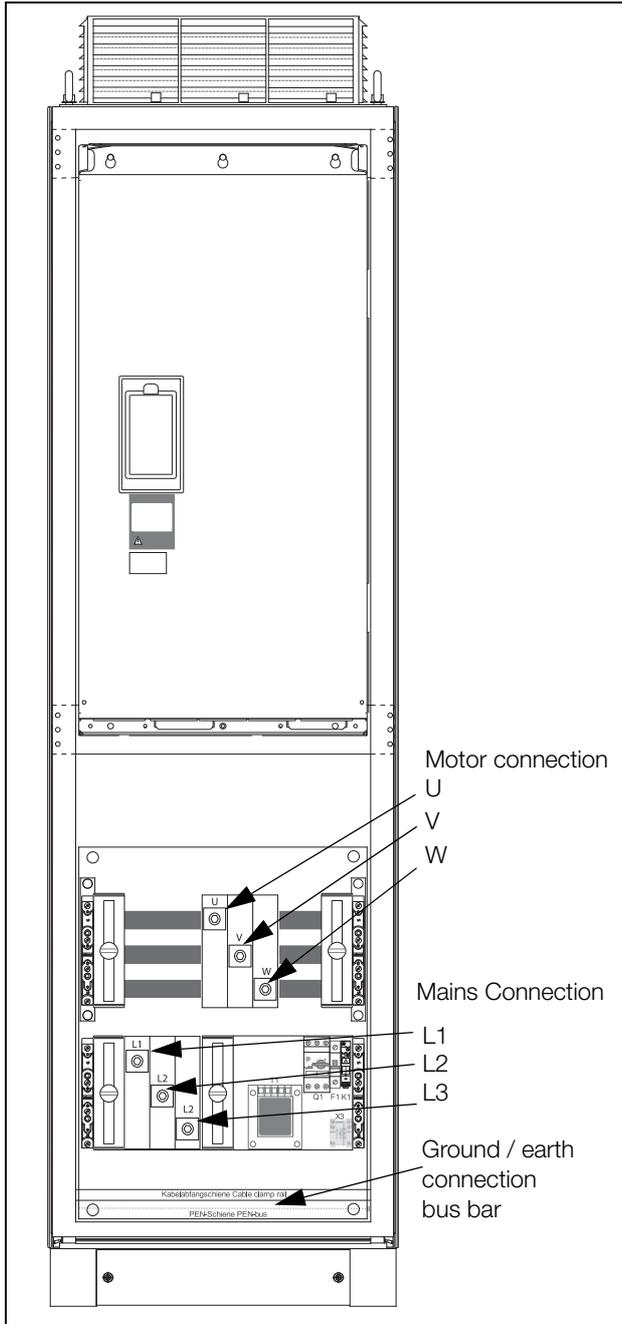


Fig. 50 Connect motor cables and mains cables to the terminals and earth/ground to the bus bar.

AC drive models 48-300 and 69-250 and up are supplied with power clamps for mains and motors. For connection of PE and earth there is a grounding bus bar.

For all type of wires to be connected the stripping length should be 32 mm (1.26 in).

3.3.1 Connection of mains and motor cables on IP20 modules

The Emotron IP 20 modules are delivered complete with factory mounted cables for mains and motor. The length of the cables are app. 1100 mm (43 in). The cables are marked L1, L2, L3 for mains connection and U, V, W for motor connection.

NOTE: The IP20 modules are connected to PE/ Ground via the mounting screws. Make sure that these will have good contact to the grounded mounting plate/ cabinet wall.

For detailed information about use of the IP20 modules, please contact CG Drives & Automation.

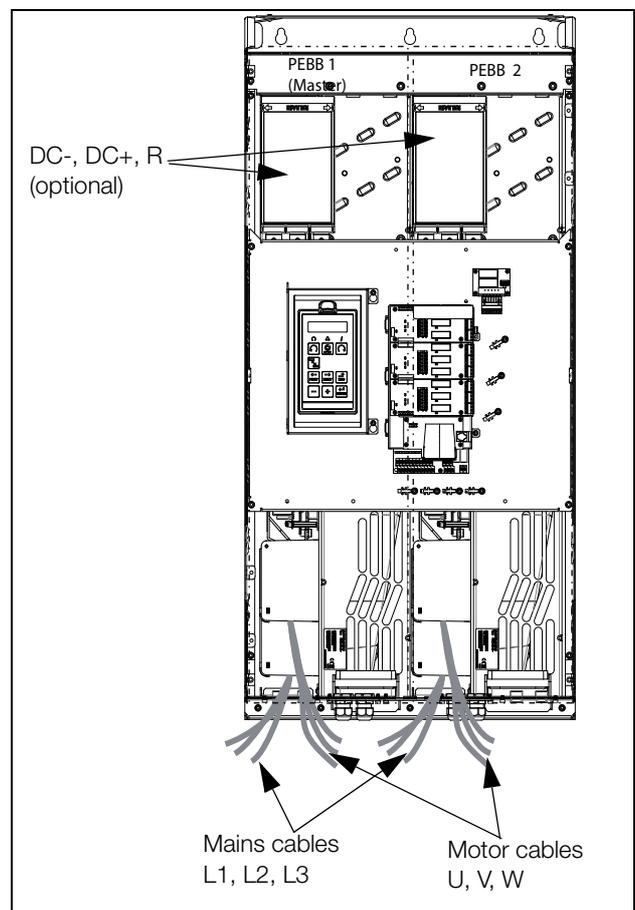


Fig. 51 IP20 module sizes G and H, with qty 2 x 3 mains cables and qty 2 x 3 motor cables.

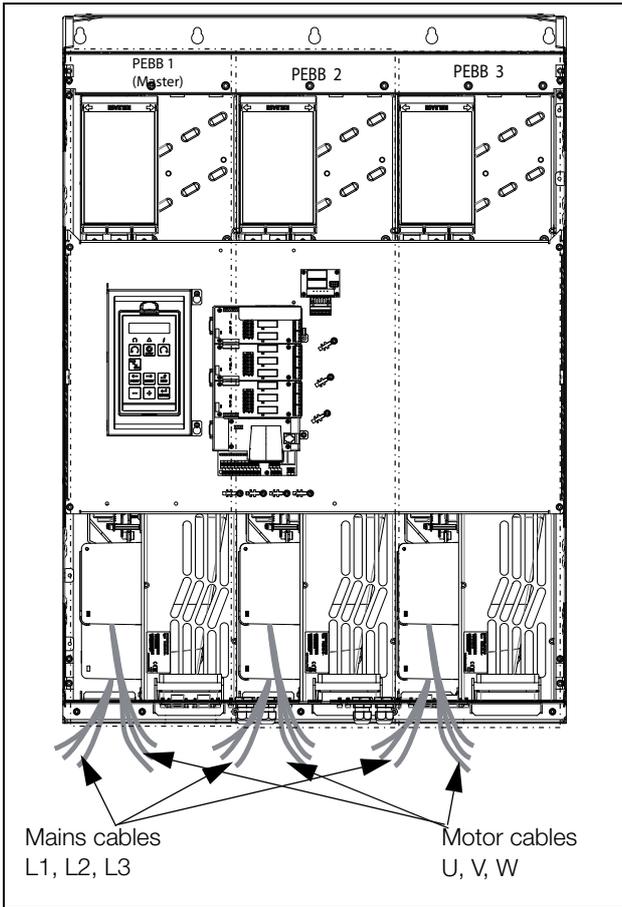


Fig. 52 IP20 module sizes III69 with qty 3 x 3 Mains cables and qty 3 x 3 motor cables.

3.4 Cable specifications

Table 14 Cable specifications

Cable	Cable specification
Mains	Power cable suitable for fixed installation for the voltage used.
Motor	Symmetrical three conductor cable with concentric protection (PE) wire or a four conductor cable with compact low-impedance concentric shield for the voltage used.
Control	Control cable with low-impedance shield, screened.

3.4.1 Stripping lengths

Fig. 53 indicates the recommended stripping lengths for motor and mains cables.

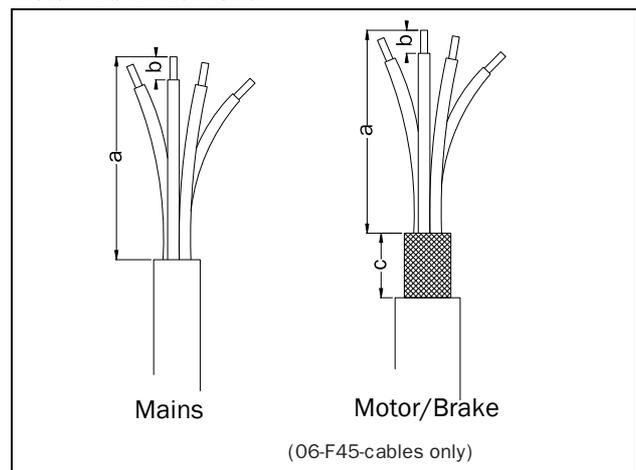


Fig. 53 Stripping lengths for cables

Table 15 Stripping lengths for mains, motor, brake and earth cables for frame sizes B to F

Model VFX	Frame size	Mains cable		Motor cable			Brake cable			Earth cable	
		a mm (in)	b mm (in)	a mm (in)	b mm (in)	c mm (in)	a mm (in)	b mm (in)	c mm (in)	a mm (in)	b mm (in)
##-003 – 018	B	90 (3.5)	10 (0.4)	90 (3.5)	10 (0.4)	20 (0.8)	90 (3.5)	10 (0.4)	20 (0.8)	90 (3.5)	10 (0.4)
##-026 – 046	C	150 (5.9)	14 (0.2)	150 (5.9)	14 (0.2)	20 (0.8)	150 (5.9)	14 (0.2)	20 (0.8)	150 (5.9)	14 (0.2)
69-002 – 025	C69										
69-002 – 025	C2(69)	65 (2.7)	18 (0.7)	65 (2.7)	18 (0.7)	36 (1.4)	65 (2.7)	18 (0.7)	36 (1.4)	65 (2.7)	M6 screw*
48-025 – 058	C2										
##-061 – 074	D	110 (4.3)	17 (0.7)	110 (4.3)	17 (0.7)	34 (1.4)	110 (4.3)	17 (0.7)	34 (1.4)	110 (4.3)	17 (0.7)
69-033 – 058	D69										
69-033 – 058	D2(69)	92 (3.6)	18 (0.7)	92 (3.6)	18 (0.7)	36 (1.4)	92 (3.6)	18 (0.7)	36 (1.4)	92 (3.6)	M6 screw*
48-060 – 105	D2										
##-090 – 175	E	173 (6.8)	25 (1)	173 (6.8)	25 (1)	41 (1.6)	173 (6.8)	25 (1)	41 (1.6)	173 (6.8)	25 (1) 40 (1.6)**
48-142 – 171	E2										
48-205 – 293	F2	178 (7)	32 (1.3)	178 (7)	32 (1.3)	46 (1.8)	178 (7)	25 (1)	46 (1.8)	178 (7)	32 (1.3) 40 (1.6)**
48-210 – 295	F										
69-082 – 200	F69										

* Cable lug.

** Valid when brake chopper electronics are built in

Fig. 54 indicates the distance from the cable clamp to the connection bolts for decision of stripping lengths for the cables.

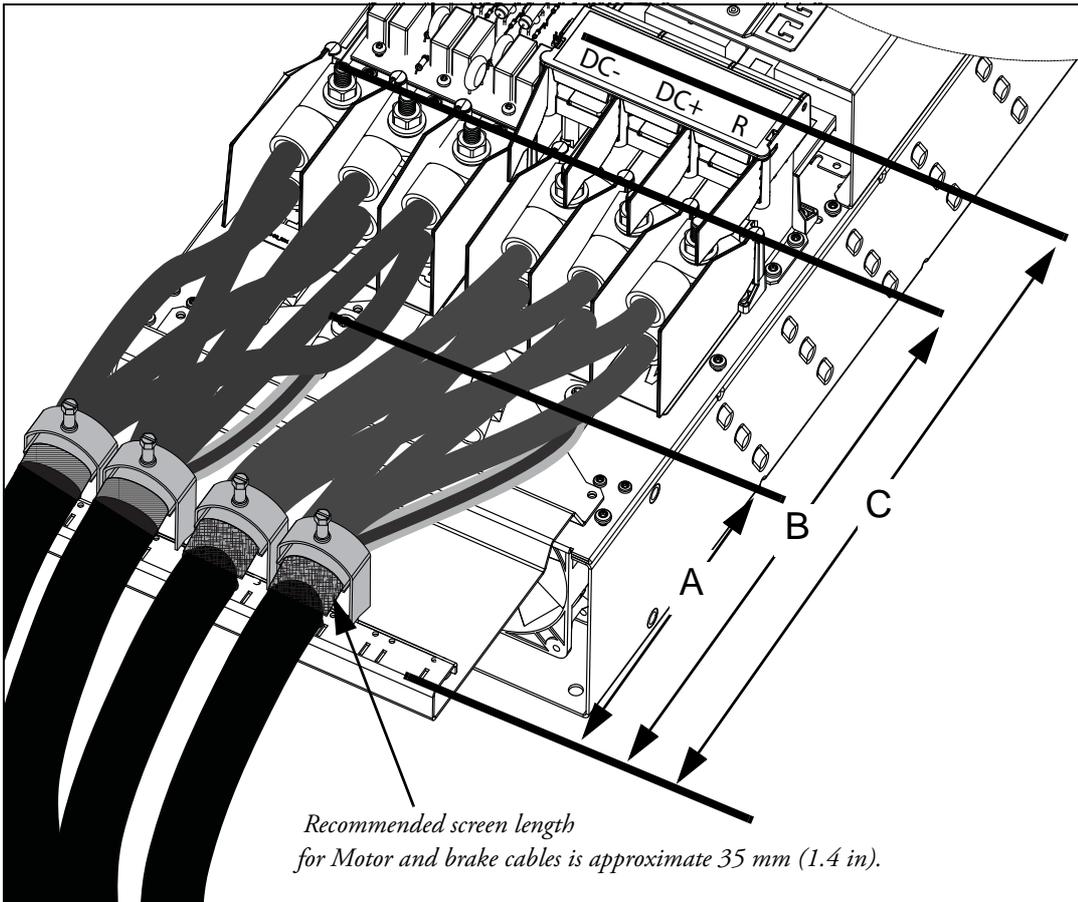


Fig. 54 Distances from the cable clamp to the connection bolts size FA2.

Table 16 Distances from the cable clamp to the connection bolts for mains, motor, brake and earth cables for frame size FA2.

Model VFX	Frame size	Mains cable		Motor cable		Brake cable		Earth cable	
		B mm (in)	Bolt dimension	B mm (in)	Bolt dimension	C mm (in)	Bolt dimension	A mm (in)	Bolt dimension
48-365-20	FA2	375 (14.8)	M10 bolt*	375 (14.8)	M10 bolt*	420 (16.5)	M8 bolt*	270 (10.6)	M8 bolt*

* Connect with cable lugs.

Fig. 55 indicates the distance from the cable clamp to the connection bolts for decision of stripping lengths for the cables.

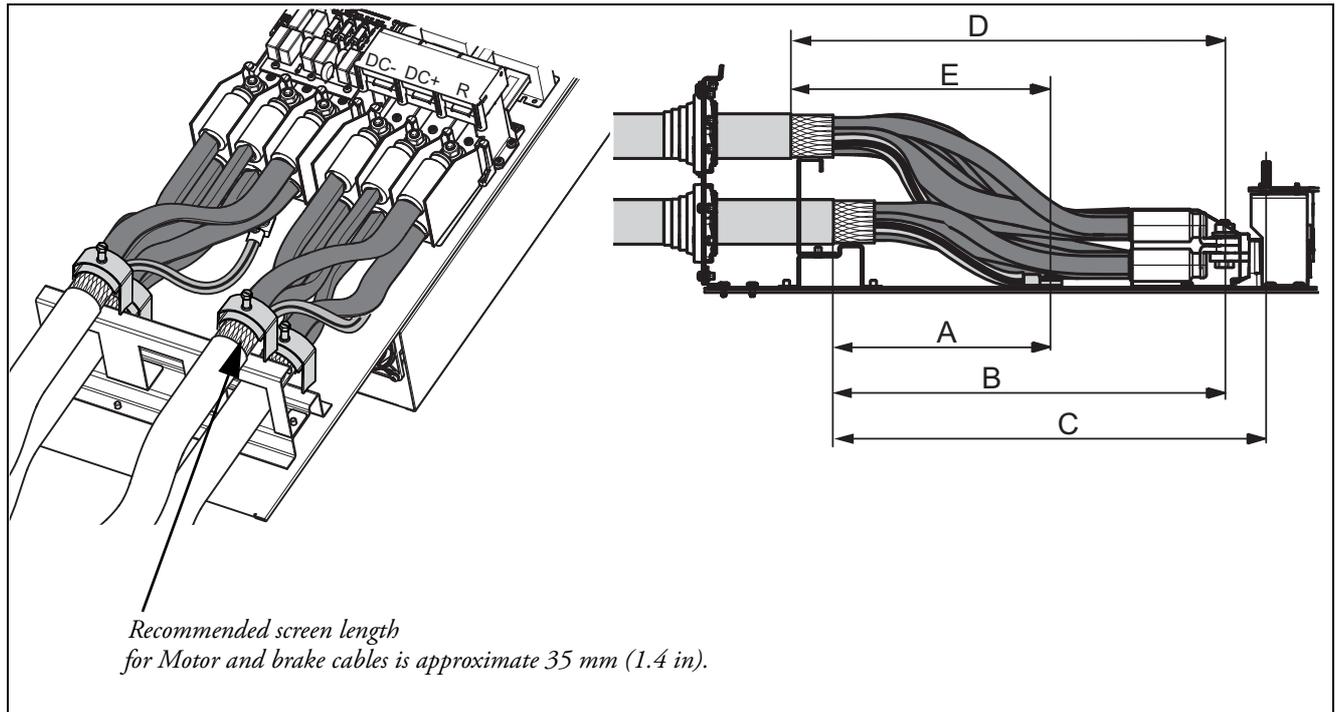


Fig. 55 Distances from the cable clamp to the connection bolts size FA.

Table 17 Distances from the cable clamp to the connection bolts for mains, motor, brake and earth cables for frame size FA.

Model VFX	Frame size	Mains cable 1		Motor cable 1		Brake cable		Earth cable	
		B mm (in)	Bolt dimension	B mm (in)	Bolt dimension	C mm (in)	Bolt dimension	A mm (in)	Bolt dimension
48-365-54	FA	360 (14.2)	M10 bolt*	360 (14.2)	M10 bolt*	400 (15.7)	M8 bolt*	270 (10.6)	M8 bolt*

Model VFX	Frame size	Mains cable 2		Motor cable 2		Earth cable	
		D mm (in)	Bolt dimension	D mm (in)	Bolt dimension	E mm (in)	Bolt dimension
48-365-54	FA	400 (15.7)	M10 bolt*	400 (15.7)	M10 bolt*	320 (12.6)	M8 bolt*

* Connect with cable lugs.

3.4.2 Fuse data

Please refer to the chapter Technical data, section 14.6, page 248.

3.4.3 Cable connection data for mains, motor and PE cables according to IEC ratings

NOTE: The dimensions of the power terminals used in the cabinet drive models 300 to 3K0 can differ depending on customer specification.

Table 18 Cable connector range and tightening torque for Emotron VFX48 and VFX52, according to IEC ratings.

Model VFX	Frame size	Cable cross section connector range						Cable type		
		Mains and motor		Brake		PE				
		Cable area mm ²	Tightening torque Nm	Cable area mm ²	Tightening torque Nm	Cable area mm ²	Tightening torque Nm			
##-003-54	B	0.5 - 10	1.2-1.4	0.5 - 10	1.2-1.4	1.5 - 16	2.6	Copper (Cu) / Aluminum (Al) 75°C		
##-004-54										
##-006-54										
##-008-54										
##-010-54										
##-013-54										
##-018-54										
48-025-20	C2	4 - 25	2	4 - 25	2	4 - 25 *	4.3			
48-030-20										
48-036-20										
48-045-20										
48-058-20										
##-026-54	C	2.5-16 stranded 2.5-25 solid	1.2-1.4	2.5-16 stranded 2.5-25 solid	1.2-1.4	6-16 stranded 6-25 solid	1.2-1.4			
##-031-54										
##-037-54										
##-046-54										
48-060-20	D2	0.75 -50	3.3	0.75 -50	3.3	10 - 70*	4.3			
48-072-20	D2	0.75 -50	3.3	0.75 -50	3.3	10 - 70*	4.3			
48-088-20										
48-105-20										
##-061-54	D	6-35 stranded 6-50 solid	2.8-3	6-35 stranded 6-50 solid	2.8-3	16-35 stranded 16-50 solid	2.8-3			
##-074-54										
48-142-20	E2	16- 150	31 (for 16-34 mm ²) 42 (for 35-150 mm ²)	16 - 120	31 (for 16-34 mm ²)	16- 150	31 (for 16-34 mm ²)			
48-171-20										
48-090-54	E				16 - 185 **	42 (for 35-120 mm ²)	42 (for 35-150 mm ²)		16 - 185 **	10 **
48-109-54										
48-146-54										
48-175-54										

Table 18 Cable connector range and tightening torque for Emotron VFX48 and VFX52, according to IEC ratings.

Model VFX	Frame size	Cable cross section connector range						Cable type	
		Mains and motor		Brake		PE			
		Cable area mm ²	Tightening torque Nm	Cable area mm ²	Tightening torque Nm	Cable area mm ²	Tightening torque Nm		
48-205-20	F2	25 - 240	31 (for 25-34 mm ²)	16 - 150	31 (for 16-34 mm ²)	25 - 240	31 (for 25-34 mm ²)	Copper (Cu) / Aluminum (Al) 75°C	
48-244-20			42 (for 35-152 mm ²)				42 (for 35-152 mm ²)		
48-293-20			56 (for 153-240 mm ²)				56 (for 153-240 mm ²)		
48-210-54	F	25 - 240	56 (for 153-240 mm ²)	16 - 150	42 (for 35-150 mm ²)	16 - 185 **	10 **	***	
48-228-54									
48-250-54									
48-295-54									
48-365-20	FA2	M10 connection	47	M8 connection	24	M8 connection	24	Copper (Cu) / Aluminum (Al) 75°C	
48-365-54	FA								
48-300-IP****	G	(2x) 25 - 240	31 (for 25-34 mm ²)	(2x) 25 - 240	31 (for 25-34 mm ²)	42 (for 35-152 mm ²)	56 (for 153-240 mm ²)	PE/Earth via mounting screws/ mounting frame. In order to secure proper earthing, always use all mounting screws and tighten them thoroughly.	Copper (Cu) / Aluminum (Al) 75°C
48-375-IP									
48-430-IP	H	(2x) 25 - 240	31 (for 25-34 mm ²)	(2x) 25 - 240	31 (for 25-34 mm ²)	42 (for 35-152 mm ²)	56 (for 153-240 mm ²)	PE/Earth via mounting screws/ mounting frame. In order to secure proper earthing, always use all mounting screws and tighten them thoroughly.	Copper (Cu) / Aluminum (Al) 75°C
48-500-IP									
48-600-IP	I	(3x) 25 - 240	31 (for 25-34 mm ²)	(3x) 25 - 240	31 (for 25-34 mm ²)	42 (for 35-152 mm ²)	56 (for 153-240 mm ²)	PE/Earth via mounting screws/ mounting frame. In order to secure proper earthing, always use all mounting screws and tighten them thoroughly.	Copper (Cu) / Aluminum (Al) 75°C
48-650-IP									
48-720, 750-IP	J	(4x) 25 - 240	42 (for 35-152 mm ²)	(4x) 25 - 240	42 (for 35-152 mm ²)	56 (for 153-240 mm ²)	56 (for 153-240 mm ²)	PE/Earth via mounting screws/ mounting frame. In order to secure proper earthing, always use all mounting screws and tighten them thoroughly.	Copper (Cu) / Aluminum (Al) 75°C
48-860-IP									
48-900-IP	KA	(5x) 25 - 240	56 (for 153-240 mm ²)	(5x) 25 - 240	56 (for 153-240 mm ²)	56 (for 153-240 mm ²)	56 (for 153-240 mm ²)	PE/Earth via mounting screws/ mounting frame. In order to secure proper earthing, always use all mounting screws and tighten them thoroughly.	Copper (Cu) / Aluminum (Al) 75°C
48-1k0-IP									
48-1k15-IP	K	(6x) 25 - 240	56 (for 153-240 mm ²)	(6x) 25 - 240	56 (for 153-240 mm ²)	56 (for 153-240 mm ²)	56 (for 153-240 mm ²)	PE/Earth via mounting screws/ mounting frame. In order to secure proper earthing, always use all mounting screws and tighten them thoroughly.	Copper (Cu) / Aluminum (Al) 75°C
48-1k2-IP									
48-1k25-IP	L	(6x) 25 - 240	56 (for 153-240 mm ²)	(6x) 25 - 240	56 (for 153-240 mm ²)	56 (for 153-240 mm ²)	56 (for 153-240 mm ²)	PE/Earth via mounting screws/ mounting frame. In order to secure proper earthing, always use all mounting screws and tighten them thoroughly.	Copper (Cu) / Aluminum (Al) 75°C
48-1k35-IP									
48-1k5-IP	M	(7x) 25 - 240	56 (for 153-240 mm ²)	(7x) 25 - 240	56 (for 153-240 mm ²)	56 (for 153-240 mm ²)	56 (for 153-240 mm ²)	PE/Earth via mounting screws/ mounting frame. In order to secure proper earthing, always use all mounting screws and tighten them thoroughly.	Copper (Cu) / Aluminum (Al) 75°C
48-1k75-IP									
48-2k0-IP	N	(8x) 25 - 240	56 (for 153-240 mm ²)	(8x) 25 - 240	56 (for 153-240 mm ²)	56 (for 153-240 mm ²)	56 (for 153-240 mm ²)	PE/Earth via mounting screws/ mounting frame. In order to secure proper earthing, always use all mounting screws and tighten them thoroughly.	Copper (Cu) / Aluminum (Al) 75°C
48-2k25-IP									
48-2k5-IP	O	(10x) 25 - 240	56 (for 153-240 mm ²)	(10x) 25 - 240	56 (for 153-240 mm ²)	56 (for 153-240 mm ²)	56 (for 153-240 mm ²)	PE/Earth via mounting screws/ mounting frame. In order to secure proper earthing, always use all mounting screws and tighten them thoroughly.	Copper (Cu) / Aluminum (Al) 75°C

* With cable lug for M6 screw.

** Valid when brake chopper electronics are built in.

*** Use 90 °C Mains and motor cables if surrounding temperature is higher than 35 °C otherwise 75 °C cables.

**** IP 23 or IP 54 for cabinet drive.

Table 19 Cable connector range and tightening torque for Emotron VFX69, according to IEC ratings

Model VFX	Frame size	Cable cross section connector range						Cable type
		Mains and motor		Brake		PE		
		Cable area mm ²	Tightening torque Nm	Cable area mm ²	Tightening torque Nm	Cable area mm ²	Tightening torque Nm	
69-002-XX****	C69/ C2(69)	2.5 - 16 stranded 2.5 - 25 solid	1.2 - 1.4	2.5 - 16 stranded 2.5 - 25 solid	1.2 - 1.4	6 - 16 stranded 6 - 25 solid	1.2 - 1.4	Copper (Cu)/ Aluminum (Al) 75°C
69-003-XX								
69-004-XX								
69-006-XX								
69-008-XX								
69-010-XX								
69-013-XX								
69-018-XX								
69-021-XX								
69-025-XX								
69-033-XX	D69/ D2(69)	6 - 35 stranded 10 - 50 solid	2.8 - 3	6 - 35 stranded 10-50 solid	2.8 - 3	6 - 35 stranded 10 - 50 solid	2.8 - 3	Copper (Cu)/ Aluminum (Al) 75°C
69-042-XX								
69-050-XX								
69-058-XX								
69-082-54	F69	16 - 150	31 (for 16 - 34 mm ²) 42 (for 35-150 mm ²)	16 - 120	31 (for 16 - 34 mm ²) 42 (for 35-120 mm ²)	16 - 150 16 - 185 **	31 (for 16 - 34 mm ²) 42 (for 35-150 mm ²) 10 **	Copper (Cu)/ Aluminum (Al) 75°C
69-090-54								
69-109-54								
69-146-54								
69-175-54								
69-200-54								

Table 19 Cable connector range and tightening torque for Emotron VFX69, according to IEC ratings

69-250	H69	(2x) 25 - 240					
69-300							
69-375							
69-400							
69-430	I69	(3x) 25 - 240					
69-500							
69-595							
69-650	J69	(4x) 25 - 240	31 (for 25-34 mm ²)	(4x) 25 - 240	31 (for 25-34 mm ²)		
69-720							
69-800							
69-905	KA69	(5x) 25 - 240	42 (for 35-152 mm ²)	(5x) 25 - 240	42 (for 35-152 mm ²)		
69-995							
69-1k2	K69	(6x) 25 - 240	56 (for 153-240 mm ²)	(6x) 25 - 240	56 (for 153-240 mm ²)		
69-1k4	L69	(7x) 25 - 240		(7x) 25 - 240			
69-1k6	M69	(8x) 25 - 240		(8x) 25 - 240			
69-1k8	N69	(9x) 25 - 240		(9x) 25 - 240			
69-2k0	O69	(10x) 25 - 240		(10x) 25 - 240			
69-2k2	P69	(11x) 25 - 240		(11x) 25 - 240			
69-2k4	Q69	(12x) 25 - 240		(12x) 25 - 240			
69-2k6	R69	(13x) 25 - 240		(13x) 25 - 240			
69-2k8	S69	(14x) 25 - 240		(14x) 25 - 240			
69-3k0	T69	(15x) 25 - 240		(15x) 25 - 240			

** Valid when brake chopper electronics are built in.

***** XX=20 or 54, module IP-class.

3.4.4 Cable connection data for mains, motor and PE cables according to NEMA ratings

List of cable cross section connector range with minimum required AWG cable cross section which fits to the terminals according to UL-requirements.

Table 20 Cable connector range and tightening torque for Emotron VFX48 and VFX52, according to NEMA ratings

Model VFX	Frame size	Cable cross section connector range						Cable type
		Mains and motor		Brake		PE		
		Cable range AWG	Tightening torque Lb-In	Cable range AWG	Tightening torque Lb-In	Cable range AWG	Tightening torque Lb-In	
##-003-54	B	20 - 8	11.5	20 - 8	11.5	16 - 6	23	Copper (Cu) 75°C
##-004-54								
##-006-54								
##-008-54								
##-010-54								
##-013-54								
##-018-54								
48-025-20	C2	12 - 4	18	12 - 4	18	12 - 4*	38	
48-030-20								
48-036-20								
48-045-20								
48-058-20								
##-026-54	C	18 - 4	10.6-12.3	18 - 4	10.6-12.3	18 - 4	10.6-12.3	
##-031-54								
##-037-54								
##-046-54								
48-060-20	D2	10 - 0	30 - 50	10 - 0	30 - 50	8 - 2/0*	38	
48-072-20	D2	10 - 0	30 - 50	10 - 0	30 - 50	8 - 2/0*	38	
48-088-20		3 - 2/0	70	3 - 2/0	70			
48-105-20								
##-061-54	D	10 - 0	24.3-26.1	10 - 0	24.3-26.1	10 - 0	24.3-26.1	
##-074-54								
48-142-20	E2	6 - 300 kcmil	275 (for AWG 6 - 2) 375 (for AWG 1 - 300Kcmil)	6 - 250 kcmil	275 (for AWG 6 - 2) 375 (for AWG 1 - 250Kcmil)	6 - 300 kcmil	275 (for AWG 6-2) 375 (for AWG 1-300Kcmil) 88**	
48-171-20								
48-090-54								
48-109-54								
48-146-54								
48-175-54								
	E							

Table 20 Cable connector range and tightening torque for Emotron VFX48 and VFX52, according to NEMA ratings

Model VFX	Frame size	Cable cross section connector range						Cable type						
		Mains and motor		Brake		PE								
		Cable range AWG	Tightening torque Lb-In	Cable range AWG	Tightening torque Lb-In	Cable range AWG	Tightening torque Lb-In							
48-205-20	F2	4 - 500 kcmil	275 (for AWG 4 - 2)	6 - 300 kcmil	275 (for AWG 6 - 2)	4 - 500 kcmil	275 (for AWG 4 - 2)	Copper (Cu) 75°C						
48-244-20														
48-293-20														
48-210-54	F						375 (for AWG 1 -300 kcmil)	375 (for AWG 1 -300kcmil)	6 - 2/0**	500 (for AWG 350 -500 kcmil)	375 (for AWG 1 - 300 kcmil)	***		
48-228-54														
48-250-54														
48-295-54							500 (for AWG 350 -500 kcmil)							
48-365-20	FA2	M10 connection	416	M8 connection	212	M8 connection	212	Copper (Cu) 75°C						
48-365-54	FA													
48-300	G	(2x) 4 - 500 kcmil	275 (for AWG 4 - 2)	(2x) 4 - 500 kcmil	275 (for AWG 4 - 2)	PE/Earth via mounting screws/mounting frame. In order to secure proper earthing, always use all mounting screws and tighten them thoroughly.	Copper (Cu) 75°C							
48-375														
48-430	H													
48-500														
48-600	I	(3x) 4 - 500 kcmil	375 (for AWG 1 - 300 kcmil)	(3x) 4 - 500 kcmil	375 (for AWG 1 -300 kcmil)									
48-650														
48-720, 750														
48-860	J	(4x) 4 - 500 kcmil	500 (for AWG 350 -500 kcmil)	(4x) 4 -500 kcmil	500 (for AWG 350 -500 kcmil)									
48-900														
48-1k0														
48-1k15	KA	(5x) 4 - 500 kcmil		(5x) 4 - 500 kcmil										
48-1k2														
48-1k25														
48-1k35	K	(6x) 4 - 500 kcmil		(6x) 4 - 500 kcmil										
48-1k5														
48-1k75	L	(7x) 4 - 500 kcmil		(7x) 4 - 500 kcmil										
48-2k0	M	(8x) 4 - 500 kcmil		(8x) 4 - 500 kcmil										
48-2k25	N	(9x) 4 - 500 kcmil		(9x) 4 - 500 kcmil										
48-2k5	O	(10x) 4 - 500 kcmil		(10x)4-500 kcmil										

* With cable lug for M6 screw.

** Valid when brake chopper electronics are built in.

*** Use 90 °C Mains and motor cables if surrounding temperature is higher than 35 °C otherwise 75 °C cables.

3.5 Thermal protection on the motor

Standard motors are normally fitted with an internal fan. The cooling capacity of this built-in fan is dependent on the frequency of the motor. At low frequency, the cooling capacity will be insufficient for nominal loads. Please contact the motor supplier for the cooling characteristics of the motor at lower frequency.



WARNING!

Depending on the cooling characteristics of the motor, the application, the speed and the load, it may be necessary to use forced cooling on the motor.

Motor thermistors offer better thermal protection for the motor. Depending on the type of motor thermistor fitted, the optional PTC input may be used. The motor thermistor gives a thermal protection independent of the speed of the motor, thus of the speed of the motor fan. See the functions, Motor I^2t type [231] and Motor I^2t current [232].

3.6 Motors in parallel

The Drive Mode "Speed" or "Torque", see menu [213], performs very well in most applications based on the direct torque control as motor control method. However in applications with multiple motors connected in parallel to the AC drive output one should select Drive Mode = "V/Hz" and then it is possible to have motors in parallel as long as the total current does not exceed the nominal value of the AC drive. The following has to be taken into account when setting the motor data:

Menu [221] Motor Voltage:	The motors in parallel must have the same motor voltage.
Menu [222] Motor Frequency:	The motors in parallel must have the same motor frequency.
Menu [223] Motor Power:	Add the motor power values for the motors in parallel.
Menu [224] Motor Current:	Add the current for the motors in parallel.
Menu [225] Motor Speed:	Set the average speed for the motors in parallel.
Menu [227] Motor Cos PHI:	Set the average Cos PHI value for the motors in parallel.

4. Control Connections

4.1 Control board

Fig. 56 shows the layout of the control board which is where the parts most important to the user are located. Although the control board is galvanically isolated from the mains, for safety reasons do not make changes while the mains supply is on!



WARNING!
Always switch off the mains voltage and wait at least 7 minutes to allow the DC capacitors to discharge before connecting the control signals or changing position of any switches. If the option External supply is used, switch of the mains to the option. This is done to prevent damage on the control board.

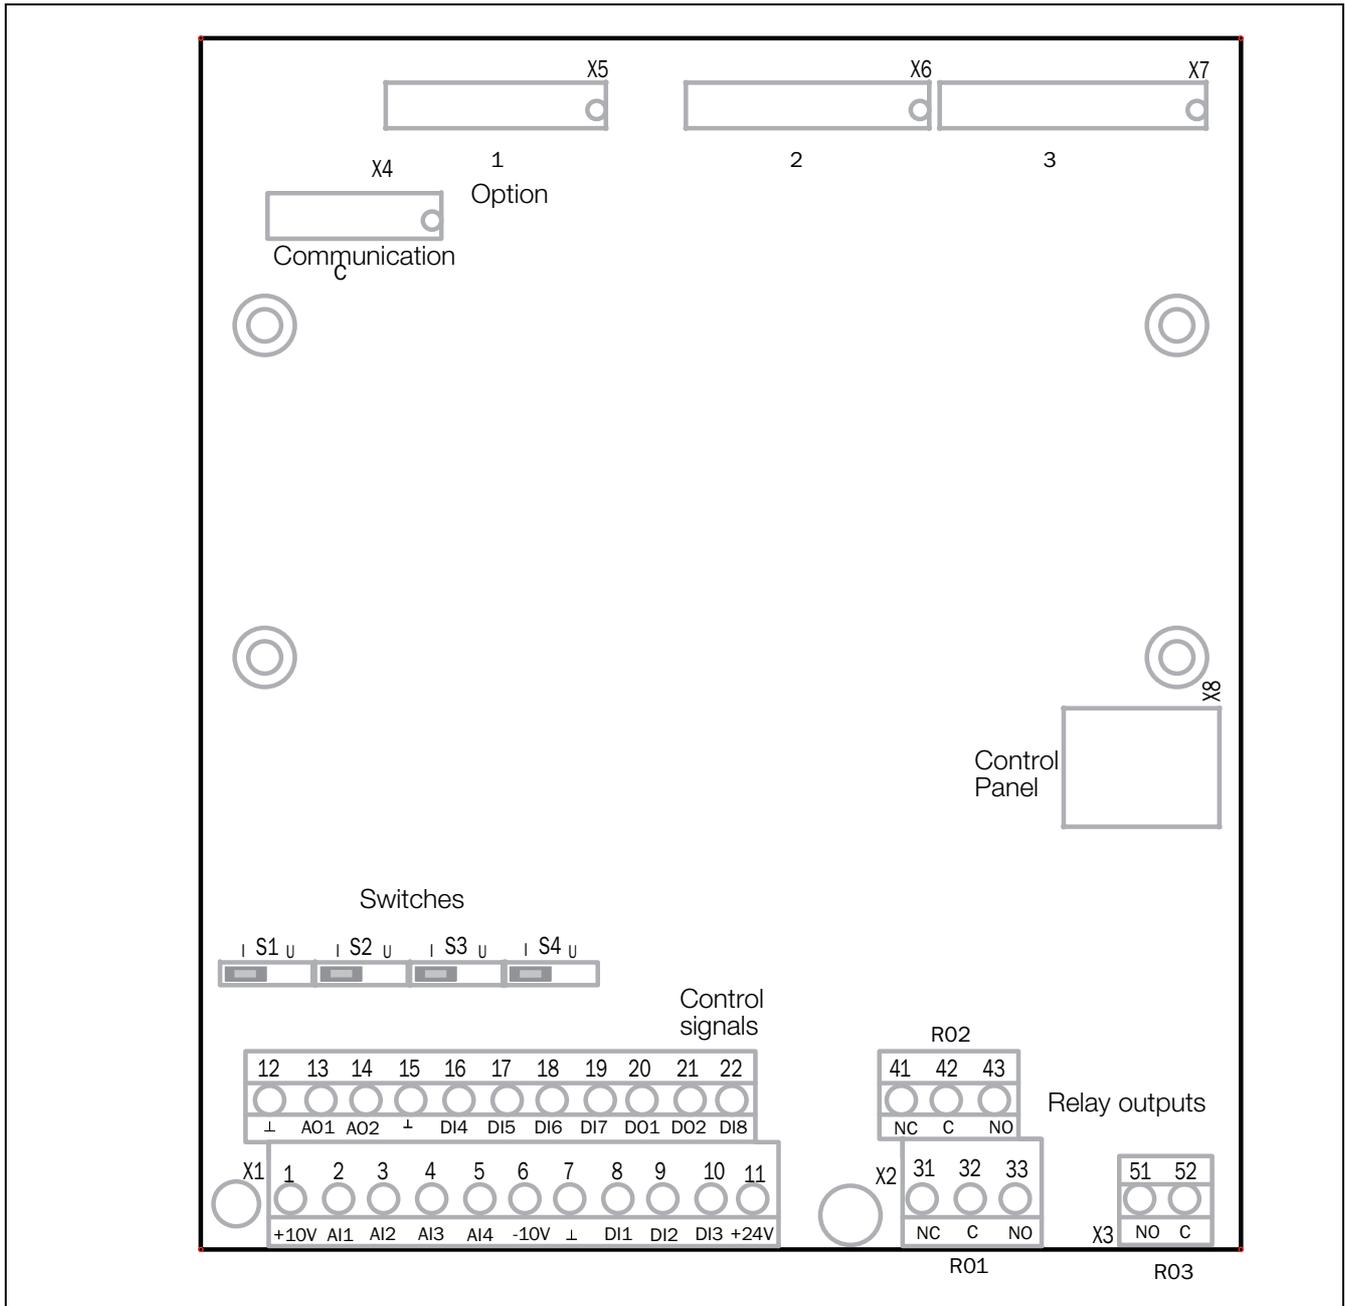


Fig. 56 Control board layout

4.2 Terminal connections

The terminal strip for connecting the control signals is accessible after opening the front panel.

The table describes the default functions for the signals. The inputs and outputs are programmable for other functions as described in chapter 11, page 87. For signal specifications refer to chapter 14, page 235.

NOTE: The maximum total combined current for outputs 11, 20 and 21 is 100mA.

NOTE: It is possible to use external 24V DC if connection to Common (15).

Table 21 Control signals

Terminal	Name	Function (Default)
Outputs		
1	+10 V	+10 VDC supply voltage
6	-10 V	-10 VDC supply voltage
7	Common	Signal ground
11	+24 V	+24 VDC supply voltage
12	Common	Signal ground
15	Common	Signal ground
Digital inputs		
8	DigIn 1	RunL (reverse)
9	DigIn 2	RunR (forward)
10	DigIn 3	Off
16	DigIn 4	Off
17	DigIn 5	Off
18	DigIn 6	Off
19	DigIn 7	Off
22	DigIn 8	RESET
Digital outputs		
20	DigOut 1	Ready
21	DigOut 2	Brake
Analogue inputs		
2	AnIn 1	Process Ref
3	AnIn 2	Off
4	AnIn 3	Off
5	AnIn 4	Off
Analogue outputs		
13	AnOut 1	Min speed to max speed
14	AnOut 2	0 to max torque

Table 21 Control signals

Terminal	Name	Function (Default)
Relay outputs		
31	N/C 1	Relay 1 output Trip, active when the AC drive is in a TRIP condition.
32	COM 1	
33	N/O 1	
41	N/C 2	Relay 2 output Run, active when the AC drive is started.
42	COM 2	
43	N/O 2	
51	COM 3	Relay 3 output Off
52	N/O 3	

NOTE: N/C is opened when the relay is active and N/O is closed when the relay is active.

NOTE! Using potentiometer for reference signal to Analogue input: Possible potentiometer value in range of 1 k Ω to 10 k Ω (¼ Watt) linear, where we advice to use a linear 1 k Ω / ¼ W type potentiometer for best control linearity.



WARNING!

The relay terminals 31-52 are single isolated. Do NOT mix SELV voltage with e.g. 230 VAC on these terminals. A solution when dealing with mixed SELV/system voltage signals is to install an additional I/O board option (see chapter 13.8 page 229) and connect all SELV voltage signals to the relay terminals of this option board while connecting all 230VAC signals to the control board relay terminals 31 - 52.

4.3 Inputs configuration with the switches

The switches S1 to S4 are used to set the input configuration for the 4 analogue inputs AnIn1, AnIn2, AnIn3 and AnIn4 as described in table 22. See Fig. 56 for the location of the switches.

Table 22 Switch settings

Input	Signal type	Switch
AnIn1	Voltage	S1 
	Current (default)	S1 
AnIn2	Voltage	S2 
	Current (default)	S2 
AnIn3	Voltage	S3 
	Current (default)	S3 
AnIn4	Voltage	S4 
	Current (default)	S4 

NOTE: Scaling and offset of AnIn1 - AnIn4 can be configured using the software. See menus [512], [515], [518] and [51B] in section 11.7, page 166.

NOTE: the 2 analogue outputs AnOut 1 and AnOut 2 can be configured using the software. See menu [530] section 11.7.3, page 174

4.4 Connection example

Fig. 57 gives an overall view of a AC drive connection example.

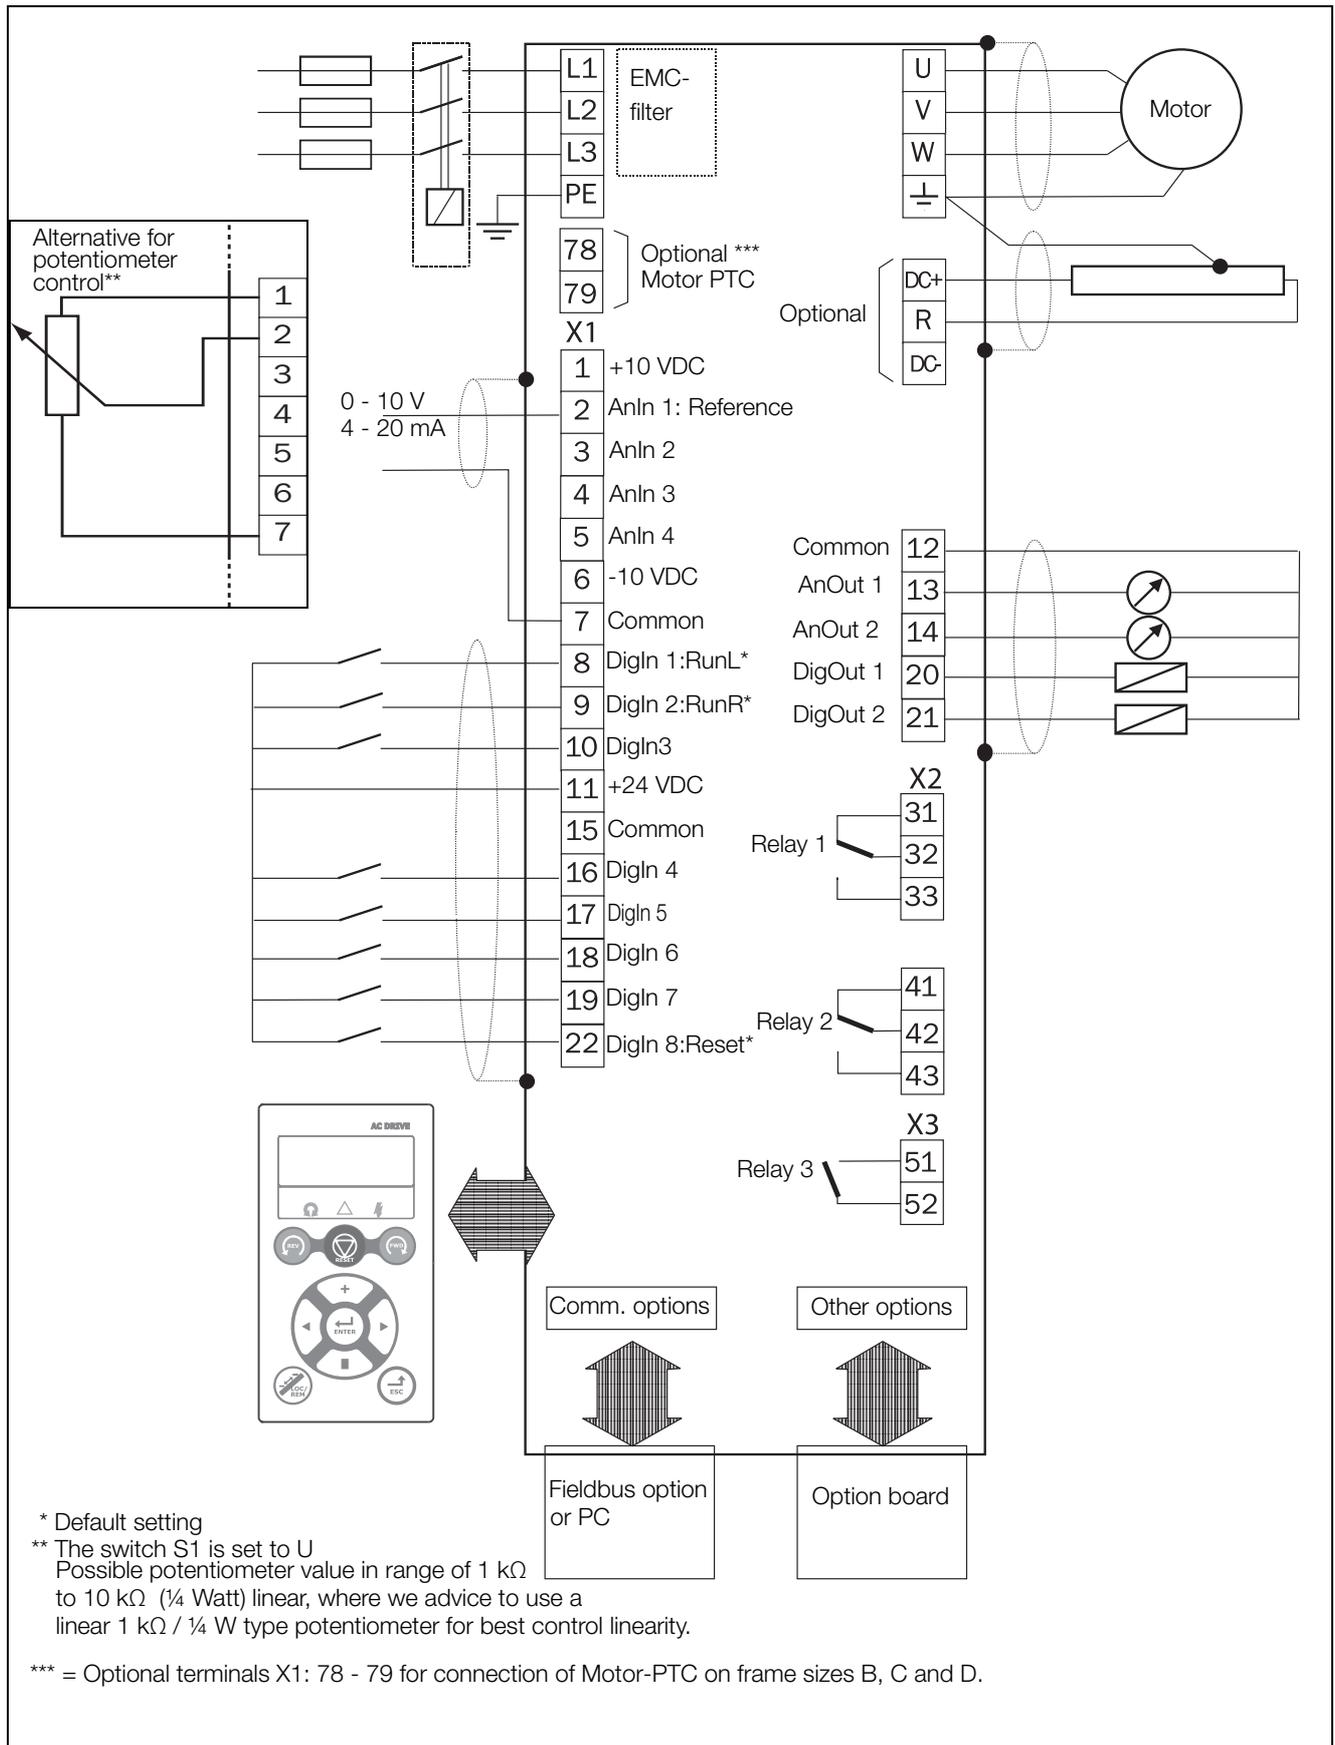


Fig. 57 Connection example

4.5 Connecting the Control Signals

4.5.1 Cables

The standard control signal connections are suitable for stranded flexible wire up to 1.5 mm² (AWG16) and for solid wire up to 2.5 mm²(AWG14).

NOTE: The screening of control signal cables must comply with the immunity levels given in the EMC Directive (reduction of noise level).

NOTE: The control cables must be separated from motor and mains cables.

Table 23 Description of optional terminals in Fig. 58 to Fig. 62.

Terminals 78, 79	For connection of Motor PTC
Terminals A-, B+	For connection of 24V Stand-by Supply (Valid for sizes D/D2/C69/C2(69)/D69/D2(69)/FA/FA2)

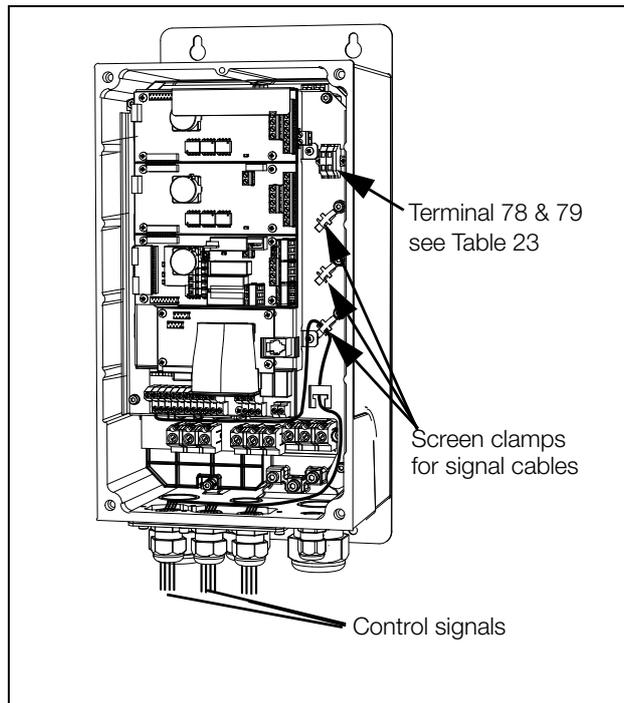


Fig. 58 Connecting the control signals, VFX model 003 to 018, frame size B.

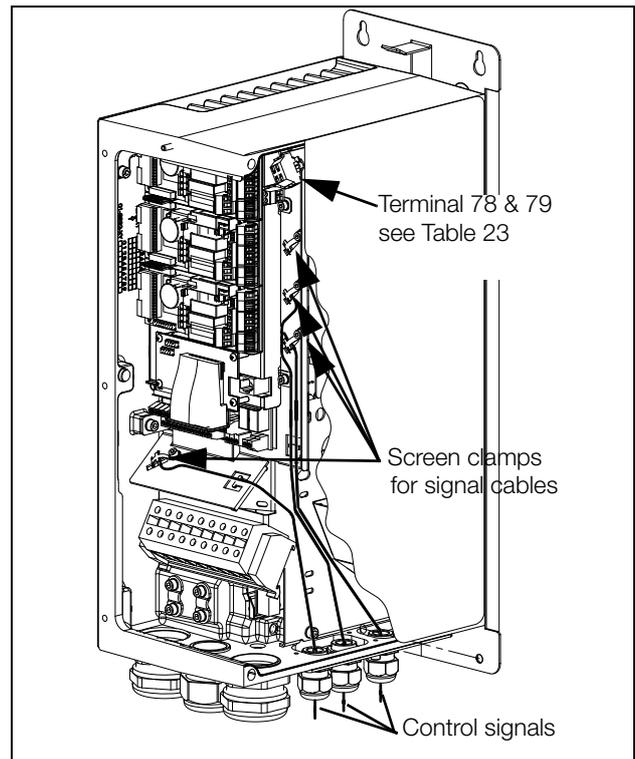


Fig. 59 Connecting the control signals, VFX model 026 to 046, frame size C.

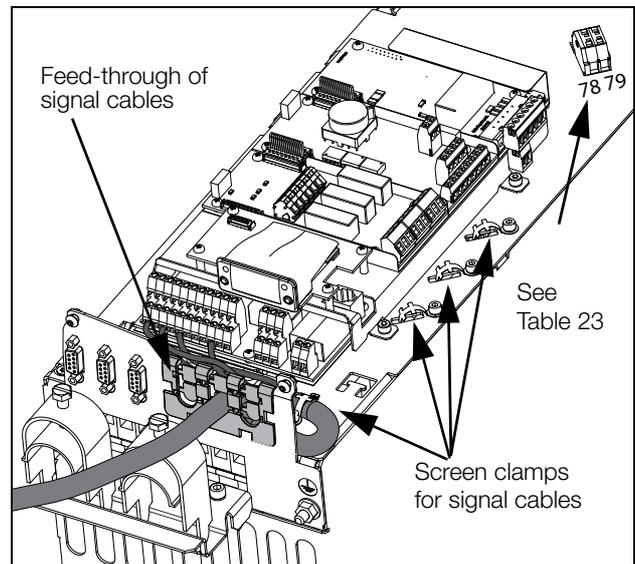


Fig. 60 Connecting the control signals, VFX model 48-025 to 48-058 frame size C2 and model 69-002 to 69-025 frame size C2(69).

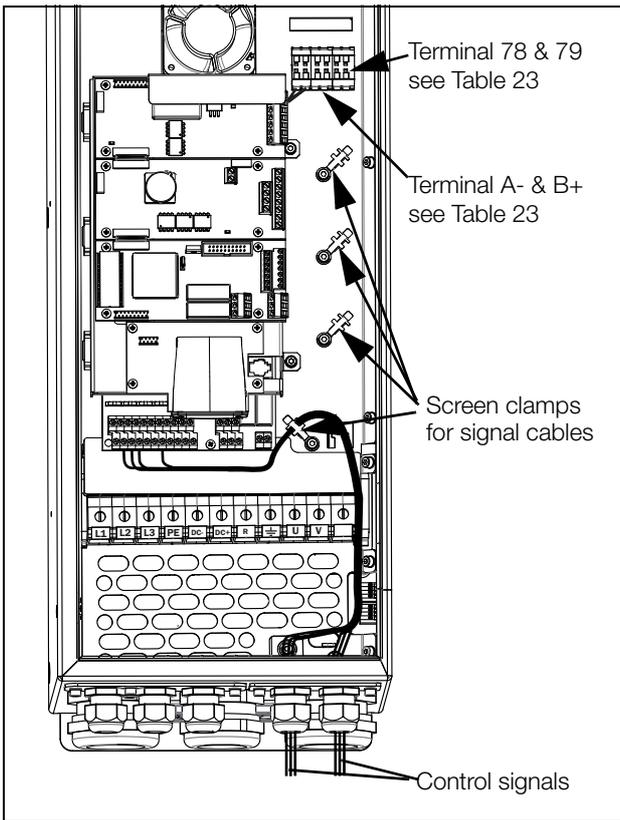


Fig. 61 Connecting the control signals, VFX model 061 to 074, frame size D and model 69-033 to 69-058 frame size D(69).

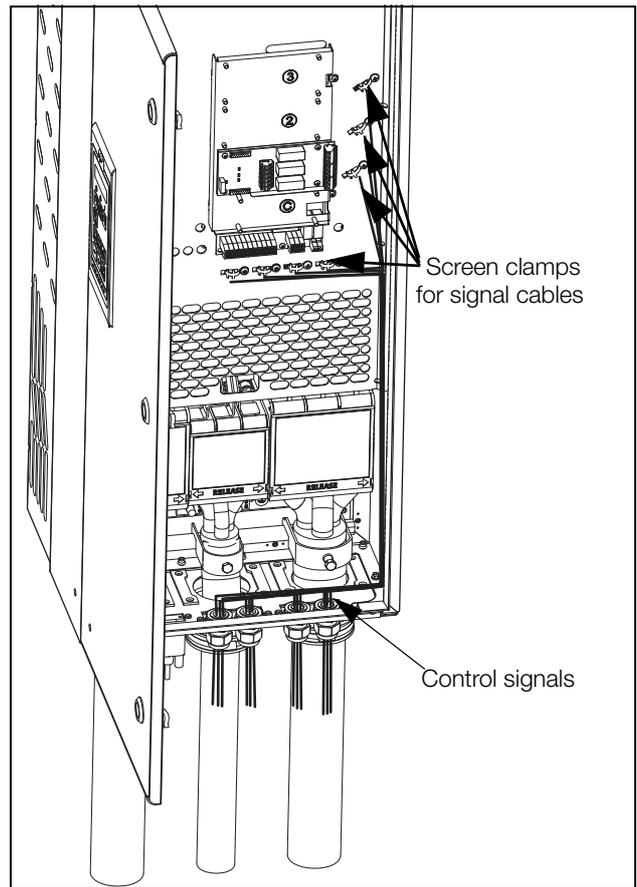


Fig. 63 Connecting the control signals, VFX model 48-090 to 295 and VFX model 69-82 to 200, frame size E, F and F69 (principle drawing).

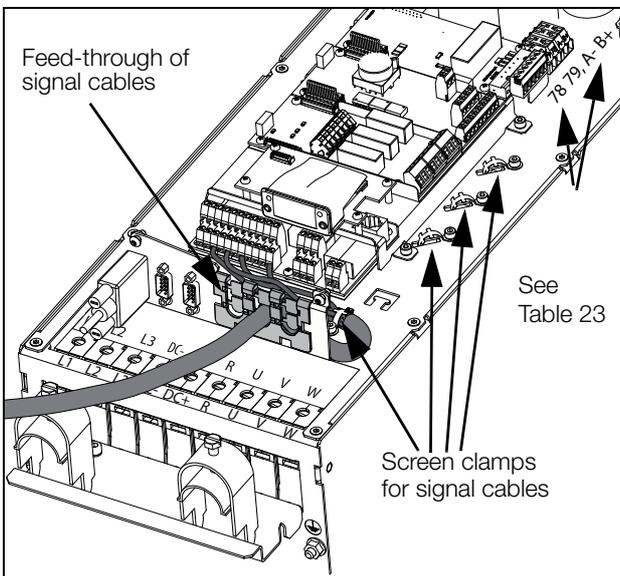


Fig. 62 Connecting the control signals, VFX model 48-060 to 48-105 frame size D2 and model 69-033 to 69-058 frame size D2(69).

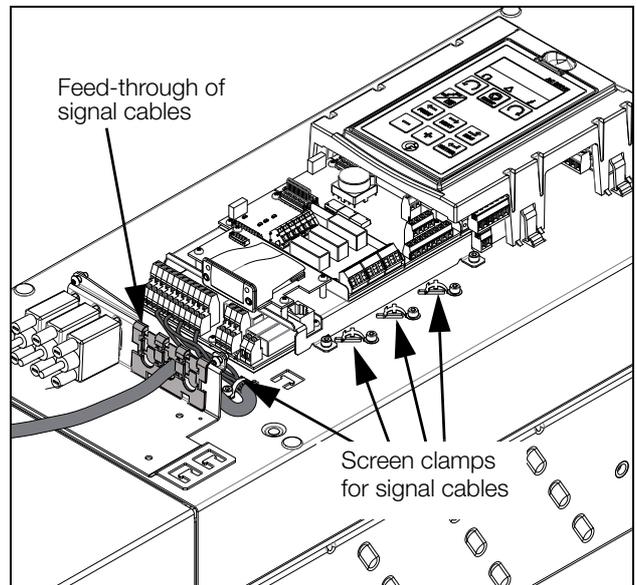


Fig. 64 Connecting the control signals, VFX model 48-142 to 48-365 frame size E2, F2 and FA2 (principle drawing)

NOTE: The screening of control signal cables is necessary to comply with the immunity levels given in the EMC Directive (it reduces the noise level).

NOTE: Control cables must be separated from motor and mains cables.

4.5.2 Types of control signals

Always make a distinction between the different types of signals. Because the different types of signals can adversely affect each other, use a separate cable for each type. This is often more practical because, for example, the cable from a pressure sensor may be connected directly to the AC drive.

We can distinguish between the following types of control signals:

Analogue inputs

Voltage or current signals, (0-10 V, 0/4-20 mA) normally used as control signals for speed, torque and PID feedback signals.

Analogue outputs

Voltage or current signals, (0-10 V, 0/4-20 mA) which change slowly or only occasionally in value. In general, these are control or measurement signals.

Digital

Voltage or current signals (0-10 V, 0-24 V, 0/4-20 mA) which can have only two values (high or low) and only occasionally change in value.

Data

Usually voltage signals (0-5 V, 0-10 V) which change rapidly and at a high frequency, generally data signals such as RS232, RS485, Profibus, etc.

Relay

Relay contacts (0-250 VAC) can switch highly inductive loads (auxiliary relay, lamp, valve, brake, etc.).

Signal type	Maximum wire size	Tightening torque	Cable type
Ana- logue	Rigid cable: 0.14-2.5 mm ² (AWG 26 - 14)	0.5 Nm (4.4 LB- in)	Screened
Digital	Flexible cable: 0.14-1.5 mm ² (AWG 26 - 16)		Screened
Data			Screened
Relay	Cable with ferrule: 0.25-1.5 mm ² (AWG 24 - 16)		Not screened

Example:

The relay output from a AC drive which controls an auxiliary relay can, at the moment of switching, form a source of interference (emission) for a measurement signal

from, for example, a pressure sensor. Therefore it is advised to separate wiring and screening to reduce disturbances.

4.5.3 Screening

For all signal cables the best results are obtained if the screening is connected to both ends: the AC drive side and at the source (e.g. PLC, or computer). See Fig. 65.

It is strongly recommended that the signal cables be allowed to cross mains and motor cables at a 90° angle. Do not let the signal cable go in parallel with the mains and motor cable.

4.5.4 Single-ended or double-ended connection?

In principle, the same measures applied to motor cables must be applied to all control signal cables, in accordance with the EMC-Directives.

For all signal cables as mentioned in section 4.5.2 the best results are obtained if the screening is connected to both ends. See Fig. 65.

NOTE: Each installation must be examined carefully before applying the proper EMC measurements.

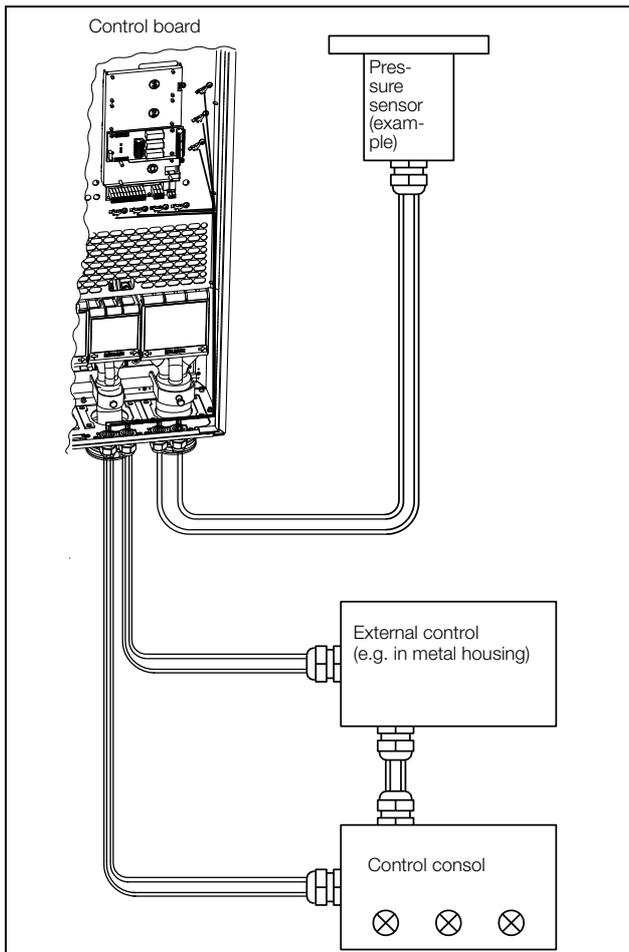


Fig. 65 Electro Magnetic (EM) screening of control signal cables.

4.6 Connecting options

The option cards are connected by the optional connectors X4 or X5 on the control board see Fig. 56, page 47 and mounted above the control board. The inputs and outputs of the option cards are connected in the same way as other control signals.

4.5.5 Current signals ((0)4-20 mA)

A current signal like (0)4-20 mA is less sensitive to disturbances than a 0-10 V signal, because it is connected to an input which has a lower impedance (250Ω) than a voltage signal ($20 \text{ k}\Omega$). It is therefore strongly advised to use current control signals if the cables are longer than a few metres.

4.5.6 Twisted cables

Analogue and digital signals are less sensitive to interference if the cables carrying them are “twisted”. This is certainly to be recommended if screening cannot be used. By twisting the wires the exposed areas are minimised. This means that in the current circuit for any possible High Frequency (HF) interference fields, no voltage can be induced. For a PLC it is therefore important that the return wire remains in proximity to the signal wire. It is important that the pair of wires is fully twisted over 360° .

5. Getting Started

This chapter is a step by step guide that will show you the quickest way to get the motor shaft turning. We will show you two examples, remote control and local control.

We assume that the AC drive is mounted on a wall or in a cabinet as in the chapter 2, page 13.

First there is general information of how to connect mains, motor and control cables. The next section describes how to use the function keys on the control panel. The subsequent examples covering remote control and local control describe how to program/set the motor data and run the AC drive and motor.

5.1 Connect the mains and motor cables

Dimension the mains and motor cables according to local regulations. The cable must be able to carry the AC drive load current.

5.1.1 Mains cables

1. Connect the mains cables as in Fig. 66. The AC drive has, as standard, a built-in RFI mains filter that complies with category C3 which suits the Second Environment standard.

5.1.2 Motor cables

Connect the motor cables as in Fig. 66. To comply with the EMC directive you have to use screened cables and the motor cable screen has to be connected on both sides: to the housing of the motor and the housing of the AC drive.

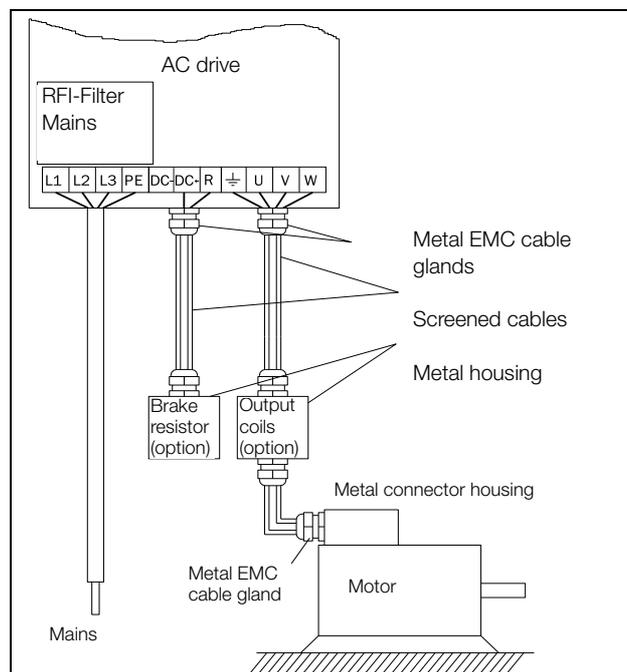


Fig. 66 Connection of mains and motor cables.

Table 24 Mains and motor connection

L1, L2, L3	Mains supply, 3 -phase
PE	Safety earth
\perp	Motor earth
U, V, W	Motor output, 3-phase



WARNING!

In order to work safely the mains earth must be connected to PE and the motor earth to \perp .

5.2 Using the function keys

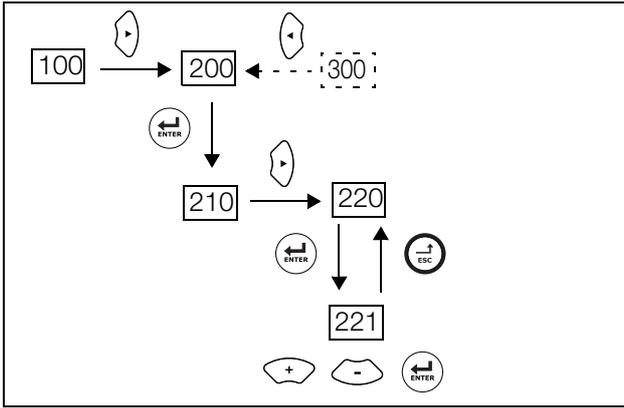


Fig. 67 Example of menu navigation when entering motor voltage

	step to lower menu level or confirm changed setting
	step to higher menu level or ignore changed setting
	step to next menu on the same level
	step to previous menu on the same level
	increase value or change selection
	decrease value or change selection

5.3 Remote control

In this example external signals are used to control the AC drive/motor.

A standard 4-pole motor for 400 V, an external start button and a reference value will also be used.

5.3.1 Connect control cables

Here you will make up the minimum wiring for starting. In this example the motor/AC drive will run with right rotation.

To comply with the EMC standard, use screened control cables with plaited flexible wire up to 1.5 mm² (AWG15) or solid wire up to 2.5 mm²(AWG13).

2. Connect a reference value between terminals 7 (Common) and 2 (AnIn 1) as in Fig. 68.
3. Connect an external start button between terminal 11 (+24 VDC) and 9 (DigIn2, RUNR) as in Fig. 68.

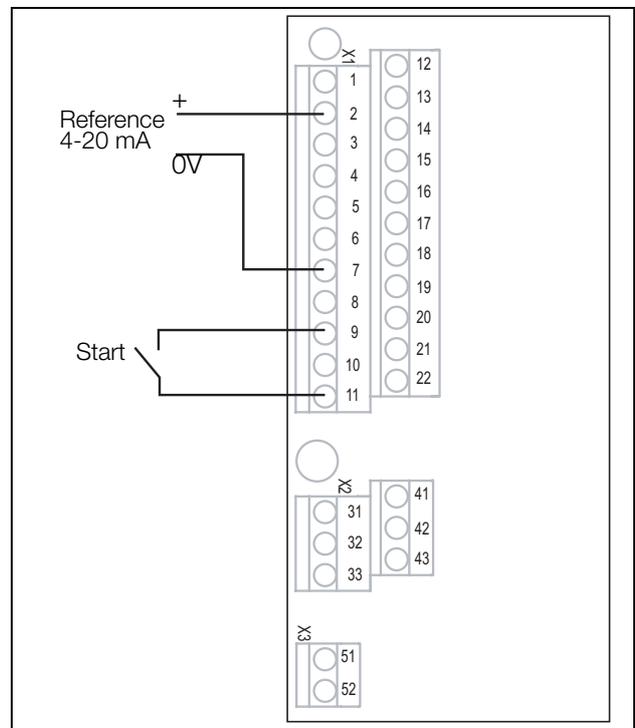


Fig. 68 Wiring

5.3.2 Switch on the mains

Once the mains is switched on, the internal fan in the AC drive will run for 5 seconds (In frame size A3 the fan runs continuously).

5.3.3 Set the Motor Data

Enter correct motor data for the connected motor. The motor data is used in the calculation of complete operational data in the AC drive.

Change settings using the keys on the control panel. For further information about the control panel and menu structure, see the chapter 10, page 75.

Menu [100], "Preferred View" is displayed when started.

1. Press  to display menu [200], "Main Setup".
2. Press  and then  to display menu [220], "Motor Data".
3. Press  to display menu [221] and set motor voltage.
4. Change the value using the  and  keys. Confirm with .
5. Set motor frequency [222].
6. Set motor power [223].
7. Set motor current [224].
8. Set motor speed [225].
9. Set power factor (cos φ) [227].
10. Select supply voltage level used [21B].
11. Set Motor type[22I].
12. [229] Motor ID run: Choose Short, confirm with  and give start command .

The AC drive will now measure some motor parameters. The motor makes some beeping sounds but the shaft does not rotate. When the ID run is finished after about one minute ("Test Run OK!" is displayed), press  to continue.

13. Use AnIn1 as input for the reference value. The default range is 4-20 mA. If you need a 0-10 V reference value, change switch (S1) on control board.
14. Switch off power supply.
15. Connect digital and analogue inputs/outputs as in Fig. 68.
16. Ready!
17. Switch on power supply.

5.3.4 Run the AC drive

Now the installation is finished, and you can press the external start button to start the motor.

When the motor is running the main connections are OK.

5.4 Local control

Manual control via the control panel can be used to carry out a test run.

Use a 400 V motor and the control panel.

5.4.1 Switch on the mains

Once the mains is switched on, the AC drive is started and the internal fan will run for 5 seconds (In frame size A3 the fan runs continuously).

5.4.2 Select manual control

Menu [100], "Preferred View" is displayed when started.

1. Press  to display menu [200], "Main Setup".
2. Press  to display menu [210], "Operation".
3. Press  to display menu [211], "Language".
4. Press  to display menu [214], "Reference Control".
5. Select **Keyboard** using the key  and press  to confirm.
6. Press  to get to menu [215], "Run/Stop Control".
7. Select **Keyboard** using the key  and press  to confirm.
8. Press  to get to previous menu level and then  to display menu [220], "Motor Data".

5.4.3 Set the Motor Data

Enter correct motor data for the connected motor.

9. Press  to display menu [221].
10. Change the value using the  and  keys. Confirm with .
11. Press  to display menu [222].
12. Repeat step 9 and 10 until all motor data is entered.
13. Press  twice and then  to display menu [100], Preferred View.

5.4.4 Enter a Reference Value

Enter a reference value.

14. Press  until menu [300], "Process" is displayed.
15. Press  to display menu [310], "Set/View reference" value.
16. Use the  and  keys to enter, for example, 300 rpm. We select a low value to check the rotation direction without damaging the application.

5.4.5 Run the AC drive

Press the  key on the control panel to run the motor forward.

If the motor is running the main connections are OK.

6. Applications

This chapter contains tables giving an overview of many different applications/duties in which it is suitable to use AC drives from CG Drives & Automation. Further on you will find application examples of the most common applications and solutions.

6.1 Application overview

6.1.1 Cranes

Challenge	Emotron VFX solution	Menu
Starting with heavy load is difficult and risky. Can lead to jerks causing swinging load.	Direct torque control, fast motor pre-magnetization and precise brake control gives instant yet soft start with heavy load.	331–338, 339, 351
Jerky movements can cause load to be dropped, jeopardizing safety of people and goods.	Deviation control immediately detects load change. Signals to parallel safety system to activate mechanical brakes.	3AB, 3AC
Crane is driven slowly when returning empty or with light load. Valuable time is lost.	Speed can be increased by field weakening.	343, 3AA, 3AD, 713
Braking with heavy load is difficult and risky. Can lead to jerks causing swinging load.	Direct torque control and vector brake gradually reduce speed to zero before mechanical brake is activated.	213, 33E, 33F, 33G
Operator starts braking long before end position to avoid jerks. Valuable time is lost.	System automatically stops crane at end position. Operator can safely drive at full speed.	3A2–3AA

6.1.2 Crushers

Challenge	Emotron VFX solution	Menu
High start currents require larger fuses and cables, or for mobile crushers larger diesel generators.	Direct torque control reduces start current. Same fuses as those for the motor, or smaller generator.	331-338, 351
Difficult to start with heavy load.	Possible to boost torque at start to overcome initial torque peak.	351–353
Material that could cause damage gets into the crusher.	Load Curve Protection quickly detects deviation. Warning is sent or safety stop activated.	411–41C9
Process inefficiency due to e.g. broken feeder or worn jaw. Wasted energy, mechanical stress, and risk of process failure.	Load Curve Protection quickly detects deviation from normal load. Warning is sent or safety stop activated.	411–41B, 41C1–41C9

6.1.3 Mills

Challenge	Emotron VFX solution	Menu
High start currents require larger fuses and cables. Cause stress on equipment and higher energy cost.	Direct torque control reduces start current. Same fuses can be used as those required for the motor.	331-338, 350
Difficult to start with heavy load.	Possible to boost torque at start to overcome initial torque peak.	351-353
Material that could cause damage gets into the mill.	Load Curve Protection quickly detects deviation. Warning is sent or safety stop activated.	411-41C9
Process inefficiency due to broken or worn equipment. Energy wasted and risk of process failure.	Load Curve Protection quickly detects deviation. Warning is sent or safety stop activated.	411-41B, 41C1-41C9

6.1.4 Mixers

Challenge	Emotron VFX solution	Menu
High start currents require larger fuses and cables. Cause stress on equipment and higher energy cost.	Direct torque control reduces start current. Same fuses can be used as those required for the motor.	331-338, 350
Difficult to determine when mixing process is ready.	Built-in shaft power monitor determines when viscosity is right.	411-41B
Process inefficiency due to e.g. a damaged or broken blade. Energy wasted and risk of process failure.	Load Curve Protection quickly detects deviation. Warning is sent or safety stop activated.	411-41B, 41C1 -41C9

7. Main Features

This chapter contains descriptions of the main features of the AC drive.

7.1 Parameter sets

Only valid if the option HCP - Handheld Control Panel is used.

Parameter sets are used if an application requires different settings for different modes. For example, a machine can be used for producing different products and thus requires two or more maximum speeds and acceleration/deceleration times. With the four parameter sets different control options can be configured with respect to quickly changing the behaviour of the AC drive. It is possible to adapt the AC drive online to altered machine behaviour. This is based on the fact that at any desired moment any one of the four parameter sets can be activated during Run or Stop, via the digital inputs or the control panel and menu [241].

Each parameter set can be selected externally via a digital input. Parameter sets can be changed during operation and stored in the control panel.

NOTE: The only data not included in the parameter set is Motor data 1-4, (entered separately), language, communication settings, selected set, local remote, and keyboard locked.

Define parameter sets

When using parameter sets you first decide how to select different parameter sets. The parameter sets can be selected via the control panel, via digital inputs or via serial communication. All digital inputs and virtual inputs can be configured to select parameter set. The function of the digital inputs is defined in the menu [520].

Fig. 69 shows the way the parameter sets are activated via any digital input configured to Set Ctrl 1 or Set Ctrl 2.

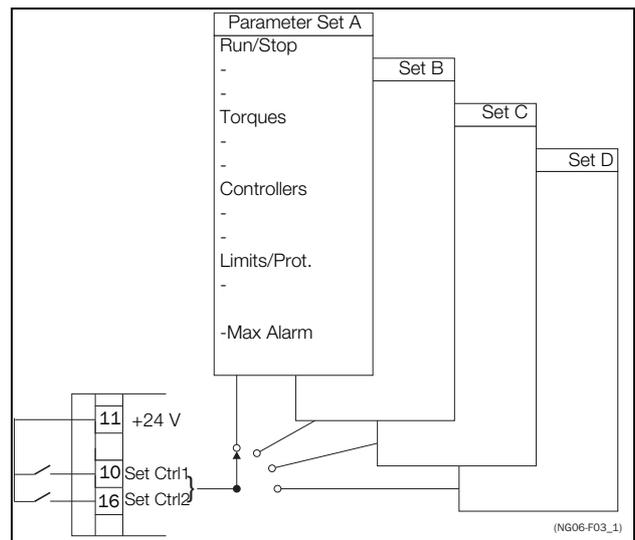


Fig. 69 Selecting the parameter sets

Select and copy parameter set

The parameter set selection is done in menu [241], “Select Set”. First select the main set in menu [241], normally A. Adjust all settings for the application. Usually most parameters are common and therefore it saves a lot of work by copying set A>B in menu [242]. When parameter set A is copied to set B you only change the parameters in the set that need to be changed. Repeat for C and D if used.

With menu [242], Copy Set, it is easy to copy the complete contents of a single parameter set to another parameter set. If, for example, the parameter sets are selected via digital inputs, DigIn 3 is set to Set Ctrl 1 in menu [523] and DigIn 4 is set to Set Ctrl 2 in menu [524], they are activated as in Table 25.

Activate the parameter changes via digital input by setting menu [241], “Select Set” to DigIn.

Table 25 Parameter set

Parameter set	Set Ctrl 1	Set Ctrl 2
A	0	0
B	1	0
C	0	1
D	1	1

NOTE: The selection via the digital inputs is immediately activated. The new parameter settings will be activated on-line, also during Run.

NOTE: The default parameter set is parameter set A.

Examples

Different parameter sets can be used to easily change the setup of a AC drive to adapt quickly to different application requirements. For example when

- a process needs optimized settings in different stages of the process, to
 - increase the process quality
 - increase control accuracy
 - lower maintenance costs
 - increase operator safety

With these settings a large number of options are available. Some ideas are given here:

Multi frequency selection

Within a single parameter set the 7 preset references can be selected via the digital inputs. In combination with the parameter sets, 28 preset references can be selected using all 5 digital inputs: DigIn1, 2 and 3 for selecting preset reference within one parameter set and DigIn 4 and DigIn 5 for selecting the parameter sets.

Bottling machine with 3 different products

Use 3 parameter sets for 3 different Jog reference speeds when the machine needs to be set up. The 4th parameter set can be used for “normal” remote control when the machine is running at full production.

Product changing on winding machines

If a machine has to change between 2 or 3 different products e.g. winding machine with different gauges of thread, it is important that acceleration, deceleration times, Max Speed and Max Torque are adapted. For each thread size a different parameter set can be used.

Manual - automatic control

If in an application something is filled up manually and then the level is automatically controlled using PID regulation, this is solved using one parameter set for the manual control and one for the automatic control.

7.1.1 One motor and one parameter set

This is the most common application for pumps and fans.

Once default motor M1 and parameter set A have been selected:

1. Enter the settings for motor data.
2. Enter the settings for other parameters e.g. inputs and outputs

7.1.2 One motor and two parameter sets

This application is useful if you for example have a machine running at two different speeds for different products.

Once default motor M1 is selected:

1. Select parameter set A in menu [241].
2. Enter motor data in menu [220].
3. Enter the settings for other parameters e.g. inputs and outputs.
4. If there are only minor differences between the settings in the parameter sets, you can copy parameter set A to parameter set B, menu [242].
5. Enter the settings for parameters e.g. inputs and outputs.

Note: Do not change motor data in parameter set B.

7.1.3 Two motors and two parameter sets

This is useful if you have a machine with two motors that can not run at the same time, such as a cable winding machine that lifts up the reel with one motor and then turns the wheel with the other motor.

One motor must stop before changing to an other motor.

1. Select parameter set A in menu [241].
2. Select motor M1 in menu [212].
3. Enter motor data and settings for other parameters e.g. inputs and outputs.
4. Select parameter set B in menu [241].
5. Select M2 in menu [212].
6. Enter motor data and settings for other parameters e.g. inputs and outputs.

7.1.4 Autoreset at trip

For several non-critical application-related failure conditions, it is possible to automatically generate a reset command to overcome the fault condition. The selection can be made in menu [250]. In this menu the maximum number of automatically generated restarts allowed can be set, see menu [251], after this the AC drive will stay in fault condition because external assistance is required.

Example

The motor is protected by an internal protection for thermal overload. When this protection is activated, the AC drive should wait until the motor is cooled down enough before resuming normal operation. When this problem occurs three times in a short period of time, external assistance is required.

The following settings should be applied:

- Insert maximum number of restarts; set menu [251] to 3.
- Activate Motor I^2t to be automatically reset; set menu [25A] to 300 s.
- Set relay 1, menu [551] to “AutoRst Trip”; a signal will be available when the maximum number of restarts is reached and the AC drive stays in fault condition.
- The reset input must be constantly activated.

7.1.5 Reference priority

The active speed reference signal can be programmed from several sources and functions. The table below shows the priority of the different functions with regards to the speed reference.

Table 26 Reference priority

Main Priority	Ref. selection	Priority
1. Jog, (menu [520], [348])	-	
2. Reference selection, (menu [214])	Remote	1. Preset
		2. MotPot
		3. AnIn
	Keypad	-
	Com	-
Option	-	

7.1.6 Preset references

The AC drive is able to select fixed speeds via the control of digital inputs. This can be used for situations where the required motor speed needs to be adapted to fixed values, according to certain process conditions. Up to 7 preset references can be set for each parameter set, which can be selected via all digital inputs that are set to Preset Ctrl1, Preset Ctrl2 or Preset Ctrl3. The amount digital inputs used that are set to Preset Ctrl determines the number of Preset References available; using 1 input gives 1 speed, using 2 inputs gives 3 speeds and using 3 inputs gives 7 speeds.

Example

The use of four fixed speeds, at 50 / 100 / 300 / 800 rpm, requires the following settings:

- Set DigIn 5 as first selection input; set [525] to Preset Ctrl1.
- Set DigIn 6 as second selection input; set [526] to Preset Ctrl2.
- Set menu [341] “Min Speed” to 50 rpm.
- Set menu [362] “Preset Ref 1” to 100 rpm.
- Set menu [363] “Preset Ref 2” to 300 rpm.
- Set menu [364] “Preset Ref 3” to 800 rpm.

With these settings, the AC drive switched on and a RUN command given, the speed will be:

- 50 rpm, when both DigIn 5 and DigIn 6 are low.
- 100 rpm, when DigIn 5 is high and DigIn 6 is low.
- 300 rpm, when DigIn 5 is low and DigIn 6 is high.
- 800 rpm, when both DigIn 5 and DigIn 6 are high.

7.2 Remote control functions

Operation of the Run/Stop/Enable/Reset functions

As default, all the run/stop/reset related commands are programmed for remote operation via the inputs on the terminal strip (terminals 1-22) on the control board. With the function “Run/Stp Ctrl” [215] and “Reset Control” [216], this can be selected for keyboard or serial communication control.

NOTE: The examples in this paragraph do not cover all possibilities. Only the most relevant combinations are given. The starting point is always the default setting (factory) of the AC drive.

Default settings of the Run/Stop/Enable/Reset functions

The default settings are shown in Fig. 70. In this example the AC drive is started and stopped with DigIn 2 and a reset after trip can be given with DigIn 8.

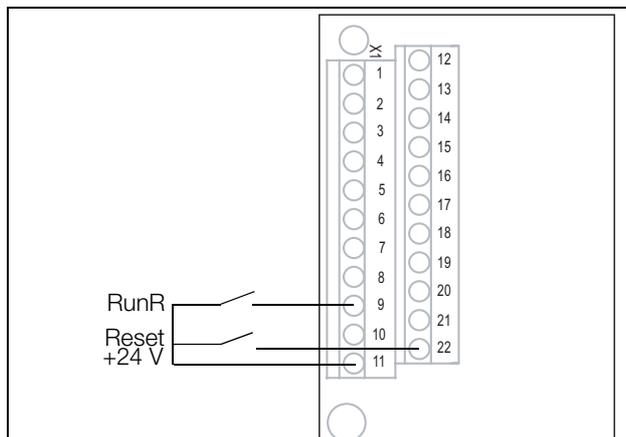


Fig. 70 Default setting Run/Reset commands

The inputs are default set for level-control. The rotation is determined by the setting of the digital inputs.

Enable and Stop functions

Both functions can be used separately or simultaneously. The choice of which function is to be used depends on the application and the control mode of the inputs (Level/Edge [21A]).

NOTE: In Edge mode, at least one digital input must be programmed to “stop”, because the Run commands are only able to start the AC drive.

Enable

Input must be active (HI) to allow any Run signal. If the input is made LOW, the output of the AC drive is immediately disabled and the motor will coast.



CAUTION!

If the Enable function is not programmed to a digital input, it is considered to be active internally.

Stop

If the input is low then the AC drive will stop according to the selected stop mode set in menu [33B] “Stop Mode”. Fig. 71 shows the function of the Enable and the Stop input and the Stop Mode=Decel [33B].

To run the input must be high.

NOTE: Stop Mode=Coast [33B] will give the same behaviour as the Enable input.

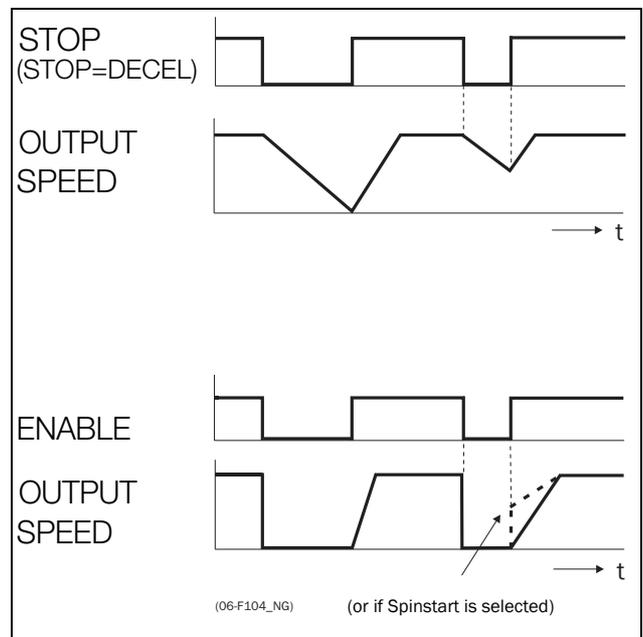


Fig. 71 Functionality of the Stop and Enable input

Reset and Autoreset operation

If the AC drive is in Stop Mode due to a trip condition, the AC drive can be remotely reset by a pulse (“low” to “high” transition) on the Reset input, default on DigIn 8. Depending on the selected control method, a restart takes place as follows:

Level-control

If the Run inputs remain in their position the AC drive will start immediately after the Reset command is given.

Edge-control

After the Reset command is given a new Run command must be applied to start the AC drive again.

Autoreset is enabled if the Reset input is continuously active. The Autoreset functions are programmed in menu “Autoreset [250]”.

NOTE: If the control commands are programmed for Keyboard control or Com, Autoreset is not possible.

Run Inputs Level-controlled.

The inputs are set as default for level-control. This means that an input is activated by making the input continuously “High”. This method is commonly used if, for example, PLCs are used to operate the AC drive.



CAUTION! Level-controlled inputs DO NOT comply with the Machine Directive, if the inputs are directly used to start and stop the machine.

The examples given in this and the following paragraphs follow the input selection shown in Fig. 72.

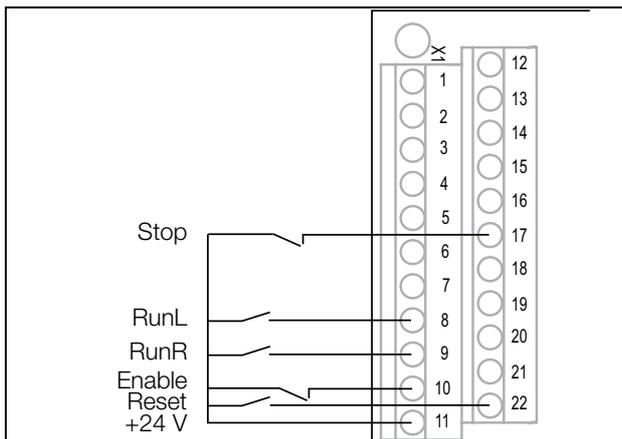


Fig. 72 Example of wiring for Run/Stop/Enable/Reset inputs

The Enable input must be continuously active in order to accept any run-right or run-left command. If both RunR and RunL inputs are active, then the AC drive stops according to the selected Stop Mode. Fig. 73 gives an example of a possible sequence.

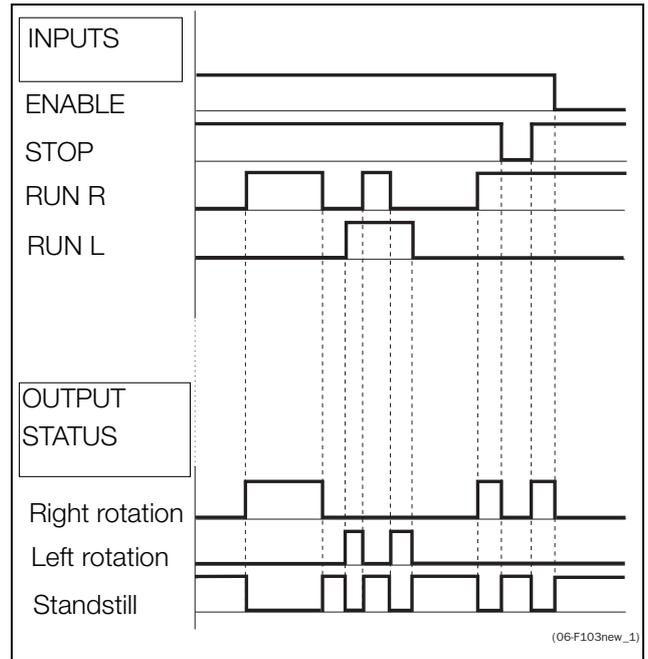


Fig. 73 Input and output status for level-control

Run Inputs Edge-controlled

Menu “[21A] Start signal” Level/Edge must be set to Edge to activate edge control. This means that an input is activated by a “low” to “high” transition or vice versa.

NOTE: Edge-controlled inputs comply with the Machine Directive (see Chapter 8. page 69), if the inputs are directly used for starting and stopping the machine.

See Fig. 72. The Enable and Stop input must be active continuously in order to accept any run-right or run-left command. The last edge (RunR or RunL) is valid. Fig. 74 gives an example of a possible sequence.

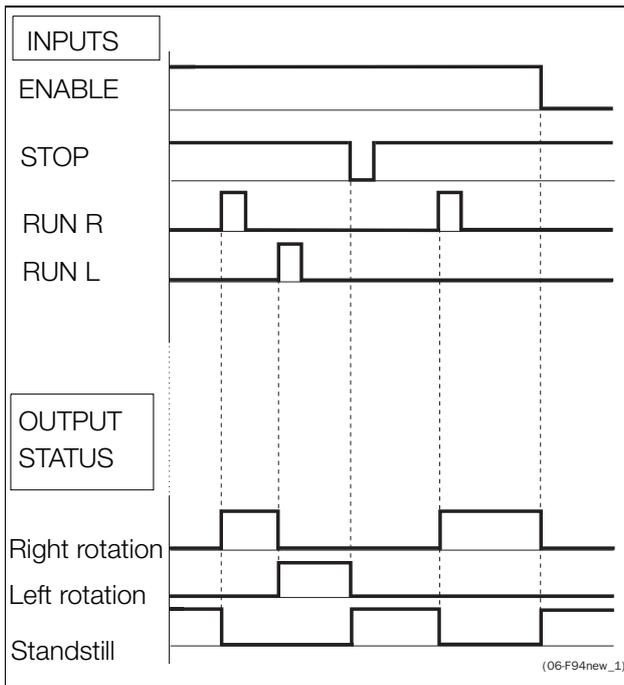


Fig. 74 Input and output status for edge-control

7.3 Performing an Identification Run

To get the optimum performance out of your AC drive/motor combination, the AC drive must measure the electrical parameters (resistance of stator winding, etc.) of the connected motor. See menu [229] "Motor ID-Run".

It is recommended that the extended ID run is used before the motor is installed in the application.

If this is not possible, the short ID run should be used.



WARNING!
 During the extended ID RUN, the motor shaft will rotate. Take safety measures to avoid unforeseen dangerous situations.

7.4 Using the Control Panel Memory

Data can be copied from the AC drive to the memory in the control panel and vice versa. To copy all data (including parameter set A-D and motor data) from the AC drive to the control panel, select Copy to CP[234], Copy to CP.

To copy data from the control panel to the AC drive, enter the menu [245], Load from CP and select what you want to copy.

The memory in the control panel is useful in applications with AC drives without a control panel and in applications where several AC drives have the same setup. It can also be used for temporary storage of settings. Use a control panel to upload the settings from one AC drive and then move the control panel to another AC drive and download the settings.

NOTE: Load from and copy to the AC drive is only possible when the AC drive is in stop mode.

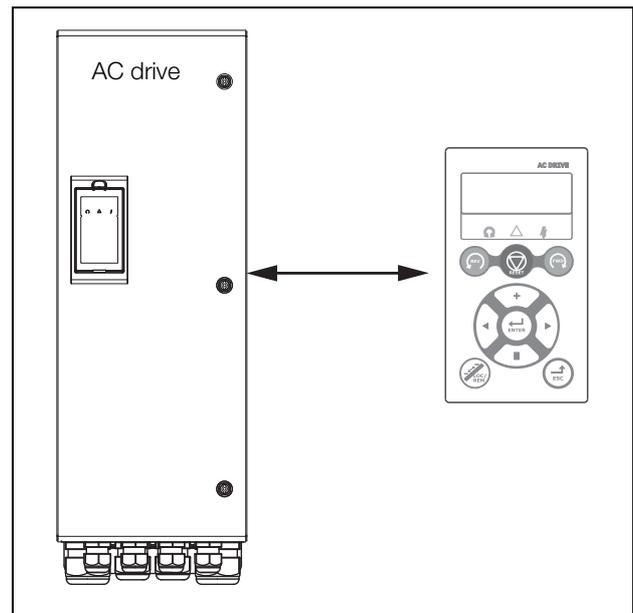


Fig. 75 Copy and load parameters between AC drive and control panel

7.5 Load Monitor and Process Protection [400]

7.5.1 Load Monitor [410]

The monitor functions enable the AC drive to be used as a load monitor. Load monitors are used to protect machines and processes against mechanical overload and underload, such as a conveyer belt or screw conveyer jamming, belt failure on a fan or a pump dry running. The load is measured in the AC drive by the calculated motor shaft torque. There is an overload alarm (Max Alarm and Max Pre-Alarm) and an underload alarm (Min Alarm and Min Pre-Alarm).

The Basic Monitor type uses fixed levels for overload and underload (pre-)alarms over the whole speed range. This function can be used in constant load applications where the torque is not dependent on the speed, e.g. conveyer belt, displacement pump, screw pump, etc.

For applications with a torque that is dependent on the speed, the Load Curve monitor type is preferred. By measuring the actual load curve of the process, characteristically over the range of minimum speed to maximum speed, an accurate protection at any speed can be established.

The max and min alarm can be set for a trip condition. The pre-alarms act as a warning condition. All the alarms can be monitored on the digital or relay outputs.

The autoset function automatically sets the 4 alarm levels whilst running: maximum alarm, maximum pre-alarm, minimum alarm and minimum pre-alarm.

Fig. 76 gives an example of the monitor functions for constant torque applications.

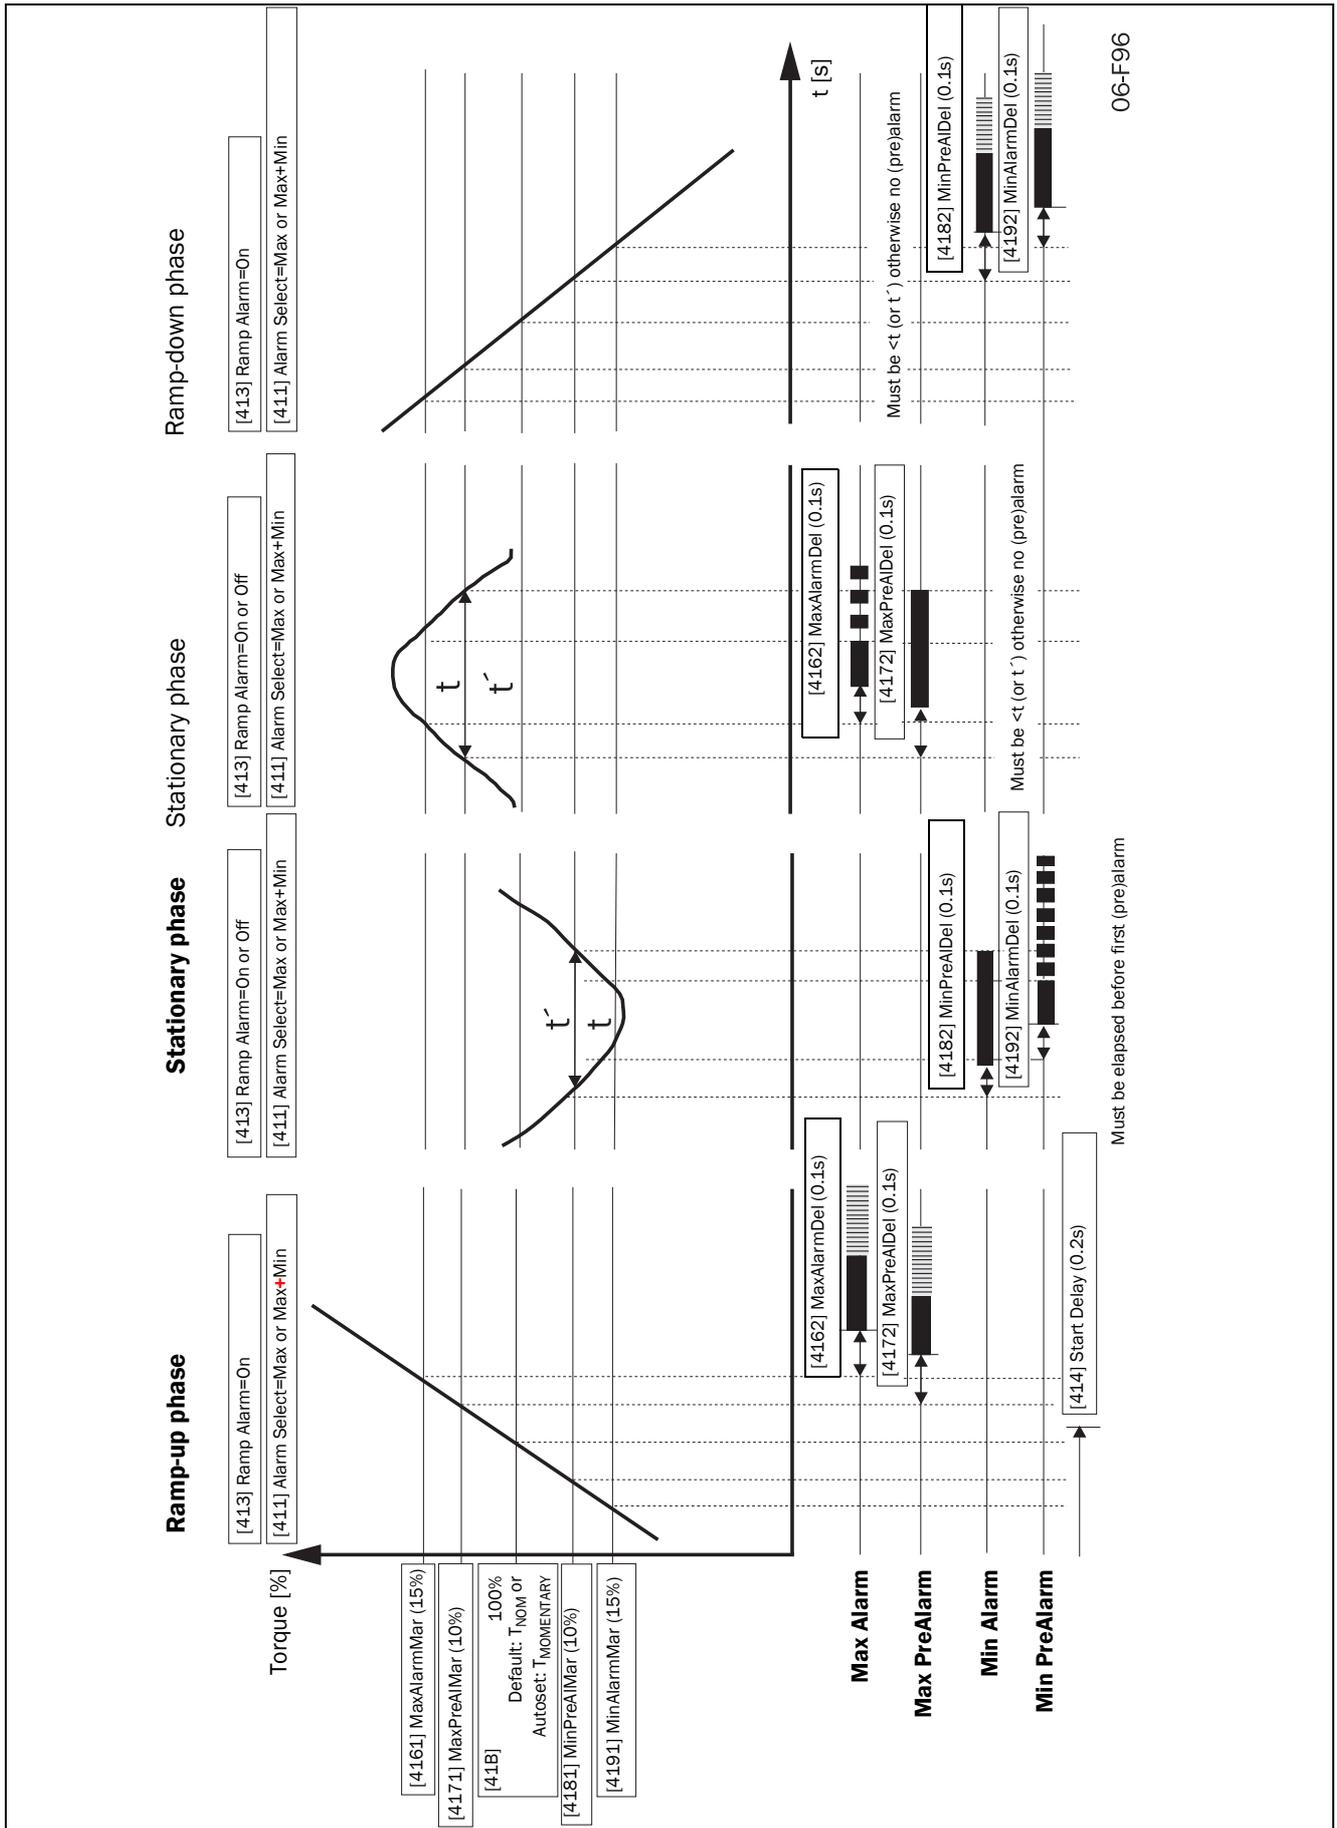


Fig. 76

8. EMC and standards

8.1 EMC standards

The AC drive complies with the following standards:

EN(IEC)61800-3:2004 Adjustable speed electronic power drive systems, part 3, EMC product standards:

Standard: Category C3, for systems of rated supply voltage < 1000 VAC, intended for use in the second environment.

Optional: Category C2 for systems of rated supply voltage < 1.000 V, which is neither a plug in device nor a movable device and, when used in the first environment, is intended to be installed and commissioned only by experienced person with the necessary skills in installing and/or commissioning AC drives including their EMC aspects.

8.2 Stop categories and emergency stop

The following information is important if emergency stop circuits are used or needed in the installation where a AC drive is used. EN 60204-1 defines 3 stop categories:

Category 0: Uncontrolled STOP:

Stopping by switching off the supply voltage. A mechanical stop must be activated. This STOP may not be implemented with the help of a AC drive or its input/output signals.

Category 1: Controlled STOP:

Stopping until the motor has come to rest, after which the mains supply is switched off. This STOP may not be implemented with the help of a AC drive or its input/output signals.

Category 2: Controlled STOP:

Stopping while the supply voltage is still present. This STOP can be implemented with each of the AC drives STOP command.



WARNING!

EN 60204-1 specifies that every machine must be provided with a category 0 stop. If the application prevents this from being

implemented, this must be explicitly stated. Furthermore, every machine must be provided with an Emergency Stop function. This emergency stop must ensure that the voltage at the machine contacts, which could be dangerous, is removed as quickly as possible, without resulting in any other danger. In such an Emergency Stop situation, a category 0 or 1 stop may be used. The choice will be decided on the basis of the possible risks to the machine.

NOTE: With option Safe Stop, a "Safe Torque Off (STO)" stop according EN-IEC 62061:2005 SIL 3 & EN-ISO 13849-1:2006, can be achieved. See Chapter 13.14 page 231.

9. Serial communication

The AC drive provides possibility for different types of serial communication.

- Modbus RTU via RS232/485
- Fieldbuses as Profibus DP and DeviceNet
- Industrial Ethernet as Modbus/TCP, Profinet IO, EtherCAT and EtherNet/IP

9.1 Modbus RTU

Use the isolated RS232/485 option board for serial communication. This port is galvanically isolated. The protocol used for data exchange is based on the Modbus RTU protocol, originally developed by Modicon. The physical connection is RS232/485. The AC drive acts as a slave with selectable address in a master-slave configuration. The communication is half-duplex. It has a standard non return zero (NRZ) format.

The baud rate is adjustable between 2400 to 38400.

The character frame format (always 11 bits) has:

- one start bit
- eight data bits
- two stop bits
- no parity

The AC drive has also an asynchronous serial communication interface behind the control panel. Please note that this port is not galvanically isolated.

It is possible to temporarily connect a personal computer with for example the software EmoSoftCom (programming and monitoring software) to the RS232 connector on the control panel. This can be useful when copying parameters between AC drives etc. For permanent connection of a personal computer you have to use one of the communication option boards.

NOTE: This RS232 port is not isolated.



WARNING!

Correct and safe use of a RS232 connection depends on the ground pins of both ports being the same potential. Problems can occur when connecting two ports of e.g. machinery and computers where both ground pins are not the same potential. This may cause hazardous ground loops that can destroy the RS232 ports.

The RS232 connection behind the control panel is not galvanically isolated.

The RS232/485 option board from CG Drives & Automation is galvanically isolated.

Note that the control panel RS232 connection can safely be used in combination with commercial available isolated USB to RS232 converters.

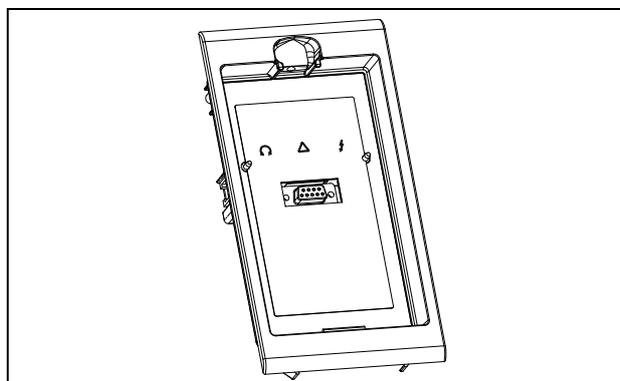


Fig. 77 RS232 connector behind the control panel

9.2 Parameter sets

Communication information for the different parameter sets.

The different parameter sets in the AC drive have the following DeviceNet instance numbers, Profibus slot/index numbers, Profinet IO index and EtherCAT index numbers:

Param. set	Modbus/ DeviceNet Instance number	Profibus Slot/Index	Profinet IO index	EtherCAT and CANopen index (hex)
A	43001–43899	168/160 to 172/38	19385 - 20283	4bb9 - 4f3b
B	44001–44899	172/140 to 176/18	20385 - 21283	4fa1 - 5323
C	45001–45899	176/120 to 179/253	21385 - 22283	5389 - 5706
D	46001–46899	180/100 to 183/233	22385 - 23283	5771 - 5af3

Parameter set A contains parameters 43001 to 43899. The parameter sets B, C and D contains the same type of information. For example parameter 43123 in parameter set A contain the same type of information as 44123 in parameter set B.

9.3 Motor data

Communication information for the different motors.

Motor	Modbus/ DeviceNet Instance number	Profibus Slot/ Index	Profinet IO index	EtherCAT and CANopen index (hex)
M1	43041- 43048	168/200 to 168/207	19425 - 19432	4be1 - 4be8
M2	44041- 44048	172/180 to 174/187	20425 - 20432	4fc9 - 4fd0
M3	45041- 45048	176/160 to 176/167	21425 - 21432	53b1 - 53b8
M4	46041- 46048	180/140 to 180/147	22425 - 22432	5799 - 57a0

M1 contains parameters 43041 to 43048. The M2, M3, and M4 contains the same type of information. For example parameter 43043 in motor M1 contain the same type of information as 44043 in M2.

9.4 Start and stop commands

Set start and stop commands via serial communication.

Modbus/DeviceNet Instance number	Function
42901	Reset
42902	Run, active together with either RunR or RunL to perform start.
42903	RunR
42904	RunL

Note! Bipolar reference mode is activated if both RunR and RunL is active.

9.5 Reference signal

When menu “Reference Control [214]” is set to “Com” the following parameter data should be used:

Default	0
Range	-16384 to 16384
Corresponding to	-100% to 100% ref

Communication information

Modbus /DeviceNet Instance number	42905
Profibus slot /Index	168/64
EtherCAT index (hex)	4b59
Profinet IO index	19289
Fieldbus format	Int
Modbus format	Int

9.5.1 Process value

It is also possible to send the Process value feedback signal over a bus (e.g. from a process or temperature sensor) for use with PID Process controller [380].

Set menu “Process Source [321]” to F(Bus). Use following parameter data for the process value:

Default	0
Range	-16384 to 16384
Corresponding to	-100% to 100% process value

Communication information

Modbus /DeviceNet Instance number	42906
Profibus slot /Index	168/65
EtherCAT index (hex)	4b5a
Profinet IO index	19290
Fieldbus format	Int
Modbus format	Int

Example:

(See Emotron Fielbus manual for detailed information)

We would like to control the AC drive over a bus system using the first two bytes of the Basic Control Message by setting menu “[2661] FB Signal 1” to 49972. Further, we also want to transmit a 16 bit signed reference and a 16 bit process value. This is done by setting menu “[2662] FB Signal 2” to 42905 and menu “[2663] FB Signal 3” to 42906.

NOTE! It is possible to view the transmitted process value in control panel menu Operation [710]. The presented value is depending on settings in menus “Process Min [324]” and “Process Max [325]”.

9.6 Description of the EInt formats

Eint is only used with Modbus-RTU and Modbus-TCP protocols.

A parameter with Eint format can be represented in two different formats (F). Either as a 15 bit unsigned integer format (F= 0) or a Emotron floating point format (F=1). The most significant bit (B15) indicates the format used. See detailed description below.

All parameters written to a register may be rounded to the number of significant digits used in the internal system.

The matrix below describes the contents of the 16-bit word for the two different EInt formats:

B15	B14	B13	B12	B11	B10	B9	B8	B7	B6	B5	B4	B3	B2	B1	B0
F=1	e3	e2	e1	e0	m10	m9	m8	m7	m6	m5	m4	m3	m2	m1	m0
F=0	B14	B13	B12	B11	B10	B9	B8	B7	B6	B5	B4	B3	B2	B1	B0

If the format bit (B15) is 0, then all bits may be treated as a standard unsigned integer (UInt)

If the format bit is 1, then is the number interpreted as this:

Value = M * 10^E, where M=m10..m0 represents a two- complement signed mantissa and E= e3..e0 represents a two- complement signed exponent.

NOTE: Parameters with EInt format may return values both as 15 bit unsigned int (F=0) or in Emotron floating point (F=1).

Example, resolution

If you write the value 1004 to a register and this register has 3 significant digits, it will be stored as 1000.

In the Emotron floating point format (F=1), one 16-bit word is used to represent large (or very small numbers) with 3 significant digits.

If data is read or written as a fixed point (i.e. no decimals) number between 0-32767, the 15 bit Unsigned integer format (F=0) may be used.

Detailed description of Emotron floating point format

e3-e0 4-bit signed exponent. Gives a value range:

-8..+7 (binary 1000 .. 0111)

m10-m0 11-bit signed mantissa.Gives a value range:

-1024..+1023 (binary 10000000000..01111111111)

A signed number should be represented as a two complement binary number, like below:

Value Binary

-8 1000

-7 1001

..

-2 1110

-1 1111

0 0000

1 0001

2 0010

..

6 0110

7 0111

The value represented by the Emotron floating point format is m·10^e.

To convert a value from the Emotron floating point format to a floating point value, use the formula above.

To convert a floating point value to the Emotron floating point format, see the C-code example below.

Example, floating point format

The number 1.23 would be represented by this in Emotron floating point format,

```
F EEEE MMMMMMMMMMMM
1 1110 00001111011
F=1 -> floating point format used
E=-2
M=123
```

The value is then 123x10⁻² = 1.23

Example 15bit unsigned int format

The value 72.0 can be represented as the fixed point number 72. It is within the range 0-32767, which means that the 15-bit fixed point format may be used.

The value will then be represented as:

B15	B14	B13	B12	B11	B10	B9	B8	B7	B6	B5	B4	B3	B2	B1	B0
0	0	0	0	0	0	0	0	0	1	0	0	1	0	0	0

Where bit 15 indicates that we are using the fixed point format (F=0).

Programming example:

```
typedef struct
{
    int m:11; // mantissa, -1024..1023
    int e: 4; // exponent -8..7
    unsigned int f: 1; // format, 1->special emoint format
}    eint16;
//-----
unsigned short int float_to_eint16(float value)
{
    eint16 etmp;
    int dec=0;

    while (floor(value) != value && dec<16)
    {
        dec++; value*=10;
    }
    if (value>=0 && value<=32767 && dec==0)
        *(short int *)&etmp=(short int)value;
    else if (value>=-1000 && value<0 && dec==0)
    {
        etmp.e=0;
        etmp.f=1;
        etmp.m=(short int)value;
    }
    else
    {
        etmp.m=0;
        etmp.f=1;
        etmp.e=-dec;
        if (value>=0)
            etmp.m=1; // Set sign
        else
            etmp.m=-1; // Set sign
        value=fabs(value);
        while (value>1000)
        {
            etmp.e++; // increase exponent
            value=value/10;
        }
        value+=0.5; // round
        etmp.m=etmp.m*value; // make signed
    }
    return (*(unsigned short int *)&etmp);
}
//-----
float eint16_to_float(unsigned short int value)
{
    float f;
    eint16 evalue;

    evalue=*(eint16 *)&value;
    if (evalue.f)
    {
        if (evalue.e>=0)
            f=(int)evalue.m*pow10(evalue.e);
        else
            f=(int)evalue.m/pow10(abs(evalue.e));
    }
    else
        f=value;

    return f;
}
//-----
```

10. Operation via the Control Panel

This chapter describes how to use the control panel. The AC drive can be delivered with a control panel or a blank panel.

10.1 General

The control panel displays the status of the AC drive and is used to set all the parameters. It is also possible to control the motor directly from the control panel. The control panel can be built-in or located externally via serial communication. The AC drive can be ordered without the control panel. Instead of the control panel there will be a blank panel.

NOTE: The AC drive can run without the control panel being connected. However the settings must be such that all control signals are set for external use.

10.1.1 Two different control panels

There are two different control panels available for Emotron AC drives IP54 and IP20/21 versions. One with 4-line LCD display and one with a 2-line LCD display. Each described in chapter “10.2 Control panel with 4-line display” on page 75 and “10.3 Control panel with 2-line display” on page 80.

10.2 Control panel with 4-line display

This control panel with 4-line display is equipped with real time clock function. This means that actual date and time will be shown at e.g. a trip condition.

There is also an optional Control panel with Bluetooth communication available. See chapter “13. Options” on page 225 for more information.

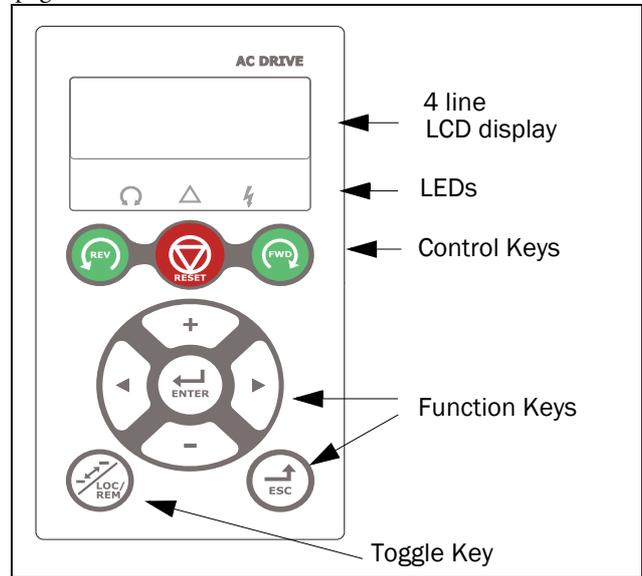


Fig. 78 Control panel with 4 line display, LEDs and Keys.

10.2.1 The display

The display is back lit and consists of 4 rows, each with space for 20 characters. The display is divided into following areas. The different areas in the display are described below:

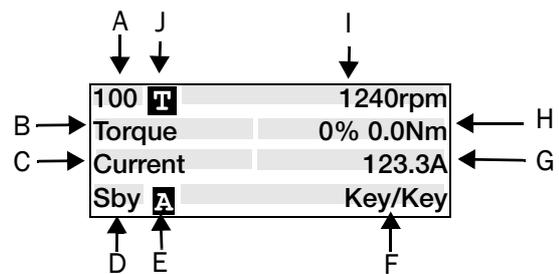


Fig. 79 The display

Area A: Shows the actual menu number (3 or 4 digits).

Area B: Menu name or heading (Except in menus 100+ mode), 8 characters field.

Area C: Edit Cursor if editing or heading in menu[100], 8 characters field.

Area D *: Shows the status of the AC drive (3 digits). The following status indications are possible:

Digits	Description	Bit*
Stp	Motor is stopped	0
Run	Motor runs	1
Acc	Acceleration	2
Dec	Deceleration	3
Trp	Tripped	4
SST	Operating Safe Stop, is flashing when activated	5
VL	Operating at voltage limit	6
SL	Operating at speed limit	7
CL	Operating at current limit	8
TL	Operating at torque limit	9
OT	Operating at temperature limit	10
I ² t	Active I ² t protection	11
LV	Operating at low voltage	12
Sby	Operating from Standby power supply	13
LCL	Operating with low cooling liquid level	14
Slp	Sleep mode	15
SPS	Spin start active	16

*) The status shown in Area D on the control panel can be read via a fieldbus or serial communication, e.g. using Modbus address nr 30053.

It is also possible to read all status indications, not just the highest prioritized one, via a fieldbus or serial communication, e.g. using Modbus address nr 30180 and 30182. This information is also shown in EmoSoftCom PC-tool (optional) see menu "Area D stat [72B]". Area I: Active Motor set M1 - M4 (Set in menu [212]).

Area E: Shows active parameter set: **A**, **B**, **C**, or **D** [241].

Area F: Active control source.

Area G: Parameter value, shows the setting or selection in the active menu, 12 characters field.

This area is empty at the 1st level and 2nd level menu. This area also shows warnings and alarm messages. In some situations this area could indicate "+++" or "---" see further information in the Instruction manual.

Area H: Signal values shown in menu [100], 12 characters field.

Area I: Preferred read-out value (chosen in menu [110])

Area J Shows if the menu is in the toggle loop and/or the AC drive is set for Local operation.

T = in Toggle loop

L T = in Local operation and Toggle loop

L = Local operation

NOTE:

In area B and area C only 8 characters are available, this means that some texts will be shortened.

Menu [100] Preferred view

This menu is displayed at every power-up. During operation, the menu [100] will automatically be displayed when the keyboard is not operated for 5 minutes.

Menu “[100] Preferred View” displays the settings made in menu “[110], 1st line”, “[120], 2nd line” and “[130], 3rd line”.

100 T	1240rpm	← First line - set in Menu[110].
Torque	0% 0.0Nm	← Second line - set in Menu[120]
Current	123.3A	← Third line - set in Menu[130]
Sby A	Key/Key	

Extended signal monitoring

If you hold the  key when in menu [100] following window will appear, as long as the key is pressed.

Here First, Second and Third line are shown as selected in menu [100].

Then additional information will be displayed, selected in the menus [140], [150] and [160] according to below.

100 T	0rpm	← First line - set in Menu[110].
3.9V	0.0A	← Second line - set in Menu[120].
0.0°C	0.0Hz	← Third line - set in Menu[130].
Sby A	A /Rem/Rem/--	← Fourth line - set in Menu[140]
		← Fifth line - set in Menu[150].
		← Sixth line - set in Menu[160]

Use menu “[170] View mode” to select active type of menu [100] presentation, select if “Normal 100” or “Always 100+” Extended signal monitoring” shall be shown at power-up. A third choice is menu “Normal100wo” = menu [100] without explaining text at second and third line.

10.2.2 Editing mode

All other menus (read and read/write menus) are used in following way.

221 T	1240rpm	← Shows Menu number to the left and to the right signal selected in menu [110].
Motor Volts		← Shows menu name to the left
M1	380V	← Shows menu value to the right and if it is a Motor parameter active Motor set (M1 in this case) is displayed to the left.
Run A	Key/Key	← Shows Drive status/Parameter set and Control source as in menu [100]

During editing, preferred view will not be displayed and the cursor will appear blinking to the left. See also below.

211 T		← Preferred view is not shown during editing.
Language	English	←  = blinking during editing
Run A	Loc/Loc	

10.2.3 Fault logger

As real-time clock is available, line 2 will show trip/warning message and line three will show date and time when the trip condition occurred.

810	1240rpm
Ext trip	
2017-01-25	12:34.40
Run	Rem/Rem

10.2.4 Real Time clock

In this 4 line Control panel (PPU) there is a built in Real time clock. This means that actual date and time will be shown at e.g. a trip condition. There is a built-in capacitor to be able to keep the clock running if the power disappear. In case of loss of power, the backup time for the Real time clock function is at least 60 days.

Actual date and time will be set from factory. Date and time is shown and can be set in following menus.

Clock [930]

This menu group displays actual time and date, read only. Time and date are factory set to CET (Central European mean time). Adjust if required in following sub-menus.

930	1240rpm
Clock	
2017-01-23	12:34.40
Run	Key/Key

Time [931]

Actual time, displayed as HH:MM:SS. Adjustable setting.

931	1240rpm
Time	
	12:34.40
Run	Key/Key

Unit	hh:mm:ss (hours: minutes: seconds)
------	------------------------------------

Date [932]

Actual date, displayed as YYYY-MM-DD. Adjustable setting.

932	1240rpm
Date	
	2017-01-23
Run	Key/Key

Unit:	YYYY-MM-DD (year-month-day)
-------	-----------------------------

Weekday [933]

Display of actual weekday, read only.

933	1240rpm
Weekday	
	Monday
Run	Key/Key

10.2.5 LED indicators

The symbols on the control panel have the following functions:

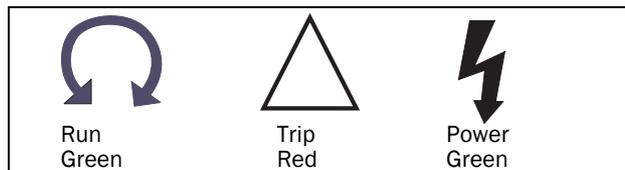


Fig. 80 LED indications

Table 27 LED indication

Symbol	Function		
	ON	FLASHING	OFF
POWER (green)	Power on	-----	Power off
TRIP (red)	AC drive tripped	Warning/Limit	No warning or trip
RUN (green)	Motor shaft rotates	Motor speed increase/decrease	Motor stopped

10.2.6 Control keys

The control keys are used to give the Run, Stop or Reset commands directly. As default these keys are disabled, set for remote control. Activate the control keys by selecting Keyboard in the menus “Ref Control [214]”, “Run/Stop Control [215]” and “Reset Ctrl [216]”.

If the Enable function is programmed on one of the digital inputs, this input must be active to allow Run/Stop commands from the control panel.

Table 28 Control keys

	RUN L:	gives a start with left rotation
	STOP/RESET:	stops the motor or resets the AC drive after a trip
	RUN R:	gives a start with right rotation

NOTE: It is not possible to simultaneously activate the Run/Stop commands from the keyboard and remotely from the terminal strip (terminals 1-22). Exception is the JOG-function which can give start command, see “Jog Speed [348]” on page 138.

10.2.7 The Toggle and Loc/Rem Key



This key has two functions: Toggle and switching between Loc/Rem function.

Press one second to use the toggle function

Press and hold the toggle key for more than five seconds to switch between Local and Remote function, depending on the settings in [2171] and [2172].

When editing values, the toggle key can be used to change the sign of the value, see section 10.6, page 84.

Toggle function

Using the toggle function makes it possible to easily step through selected menus in a loop. The toggle loop can contain a maximum of ten menus. As default the toggle loop contains the menus needed for Quick Setup. You can use the toggle loop to create a quick-menu for the parameters that are most importance to your specific application.

NOTE: Do not keep the Toggle key pressed for more than five seconds without pressing either the +, - or Esc key, as this may activate the Loc/Rem function of this key instead. See menu [217].

Add a menu to the toggle loop

1. Go to the menu you want to add to the loop.
2. Press the Toggle key and keep it pressed while pressing the + key.

Delete a menu from the toggle loop

1. Go to the menu you want to delete using the toggle key.
2. Press the Toggle key and keep it pressed while pressing the - key.

Delete all menus from the toggle loop

1. Press the Toggle key and keep it pressed while pressing the Esc key.
2. Confirm with Enter.

Default toggle loop

Fig. 81 shows the default toggle loop. This loop contains the necessary menus that need to be set before starting. Press Toggle to enter menu [211] then use the Next key to enter the sub menus [212] to [21A] and enter the parameters. When you press the Toggle key again, menu [221] is displayed.

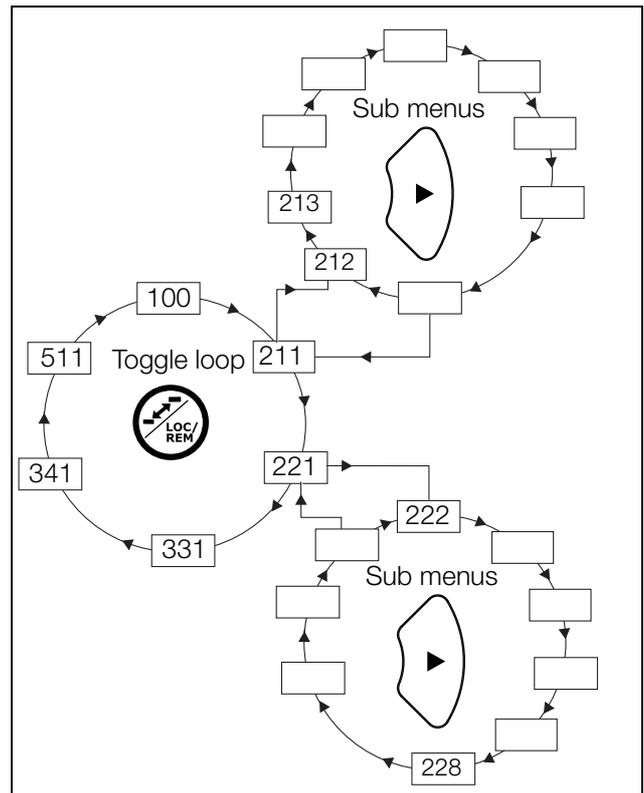


Fig. 81 Toggle loop example.

Indication of menus in toggle loop

Menus included in the toggle loop are indicated with a **T** in area B in the display.

Loc/Rem function

The Loc/Rem function of this key is disabled as default. Enable the function in menu [2171] and/or [2172].

With the function Loc/Rem you can change between local and remote control of the AC drive from the control panel. The function Loc/Rem can also be changed via the DigIn, see menu "Digital inputs [520]".

Change control mode

1. Press the Loc/Rem key for five seconds, until Local? or Remote? is displayed.
2. Confirm with Enter.
3. Cancel with Esc.

Local mode

Local mode is used for temporary operation. When switched to LOCAL operation, the AC drive is controlled via the defined Local operation mode, i.e. [2171] and [2172]. The actual status of the AC drive will not change, e.g. Run/Stop conditions and the actual speed will remain exactly the same. When the AC drive is set to Local operation, the display will show **T** in area B in the display.

Remote mode

When the AC drive is switched to REMOTE operation, the AC drive will be controlled according to selected control methods in the menu's "Reference Control [214]", "Run/Stop Control [215]" and "Reset Control [216]".

To monitor the actual Local or Remote status of the AC drive control, a "Loc/Rem" signal is available on the Digital Outputs or Relays. When the AC drive is set to Local, the signal on the DigOut or Relay will be active/high, in Remote the signal will be inactive/low. See menu "Digital Outputs [540]" and "Relays [550]".

10.2.8 Function keys

The function keys operate the menus and are also used for programming and read-outs of all the menu settings.

Table 29 Function keys

	ENTER key:	<ul style="list-style-type: none"> - step to a lower menu level - confirm a changed setting
	ESCAPE key:	<ul style="list-style-type: none"> - step to a higher menu level - ignore a changed setting, without confirming
	PREVIOUS key:	<ul style="list-style-type: none"> - step to a previous menu within the same level - go to more significant digit in edit mode
	NEXT key:	<ul style="list-style-type: none"> - step to a next menu within the same level - go to less significant digit in edit mode
	- key:	<ul style="list-style-type: none"> - decrease a value - change a selection
	+ key:	<ul style="list-style-type: none"> - increase a value - change a selection
	TOGGLE and LOC/REM key:	<ul style="list-style-type: none"> - Toggle between menus in the toggle loop - Switching between local and remote control - Change the sign of a value

10.3 Control panel with 2-line display

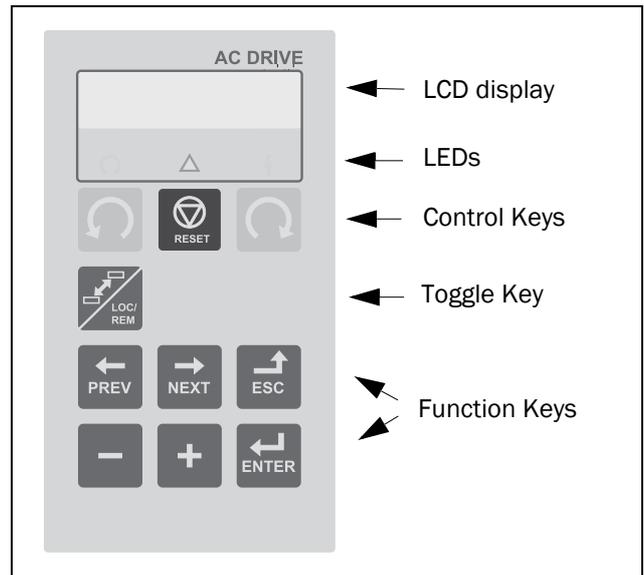


Fig. 82 Control panel display, LEDs and Keys.

10.3.1 The display

The display is back lit and consists of 2 rows, each with space for 16 characters. The display is divided into six areas.

The different areas in the display are described below:

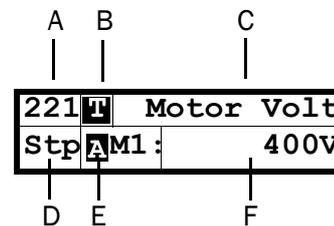


Fig. 83 The display

Area A: Shows the actual menu number (3 or 4 digits).

Area B: Shows if the menu is in the toggle loop or the AC drive is set for Local operation.

Area C: Shows the heading of the active menu.

Area D *: Shows the status of the AC drive (3 digits).

The following status indications are possible:

Digits	Description	Bit*
Stp	Motor is stopped	0
Run	Motor runs	1
Acc	Acceleration	2
Dec	Deceleration	3
Trp	Tripped	4
SST	Operating Safe Stop, is flashing when activated	5
VL	Operating at voltage limit	6
SL	Operating at speed limit	7
CL	Operating at current limit	8

Digits	Description	Bit*
TL	Operating at torque limit	9
OT	Operating at temperature limit	10
I ² t	Active I ² t protection	11
LV	Operating at low voltage	12
Sby	Operating from Standby power supply	13
LCL	Operating with low cooling liquid level	14
Slp	Sleep mode	15
SPS	Spin start active	16

*) The status shown in Area D on the control panel can be read via a fieldbus or serial communication, e.g. using Modbus address nr 30053.

It is also possible to read all status indications, not just the highest prioritized one, via a fieldbus or serial communication, e.g. using Modbus address nr 30180 and 30182. This information is also shown in EmoSoftCom PC-tool (optional) see menu "Area D stat [72B]".

Area E: Shows active parameter set and if it is a motor parameter.

Area F: Shows the setting or selection in the active menu. This area is empty at the 1st level and 2nd level menu. This area also shows warnings and alarm messages. In some situations this area could indicate "+++" or "---" please see further information in Chapter 10.3.2 page 81



Fig. 84 Example 1st level menu

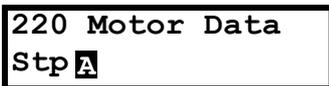


Fig. 85 Example 2nd level menu

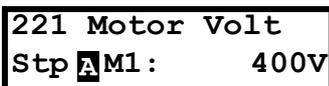


Fig. 86 Example 3d level menu



Fig. 87 Example 4th level menu

10.3.2 Indications on the display

The display can indicate "+++" or "---" if a parameter is out of range. In the AC drive there are parameters which are dependent on other parameters. For example, if the speed reference is 500 and the maximum speed value is set to a value below 500, this will be indicated with "+++" on the display. If the minimum speed value is set over 500, "---" is displayed.

10.3.3 LED indicators

The symbols on the control panel have the following functions:

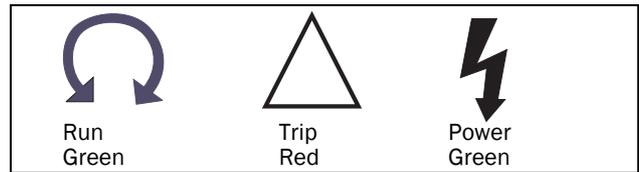


Fig. 88 LED indications

Table 30 LED indication

Symbol	Function		
	ON	FLASHING	OFF
POWER (green)	Power on	-----	Power off
TRIP (red)	AC drive tripped	Warning/Limit	No warning or trip
RUN (green)	Motor shaft rotates	Motor speed increase/decrease	Motor stopped

10.3.4 Control keys

The control keys are used to give the Run, Stop or Reset commands directly. As default these keys are disabled, set for remote control. Activate the control keys by selecting Keyboard in the menus "Ref Control [214]", "Run/Stop Control [215]" and "Reset Ctrl [216]".


If the Enable function is programmed on one of the digital inputs, this input must be active to allow Run/Stop commands from the control panel.

Table 31 Control keys

	RUN L:	gives a start with left rotation
	STOP/RESET:	stops the motor or resets the AC drive after a trip
	RUN R:	gives a start with right rotation

NOTE: It is not possible to simultaneously activate the Run/Stop commands from the keyboard and remotely from the terminal strip (terminals 1-22). Exception is the JOG-function which can give start command, see "Jog Speed [348]" on page 138.

10.3.5 The Toggle and Loc/Rem Key

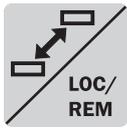

This key has two functions: Toggle and switching between Loc/Rem function.

Press one second to use the toggle function

Press and hold the toggle key for more than five seconds to switch between Local and Remote function, depending on the settings in [2171] and [2172].

When editing values, the toggle key can be used to change the sign of the value, see section 10.6, page 84.

Toggle function

Using the toggle function makes it possible to easily step through selected menus in a loop. The toggle loop can contain a maximum of ten menus. As default the toggle loop contains the menus needed for Quick Setup. You can use the toggle loop to create a quick-menu for the parameters that are most importance to your specific application.

NOTE: Do not keep the Toggle key pressed for more than five seconds without pressing either the +, - or Esc key, as this may activate the Loc/Rem function of this key instead. See menu [217].

Add a menu to the toggle loop

1. Go to the menu you want to add to the loop.
2. Press the Toggle key and keep it pressed while pressing the + key.

Delete a menu from the toggle loop

1. Go to the menu you want to delete using the toggle key.
2. Press the Toggle key and keep it pressed while pressing the - key.

Delete all menus from the toggle loop

1. Press the Toggle key and keep it pressed while pressing the Esc key.
2. Confirm with Enter.

Default toggle loop

Fig. 81 shows the default toggle loop. This loop contains the necessary menus that need to be set before starting. Press Toggle to enter menu [211] then use the Next key to enter the sub menus [212] to [21A] and enter the parameters. When you press the Toggle key again, menu [221] is displayed.

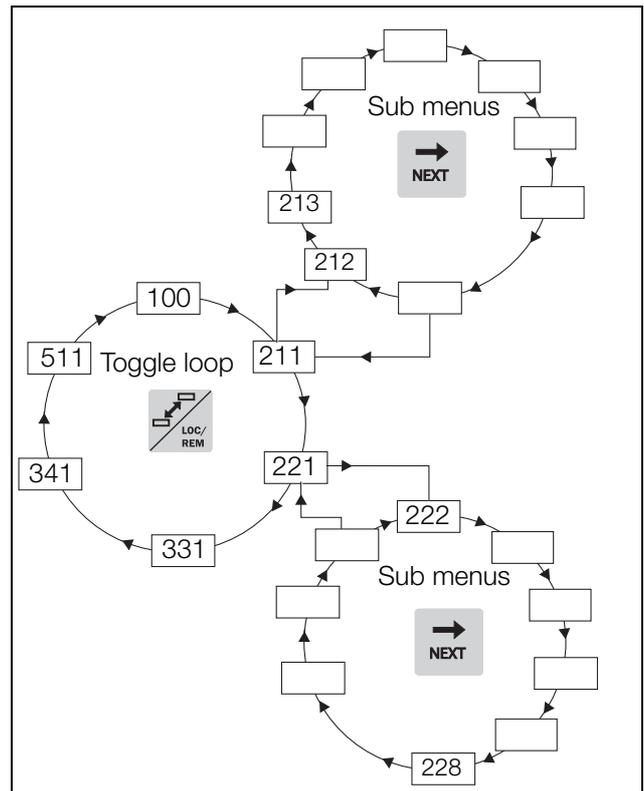


Fig. 89 Toggle loop example.

Indication of menus in toggle loop

Menus included in the toggle loop are indicated with a **T** in area B in the display.

Loc/Rem function

The Loc/Rem function of this key is disabled as default. Enable the function in menu [2171] and/or [2172].

With the function Loc/Rem you can change between local and remote control of the AC drive from the control panel. The function Loc/Rem can also be changed via the DigIn, see menu "Digital inputs [520]".

Change control mode

1. Press the Loc/Rem key for five seconds, until Local? or Remote? is displayed.
2. Confirm with Enter.
3. Cancel with Esc.

Local mode

Local mode is used for temporary operation. When switched to LOCAL operation, the AC drive is controlled via the defined Local operation mode, i.e. [2171] and [2172]. The actual status of the AC drive will not change, e.g. Run/Stop conditions and the actual speed will remain exactly the same. When the AC drive is set to Local operation, the display will show **T** in area B in the display.

Remote mode

When the AC drive is switched to REMOTE operation, the AC drive will be controlled according to selected control methods in the menu's "Reference Control [214]", "Run/Stop Control [215]" and "Reset Control [216]".

To monitor the actual Local or Remote status of the AC drive control, a "Loc/Rem" signal is available on the Digital Outputs or Relays. When the AC drive is set to Local, the signal on the DigOut or Relay will be active/high, in Remote the signal will be inactive/low. See menu "Digital Outputs [540]" and "Relays [550]".

10.3.6 Function keys

The function keys operate the menus and are also used for programming and read-outs of all the menu settings.

Table 32 Function keys

	ENTER key:	<ul style="list-style-type: none"> - step to a lower menu level - confirm a changed setting
	ESCAPE key:	<ul style="list-style-type: none"> - step to a higher menu level - ignore a changed setting, without confirming
	PREVIOUS key:	<ul style="list-style-type: none"> - step to a previous menu within the same level - go to more significant digit in edit mode
	NEXT key:	<ul style="list-style-type: none"> - step to a next menu within the same level - go to less significant digit in edit mode
	- key:	<ul style="list-style-type: none"> - decrease a value - change a selection
	+ key:	<ul style="list-style-type: none"> - increase a value - change a selection
	TOGGLE and LOC/REM key:	<ul style="list-style-type: none"> - Toggle between menus in the toggle loop - Switching between local and remote control - Change the sign of a value

10.4 The menu structure

The menu structure consists of 4 levels:

Main Menu 1st level	The first character in the menu number.
2nd level	The second character in the menu number.
3rd level	The third character in the menu number.
4th level	The fourth character in the menu number.

This structure is consequently independent of the number of menus per level.

For instance, a menu can have one selectable menu (Set/View Reference Value [310]), or it can have 17 selectable menus (menu Speeds [340]).

NOTE: If there are more than 10 menus within one level, the numbering continues in alphabetic order.

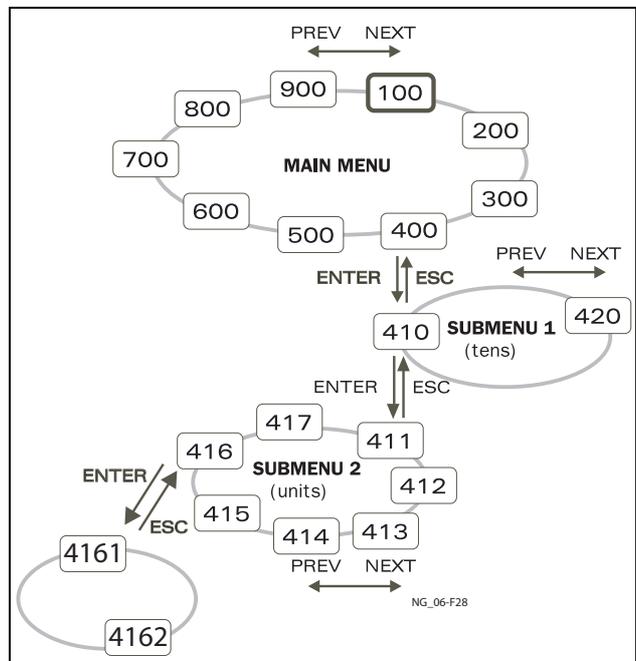


Fig. 90 Menu structure

10.4.1 The main menu

This section gives you a short description of the functions in the Main Menu.

100 Preferred View

Displayed at power-up. It displays the actual process value as default. Programmable for many other read-outs.

200 Main Setup

Main settings to get the AC drive operable. The motor data settings are the most important. Also option utility and settings.

300 Process and Application Parameters

Settings more relevant to the application such as Reference Speed, torque limitations, PID control settings, etc.

400 Shaft Power Monitor and Process Protection

The monitor function enables the AC drive to be used as a load monitor to protect machines and processes against mechanical overload and underload.

500 Inputs/Outputs and Virtual Connections

All settings for inputs and outputs are entered here.

600 Logical Functions and Timers

All settings for conditional signals are entered here.

700 View Operation and Status

Viewing all the operational data like frequency, load, power, current, etc.

800 View Trip Log

Viewing the last 10 trips in the trip memory.

900 Service Information and AC drive Data

Electronic type label for viewing the software version and AC drive type.

10.5 Programming during operation

Most of the parameters can be changed during operation without stopping the AC drive. Parameters that can not be changed are marked with a lock symbol in the display.

NOTE: If you try to change a function during operation that only can be changed when the motor is stopped, the message "Stop First" is displayed.

10.6 Editing values in a menu

Most values in the second row in a menu can be changed in two different ways. Enumerated values like the baud rate can only be changed with alternative 1.

2621	Baudrate
Stp	38400

Alternative 1

When you press the + or - keys to change a value, the cursor is flashing to the left in the display and the value is increased or decreased when you press the appropriate key. If you keep the + or - keys pressed, the value will increase or decrease continuously. When you keep the key pressed the change speed will increase. The Toggle key is used to change the sign of the entered value. The sign of the value will also change when zero is passed. Press Enter to confirm the value.

331	Acc Time
Stp A	2.00s

▲ Flashing

Alternative 2

Press the + or - key to enter edit mode. Then press the Prev or Next key to move the cursor to the right most position of the value that should be changed. The cursor will make the selected character flash. Move the cursor using the Prev or Next keys. When you press the + or - keys, the character at the cursor position will increase or decrease. This alternative is suitable when you want to make large changes, i.e. from 2 s to 400 s.

To change the sign of the value, press the toggle key. This makes it possible to enter negative values (Only valid for certain parameters).

Example: When you press Next the 4 will flash.

331	Acc Time
Stp A	4.00s

Flashing _____ ▲

Press Enter to save the setting and Esc to leave the edit mode.

10.7 Copy current parameter to all sets

When a parameter is displayed, press the Enter key for 5 seconds. Now the text To all sets? is displayed. Press Enter to copy the setting for current parameter to all sets.

10.8 Programming example

This example shows how to program a change of the Acc. Time set from 2.0 s to 4.0 s.

The flashing cursor indicates that a change has taken place but is not saved yet. If at this moment, the power fails, the change will not be saved.

Use the ESC, Prev, Next or the Toggle keys to proceed and to go to other menus.


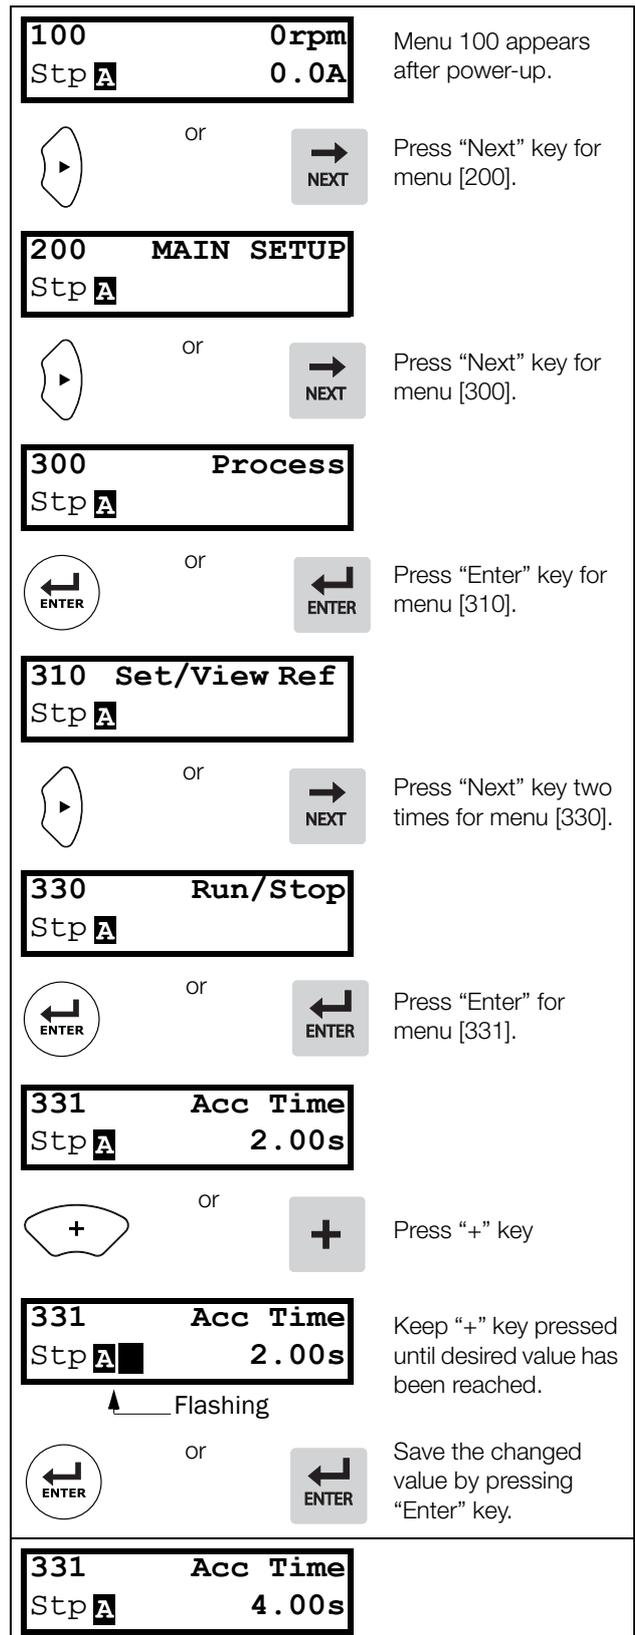


Fig. 91 Programming example

11. Functional Description

This chapter describes the menus and parameters in the software. It also briefly describes how menus and parameters are shown in the LCD windows in the two different Control panels that are available for Emotron AC drives versions IP54 and IP20/21.

There are two models of Control panels available with different LCD displays and layout.

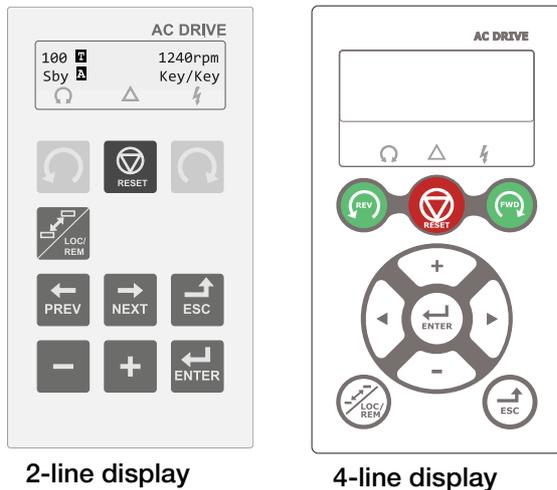

2-line display

4-line display

11.1 2-line LCD display

See chapter “10.3 Control panel with 2-line display” on page 80 for detailed information.



Preferred View [100]

This menu is displayed at every power-up. During operation, the menu [100] will automatically be displayed when the keyboard is not operated for 5 minutes. The automatic return function will be switched off when the Toggle and Stop key is pressed simultaneously. As default it displays the reference and torque values.



Menu “[100] Preferred View” displays the settings made in menu “[110], 1st line”, and “[120], 2nd line”. See Fig. 92.

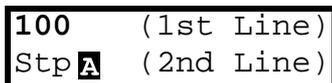


Fig. 92 Display functions

11.2 4-line LCD display

See chapter “10.2 Control panel with 4-line display” on page 75 for detailed information

100 	1240rpm
Torque	0% 0.0Nm
Current	123.3A
Sby 	Key/Key

Menu [100] Preferred view

This menu is displayed at every power-up. During operation, the menu [100] will automatically be displayed when the keyboard is not operated for 5 minutes.

Menu “[100] Preferred View” displays the settings made in menu “[110], 1st line”, “[120], 2nd line” and “[130], 3rd line”.

100 	1240rpm	←	First line - set in Menu[110].
Torque	0% 0.0Nm	←	Second line - set in Menu[120]
Current	123.3A	←	Third line - set in Menu[130]
Sby 	Key/Key		

Extended signal monitoring

If you hold the  key when in menu [100] following window will appear, as long as the key is pressed.

Here First, Second and Third line are shown as selected in menu [100].

Then additional information will be displayed, selected in the menus [140], [150] and [160] according to below.

100 	0rpm	←	First line - set in Menu[110].
3.9V	0.0A	←	Second line - set in Menu[120].
0.0°C	0.0Hz	←	Third line - set in Menu[130].
Sby 	 /Rem/Rem/--	←	Fourth line - set in Menu[140]
			Sixth line - set in Menu[160]

Use menu “[170] View mode” to select active type of menu [100] presentation, select if “Normal 100” or “Always 100+” Extended signal monitoring” shall be shown at power-up. A third choice is menu “Normal 100wo” = menu [100] without explaining text at second and third line.

11.3 Menus

Following chapters describes the menus and parameters in the software. You will find a short description of each function and information about default values, ranges, etc. There are also tables containing communication information. You will find the parameter number for all available fieldbus options as well as the enumeration for the data.

On our home page in the download area, you could find a "Communication information" list and a list to note "Parameter set" information.

NOTE: Functions marked with the sign  cannot be changed during Run Mode.

Description of menu table layout

Following two kinds of tables are used in this chapter.

332  ① Dec Time ③		
Read only  ②		
Default:		④
⑤	⑥	⑦

222  ① Motor Frequ ③	
Read-only  ②	
Default:	50% ④
Resolution	⑦

1. Parameter cannot be changed during operation.
2. Parameter only for viewing.
3. Menu information as displayed on control panel.
For explanation of display text and symbols, see Chapter 10. page 75.
4. Factory setting of parameter (also showed on display).
5. Available settings for the menu, listed selections.
6. Communication integer value for the selection.
For use with communication bus interface (only if selection type parameters).
7. Description of selection alternative, setting or range (min - max value).

Resolution of settings

The resolution for all range settings described in this chapter is 3 significant digits. Exceptions are speed values which are presented with 4 significant digits. Table 33 shows the resolutions for 3 significant digits.

Table 33

3 Digit	Resolution
0.01-9.99	0.01
10.0-99.9	0.1
100-999	1
1000-9990	10
10000-99900	100

11.3.1 1st Line [110]

Sets the content of the first line in the menu "[100] Preferred View."

110 1st Line		
Default:		Process Val
Dependent on menu		
Process Val	0	Process value
Speed	1	Speed
Torque	2	Torque
Process Ref	3	Process reference
Shaft Power	4	Shaft power
El Power	5	Electrical power
Current	6	Current
Output volt	7	Output voltage
Frequency	8	Frequency
DC Voltage	9	DC voltage
IGBT Temp	10	IGBT temperature
Motor Temp *	11	Motor temperature
VSD Status	12	AC drive status
Run Time	13	Run Time
Energy	14	Energy
Mains Time	15	Mains time

* The "Motor temp" is only visible if you have the option PTC/PT100 card installed and a PT100 input is selected in menu[236].

Communication information

Modbus Instance no/DeviceNet no:	43001
Profibus slot/index	168/160
EtherCAT and CANopen index (hex)	4bb9
Profinet IO index	19385
Fieldbus format	UInt
Modbus format	UInt

11.3.2 2nd Line [120]

Sets the content of the second line in the menu “[100] Preferred View”. Same selection as in menu [110].

120	2nd Line
Default:	Torque

Communication information

Modbus Instance no/DeviceNet no:	43002
Profibus slot/index	168/161
EtherCAT and CANopen index (hex)	4bba
Profinet IO index	19386
Fieldbus format	UInt
Modbus format	UInt

NOTE: Following menus [130] to [170] are only valid for the control panel with 4-line display.

11.3.3 3rd Line [130]

Sets the content of the third line in the menu “[100] Preferred View”. Same selection as in menu [110].

130	3rd Line
Default:	Frequency

Communication information

Modbus Instance no/DeviceNet no:	43003
Profibus slot/index	168/162
EtherCAT and CANopen index (hex)	4bbb
Profinet IO index	19387
Fieldbus format	
Modbus format	

11.3.4 4th Line [140]

Sets the content of the fourth line in the menu “[100] Preferred View”. Same selection as in menu [110].

140	4th Line
Default:	VSD Status

Communication information

Modbus Instance no/DeviceNet no:	43004
Profibus slot/index	168/163
EtherCAT and CANopen index (hex)	4bbc
Profinet IO index	19388
Fieldbus format	
Modbus format	

11.3.5 5th Line [150]

Sets the content of the fifth line in the menu “[100] Preferred View”. Same selection as in menu [110].

150	5th Line
Default:	DC Voltage

Communication information

Modbus Instance no/DeviceNet no:	43005
Profibus slot/index	168/164
EtherCAT and CANopen index (hex)	4bbd
Profinet IO index	19389
Fieldbus format	
Modbus format	

11.3.6 6th Line [160]

Sets the content of the sixth line in the menu “[100] Preferred View”. Same selection as in menu [110].

160	6th Line
Default:	IGBT Temp

Communication information

Modbus Instance no/DeviceNet no:	43006
Profibus slot/index	168/165
EtherCAT and CANopen index (hex)	4bbe
Profinet IO index	19390
Fieldbus format	
Modbus format	

11.3.7 View mode [170]

Select how menu [100] shall be displayed.

170	View mode
Default:	Normal 100
Normal 100	Preferred view as set in menu 110, 120, 130
Normal 100wo	As Normal 100 without text at second and third lines.
Always 100+	Extended signal monitoring as set in menus 110 - 160

Communication information

Modbus Instance no/DeviceNet no:	43007
Profibus slot/index	168/166
EtherCAT and CANopen index (hex)	4bbf
Profinet IO index	19391
Fieldbus format	
Modbus format	

11.4 Main Setup [200]

The Main Setup menu contains the most important settings to get the AC drive operational and set up for the application. It includes different sub menus concerning the control of the unit, motor data and protection, utilities and automatic resetting of faults. This menu will instantaneously be adapted to build in options and show the required settings.

11.4.1 Operation [210]

Selections concerning the used motor, AC drive mode, control signals and serial communication are described in this submenu and is used to set the AC drive up for the application.

Language [211]

Select the language used on the LC Display. Once the language is set, this selection will not be affected by the Load Default command.

There are two software sets with different languages available for delivery. “Standard software, Language set 1” and the optional “Standard software, Language set 2”, see table below and Fig. 1, page 9.

211		Language	Language set	
Default:		English	Set 1	Set 2
English	0	English selected	X	X
Svenska	1	Swedish selected	X	-
Nederlands	2	Dutch selected	X	-
Deutsch	3	German selected	X	X
Français	4	French selected	-	X
Español	5	Spanish selected	X	-
Русский	6	Russian selected	X	X
Italiano	7	Italian selected	X	-
Cesky	8	Czech selected	-	X
Turkish	9	Turkish selected	-	X
-	10	-	-	-
Polski	11	Polish selected		X

Communication information

Modbus Instance no/DeviceNet no:	43011
Profibus slot/index	168/170
EtherCAT and CANopen index (hex)	4bc3
Profinet IO index	19395
Fieldbus format	UInt
Modbus format	UInt

Select Motor [212]

This menu is used if you have more than one motor in your application. Select the motor to define. It is possible to define up to four different motors, M1 to M4, in the AC drive. For parameter set handling including Motor sets M1 - M4 see Chapter 11.4.6 page 108.

212 Select Motor		
Default:	M1	
M1	0	Motor Data is connected to selected motor.

212 Select Motor		
Default:	M1	
M1	0	Motor Data is connected to selected motor.
M2	1	
M3	2	
M4	3	

Communication information

Modbus Instance no/DeviceNet no:	43012
Profibus slot/index	168/171
EtherCAT and CANopen index (hex)	4bc4
Profinet IO index	19396
Fieldbus format	UInt
Modbus format	UInt

Drive Mode [213]

This menu is used to set the control mode for the motor. Settings for the reference signals and read-outs is made in menu "Process source, [321]".

- Speed Mode offers an accurate control of the motor speed independently of the load. The Speed mode also increases the accuracy of the different analogue output signals that are related to the motor speed. Speed mode can also be used if several motors of same type and size are connected in parallel. Requires all motors to be mechanically connected to the load.
- Torque Mode can be selected for applications where the motor shaft torque needs to be controlled independently of the speed.
- V/Hz Mode (output speed [712] in rpm) is used when several motors in parallel of different type or size are connected or if parallel motors are not mechanically connected to the load

213 Drive Mode		
Default:	Speed	
Speed	0	The AC drive is speed controlled. Reference given= speed reference with ramp. Speed and torque limits can be set. Using "direct torque control" as motor control method.
Torque	1	The AC drive is torque controlled. Reference given= torque reference without ramp. Speed and torque limit can be set. Using "direct torque control" as motor control method. NOTE: No ramps active in the AC drive. Care must be taken.
V/Hz	2	All control loops are related to frequency control. NOTE: All the functions and menu read-outs with regard to speed and rpm (e.g. Max Speed = 1500 rpm, Min Speed=0 rpm, etc.) remain speed and rpm, although they represent the output frequency.

Communication information

Modbus Instance no/DeviceNet no:	43013
Profibus slot/index	168/172
EtherCAT and CANopen index (hex)	4bc5
Profinet IO index	19397
Fieldbus format	UInt
Modbus format	UInt

Reference control [214]

To control the speed of the motor, the AC drive needs a reference signal. This reference signal can be controlled by a remote source from the installation, the keyboard of the AC drive, or by serial or fieldbus communication. Select the required reference control for the application in this menu.

214		Ref control	
Default:		Remote	
Remote	0	The reference signal comes from the analogue inputs of the terminal strip (terminals 1-22).	
Keyboard	1	Reference is set with the + and - keys on the Control Panel. Can only be done in menu "Set/View reference [310]".	
Com	2	The reference is set via the serial communication (RS 485, Fieldbus.) See section 9.5, page 72 for further information.	
Option	3	The reference is set via an option. Only available if the option can control the reference value.	

NOTE: If the reference is switched from Remote to Keyboard, the last remote reference value will be the default value for the control panel.

Communication information

Modbus Instance no/DeviceNet no:	43014
Profibus slot/index	168/173
EtherCAT and CANopen index (hex)	4bc6
Profinet IO index	19398
Fieldbus format	UInt
Modbus format	UInt

Run/Stop Control [215]

This function is used to select the source for run and stop commands. This is described on page 136.

Start/stop via analogue signals can be achieved by using function "Stp<MinSpd [342]".

215		Run/Stp Ctrl	
Default:		Remote	
Remote	0	The start/stop signal comes from the digital inputs of the terminal strip (terminals 1-22). For settings, see menu group [330] and [520].	
Keyboard	1	Start and stop is set on the Control Panel.	
Com	2	The start/stop is set via the serial communication (RS 485, Fieldbus.) See Fieldbus or RS232/485 option manual for details.	
Option	3	The start/stop is set via an option.	

Communication information

Modbus Instance no/DeviceNet no:	43015
Profibus slot/index	168/174
EtherCAT and CANopen index (hex)	4bc7
Profinet IO index	19399
Fieldbus format	UInt
Modbus format	UInt

Reset Control [216]

When the AC drive is stopped due to a failure, a reset command is required to make it possible to restart the AC drive. Use this function to select the source of the reset signal.

216 Reset Ctrl		
Default:		Remote
Remote	0	The command comes from the inputs of the terminal strip (terminals 1-22).
Keyboard	1	The command comes from the command keys of the Control Panel.
Com	2	The command comes from the serial communication (RS 485, Fieldbus).
Remote + Keyb	3	The command comes from the inputs of the terminal strip (terminals 1-22) or the keyboard.
Com + Keyb	4	The command comes from the serial communication (RS485, Fieldbus) or the keyboard.
Rem+Keyb +Com	5	The command comes from the inputs of the terminal strip (terminals 1-22), the keyboard or the serial communication (RS485, Fieldbus).
Option	6	The command comes from an option. Only available if the option can control the reset command.

Communication information

Modbus Instance no/DeviceNet no:	43016
Profibus slot/index	168/175
EtherCAT and CANopen index (hex)	4bc8
Profinet IO index	19400
Fieldbus format	UInt
Modbus format	UInt

Local/Remote key function [217]

The Toggle key on the keyboard, see section 10.2.7, page 79, has two functions and is activated in this menu. As default the key is just set to operate as a Toggle key that moves you easily through the menus in the toggle loop. The second function of the key allows you to easily swap between Local and normal operation (set up via [214] and [215]) of the AC drive. Local mode can also be activated via a digital input. If both [2171] and [2172] is set to Standard, the function is disabled.

2171 LocRefCtrl		
Default:		Standard
Standard	0	Local reference control set via [214]
Remote	1	Local reference control via remote
Keyboard	2	Local reference control via keyboard
Com	3	Local reference control via communication

Communication information

Modbus Instance no/DeviceNet no:	43009
Profibus slot/index	168/168
EtherCAT and CANopen index (hex)	4bc1
Profinet IO index	19393
Fieldbus format	UInt
Modbus format	UInt

2172 LocRunCtrl		
Default:		Standard
Standard	0	Local Run/Stop control set via [215]
Remote	1	Local Run/Stop control via remote
Keyboard	2	Local Run/Stop control via keyboard
Com	3	Local Run/Stop control via communication

Communication information

Modbus Instance no/DeviceNet no:	43010
Profibus slot/index	168/169
EtherCAT and CANopen index (hex)	4bc2
Profinet IO index	19394
Fieldbus format	UInt
Modbus format	UInt

Lock Code? [218]

To prevent the keyboard being used or to change the setup of the AC drive and/or process control, the keyboard can be locked with a password. This menu, “Lock Code [218]”, is used to lock and unlock the keyboard. Enter the password “291” to lock/unlock the keyboard operation. If the keyboard is not locked (default) the selection “Lock Code?” will appear. If the keyboard is already locked, the selection “Unlock Code?” will appear.

When the keyboard is locked, parameters can be viewed but not changed. The reference value can be changed and the AC drive can be started, stopped and reversed if these functions are set to be controlled from the keyboard.

218 Lock code?	
Default:	0
Range:	0–9999

Communication information

Modbus Instance no/DeviceNet no:	43018
Profibus slot/index	168/177
EtherCAT and CANopen index (hex)	4bca
Profinet IO index	19402
Fieldbus format	UInt, 1=1
Modbus format	UInt

Rotation [219]

Overall limitation of motor rotation direction

This function limits the overall rotation, either to left or right or both directions. This limit is prior to all other selections, e.g.: if the rotation is limited to right, a Run-Left command will be ignored. To define left and right rotation we assume that the motor is connected U-U, V-V and W-W.

Speed Direction and Rotation

The speed direction can be controlled by:

- RunR/RunL commands on the control panel.
- RunR/RunL commands on the terminal strip (terminals 1-22).
- Via the serial interface options.
- The parameter sets.

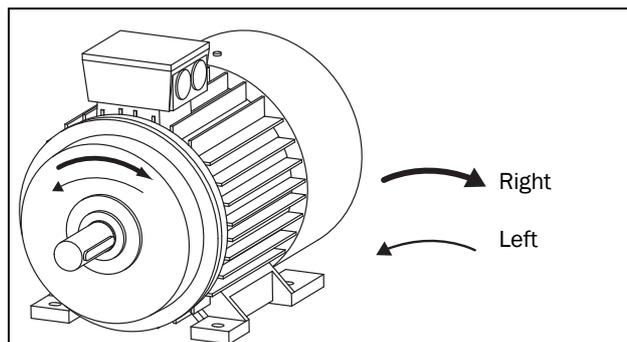


Fig. 93 Rotation

In this menu you set the general rotation for the motor.

219 Rotation		
Default:	R + L	
R	1	Speed direction is limited to right rotation. The input and key RunL are disabled.
L	2	Speed direction is limited to left rotation. The input and key RunR are disabled.
R+L	3	Both speed directions allowed.

Communication information

Modbus Instance no/DeviceNet no:	43019
Profibus slot/index	168/178
EtherCAT and CANopen index (hex)	4bcb
Profinet IO index	19403
Fieldbus format	UInt
Modbus format	UInt

11.4.2 Remote Signal Level/Edge [21A]

In this menu you select the way to control the inputs for RunR, RunL and Reset that are operated via the digital inputs on the terminal strip. The inputs are default set for level-control, and will be active as long as the input is made and kept high. When edge-control is selected, the input will be activated by the low to high transition of the input. See Chapter 7.2 page 64 for more information.

21A		Level/Edge
Default:		Level
Level	0	The inputs are activated or deactivated by a continuous high or low signal. Is commonly used if, for example, a PLC is used to operate the AC drive.
Edge	1	The inputs are activated by a transition; for Run and Reset from "low" to "high" and for Stop from "high" to "low".

Communication information

Modbus Instance no/DeviceNet no:	43020
Profibus slot/index	168/179
EtherCAT and CANopen index (hex)	4bcc
Profinet IO index	19404
Fieldbus format	UInt
Modbus format	UInt



CAUTION!
Level controlled inputs **DO NOT** comply with the Machine Directive if the inputs are directly used to start and stop the machine.

NOTE: Edge controlled inputs can comply with the Machine Directive (see the Chapter 8. page 69) if the inputs are directly used to start and stop the machine.

11.4.3 Mains supply voltage [21B]



WARNING!
This menu must be set according to the AC drive product label and the supply voltage used. Wrong setting might damage the AC drive or brake resistor.

In this menu the nominal mains supply voltage connected to the AC drive can be selected. The setting will be valid for all parameter sets. The default setting, Not defined, is never selectable and is only visible until a new value is selected.

This menu specifies the AC supply voltage. The corresponding DC voltage is 1.34 times higher.

Once the supply voltage is set, this selection will not be affected by the Load Default command [243].

Brake chopper activation level is adjusted using the setting of [21B].

NOTE: The setting is affected by the "Load from CP" command [245] and if loading parameter file via EmoSoftCom.

21B		Supply Volts
Default:		Not defined
Not Defined	0	Inverter default value used. Only valid if this parameter is never set.
220-240 VAC	1	Only valid for VFX48/52
380-415 VAC	3	Only valid for VFX48/52/69
440-480 VAC	4	Only valid for VFX48/52/69
500-525 VAC	5	Only valid for VFX52/69
550-600 VAC	6	Only valid for VFX69
660-690 VAC	7	Only valid for VFX69

Communication information

Modbus Instance no/DeviceNet no:	43381
Profibus slot/index	170/30
EtherCAT and CANopen index (hex)	4d35
Profinet IO index	19765
Fieldbus format	UInt
Modbus format	UInt

Supply Type [21C]

Set supply voltage type.

21C Supply Type		
Default:		AC Supply
AC Supply	0	Normal AC supply
AFE Supply	1	DC supply voltage by AFE
DC Supply	2	DC supply voltage
AC/DC Suppl	3	AC/DC supply voltage

Communication information

Modbus Instance no/DeviceNet no:	43382
Profibus slot/index	170/31
EtherCAT and CANopen index (hex)	4d36
Profinet IO index	19766
Fieldbus format	UInt
Modbus format	UInt

When changing to / from the “AFE Supply” selection, the following parameters are set to following values:

Menu	to AFE	from AFE
[523] DigIn 3	Sleep	Off
[542] DigOut 3	Run	Brake
[527] DigIn 7	Off	Off
[561] VIO 1 Dest	External Trip	Off
[562] VIO 1 Source	!D1	Off
[6151] CD 1	DigIn 7	Run

11.4.4 Motor Data [220]

In this menu you enter the motor data to adapt the AC drive to the connected motor. This is crucial for the control accuracy as well as different read-outs and analogue output signals.

Emotron VFX AC drive can control both Asynchronous motors and Permanent magnet synchronous motor (PMSM) select type of motor in menu [22I].



WARNING!

Do not work on a drive when a rotating Permanent Magnet synchronous motor is connected to it. A rotating PMSM motor energizes the drive including its power terminals.

Motor M1 is selected as default and motor data entered will be valid for motor M1. If you have more than one motor you need to select the correct motor in menu [212] before entering motor data.

NOTE 1: The parameters for motor data cannot be changed during run mode.

NOTE 2: The default settings are for a standard 4-pole motor according to the nominal power of the AC drive.

NOTE 3: Parameter set cannot be changed during run if the parameter set is set for different motors.

NOTE 4: Motor Data in the different sets M1 to M4 can be revert to default setting in menu “[243] Default>Set”.



WARNING!

Enter the correct motor data to prevent dangerous situations and assure correct control.

Motor Voltage [221]

Set the nominal motor voltage.

221 ⚙️ Motor Volts	
Default:	400 V for VFX48 500 V for VFX52 690 V for VFX 69
Range:	100-700 V
Resolution	1 V

NOTE: The Motor Volts value will always be stored as a 3 digit value with a resolution of 1 V.

Communication information

Modbus Instance no/DeviceNet no:	43041
Profibus slot/index	168/200
EtherCAT and CANopen index (hex)	4be1
Profinet IO index	19425
Fieldbus format	Long, 1=0.1 V
Modbus format	Elnt

Motor Frequency [222]

Set the nominal motor frequency.

222  Motor Freq	
Default:	50 Hz
Range:	20.0 - 300.0 Hz
Resolution	0.1 Hz

Communication information

Modbus Instance no/DeviceNet no:	43060 = 0.1	43042 = 1
Profibus slot/index	168/219	168/201
EtherCAT and CANopen index (hex)	4bf4	4be2
Profinet IO index	19444	19426
Fieldbus format	Long, 1=0.1 Hz	Long, 1=1 Hz
Modbus format	Elnt	Elnt

Motor Power [223]

Set the nominal motor power. If parallel motors, set the value as sum of motors power. The nominal motorpower must be within the range of 1 - 150% of the AC drives nominal power.

223  Motor Power	
Default:	(P_{NOM}) kW, AC drive
Range:	1-150 % x P_{NOM}
Resolution	3 significant digits

NOTE: The Motor Power value will always be stored as a 3 digit value in W up to 999 W and in kW for all higher powers.

Communication information

Modbus Instance no/DeviceNet no:	43043
Profibus slot/index	168/202
EtherCAT and CANopen index (hex)	4be3
Profinet IO index	19427
Fieldbus format	Long, 1=1 W
Modbus format	Elnt

P_{NOM} is the nominal AC drive power.

Motor Current [224]

Set the nominal motor current. If parallel motors, set the value as sum of motors current.

224  Motor Curr	
Default:	(I_{MOT}) A (see Note 2 page 97)
Range:	25 - 150% x I_{NOM} A

Communication information

Modbus Instance no/DeviceNet no:	43044
Profibus slot/index	168/203
EtherCAT and CANopen index (hex)	4be4
Profinet IO index	19428
Fieldbus format	Long, 1=0.1 A
Modbus format	Elnt

NOTE: The default settings are for a standard 4-pole motor according to the nominal power of the AC drive.



WARNING!

Do not connect motors with less than 25% of the nominal power of the AC drive. This may disrupt the control of the motor.

Motor Speed [225]

Set the nominal asynchronous motor speed.

225  Motor Speed	
Default:	(n _{MOT}) rpm (see Note 2 page 97)
Range:	30 - 18000 rpm
Resolution	1 rpm, 4 sign digits



WARNING!
Do NOT enter a synchronous (no-load) motor speed.

NOTE: Maximum speed [343] is not automatically changed when the motor speed is changed.

NOTE: Entering a wrong, too low value can cause a dangerous situation for the driven application due to high speeds.

Communication information

Modbus Instance no/DeviceNet no:	43045
Profibus slot/index	168/204
EtherCAT and CANopen index (hex)	4be5
Profinet IO index	19429
Fieldbus format	UInt, 1=1 rpm
Modbus format	UInt

Motor Poles [226]

When the nominal speed of the motor is ≤ 500 rpm, the additional menu for entering the number of poles, [226], appears automatically. In this menu the actual pole number can be set which will increase the control accuracy of the AC drive.

226  Motor Poles	
Default:	4
Range:	2-144

Communication information

Modbus Instance no/DeviceNet no:	43046
Profibus slot/index	168/205
EtherCAT and CANopen index (hex)	4be6
Profinet IO index	19430
Fieldbus format	Long, 1=1 pole
Modbus format	Elnt

Motor Cos φ [227]

Set the nominal Motor cosphi (power factor).

227  Motor Cos φ	
Default:	Cos φ _{NOM} (see Note 2 page 97)
Range:	0.45 - 1.00

Communication information

Modbus Instance no/DeviceNet no:	43047
Profibus slot/index	168/206
EtherCAT and CANopen index (hex)	4be7
Profinet IO index	19431
Fieldbus format	Long, 1=0.01
Modbus format	Elnt

Motor ventilation [228]

Parameter for setting the type of motor ventilation. Affects the characteristics of the I²t motor protection by lowering the actual overload current at lower speeds.

228  Motor Vent		
Default:	Self	
None	0	Limited I ² t overload curve.
Self	1	Normal I ² t overload curve. Means that the motor stands lower current at low speed.
Forced	2	Expanded I ² t overload curve. Means that the motor stands almost the whole current also at lower speed.

Communication information

Modbus Instance no/DeviceNet no:	43048
Profibus slot/index	168/207
EtherCAT and CANopen index (hex)	4be8
Profinet IO index	19432
Fieldbus format	UInt
Modbus format	UInt

When the motor has no cooling fan, None is selected and the current level is limited to 55% of rated motor current.

With a motor with a shaft mounted fan, Self is selected and the current for overload is limited to 87% from 20% of synchronous speed. At lower speed, the overload current allowed will be smaller.

When the motor has an external cooling fan, Forced is selected and the overload current allowed starts at 90% from rated motor current at zero speed, up to nominal motor current at 70% of synchronous speed.

Fig. 94 shows the characteristics with respect for Nominal Current and Speed in relation to the motor ventilation type selected.

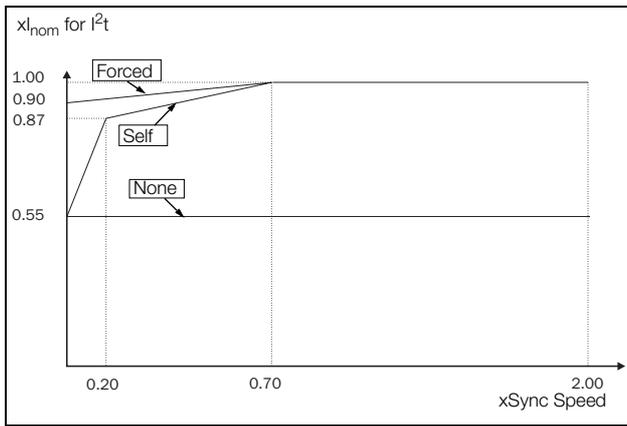


Fig. 94 I^2t curves

Motor Identification Run [229]

This function is used when the AC drive is put into operation for the first time. To achieve an optimal control performance, fine tuning of the motor parameters using a motor ID run is needed. During the test run the display shows “Test Run” flashing.

To activate the Motor ID run, select either “Short” or “Extended” and press Enter. Then press RunL or RunR on the control panel to start the ID run. If menu “[219] Rotation” is set to L the RunR key is inactive and vice versa. The ID run can be aborted by giving a Stop command via the control panel or Enable input. The parameter will automatically return to OFF when the test is completed. The message “Test Run OK!” is displayed. Before the AC drive can be operated normally again, press the STOP/RESET key on the control panel.

During the Short ID run the motor shaft does not rotate. The AC drive measures the rotor and stator resistance.

During the Extended ID run the motor is powered on and rotates. The AC drive measures the rotor and stator resistance as well as the induction and the inertia for the motor.

229		Motor ID-Run
Default:	Off, see Note	
Off	0	Not active
Short	1	Parameters are measured with injected DC current. No rotation of the shaft will occur.
Extended	2	Additional measurements, not possible to perform with DC current, are done directly after a short ID run. The shaft will rotate and must be disconnected from the load.

Communication information

Modbus Instance no/DeviceNet no:	43049
Profibus slot/index	168/208
EtherCAT and CANopen index (hex)	4be9
Profinet IO index	19433
Fieldbus format	UInt
Modbus format	UInt



WARNING!

During the extended ID RUN, the motor will rotate. Take safety measures to avoid unforeseen dangerous situations.

NOTE: To run the AC drive it is not mandatory for the ID RUN to be executed, but without it the performance will not be optimal.

NOTE: If the ID Run is aborted or not completed the message “Interrupted!” will be displayed. The previous data do not need to be changed in this case. Check that the motor data are correct.

Encoder Feedback [22B]

Only visible if the Encoder option board is installed. This parameter enables or disables the encoder feedback from the motor to the AC drive.

22B		Encoder
Default:	Off	
Off	0	Encoder feedback disabled
On	1	Encoder feedback enabled

Communication information

Modbus Instance no/DeviceNet no:	43051
Profibus slot/index	168/210
EtherCAT and CANopen index (hex)	4beb
Profinet IO index	19435
Fieldbus format	UInt
Modbus format	UInt

Encoder Pulses [22C]

Only visible if the Encoder option board is installed. This parameter describes the number of pulses per rotation for your encoder, i.e. it is encoder specific. For more information please see the encoder manual.

22C		Enc Pulses
Default:	1024	
Range:	5–16384	

Communication information

Modbus Instance no/DeviceNet no:	43052
Profibus slot/index	168/211
EtherCAT and CANopen index (hex)	4bec
Profinet IO index	19436
Fieldbus format	Long, 1=1 pulse
Modbus format	Elnt

Encoder Speed [22D]

Only visible if the Encoder option board is installed. This parameter shows the measured motor speed. To check if the encoder is correctly installed, set Encoder Feedback [22B] to Off, run the AC drive at any speed and compare with the value in this menu. The value in this menu [22D] should be about the same as the motor speed [230]. If you get the wrong sign for the value, swap encoder input A and B.

22D Enc Speed	
Unit:	rpm
Resolution:	speed measured via the encoder

Communication information

Modbus Instance no/DeviceNet no:	42911
Profibus slot/index	168/70
EtherCAT and CANopen index (hex)	4b5f
Profinet IO index	19295
Fieldbus format	Int, 1=1 rpm
Modbus format	Int

Encoder Pulse counter [22F]

Only visible if the Encoder option is installed. Added menu/parameter for accumulated QEP (Quadrature Encoder Pulse) encoder pulses. Can be preset to any value within bus format used (Int = 2 byte, Long = 4 byte).

22F Enc Puls Ctr	
Default:	0
Resolution	1

Communication information

Modbus Instance no/DeviceNet no:	42912
Profibus slot/index	168/71
EtherCAT and CANopen index (hex)	4b60
Profinet IO index	19296
Fieldbus format	Long, 1=1 quad encoder pulse
Modbus format	Int

Note: For a 1024 pulse encoder [22F] will count $1024 * 4 = 4096$ pulses per turn.

Encoder fault and speed monitoring [22G]

Parameters for encoder fault monitoring and speed supervision by use of the encoder feedback for detecting speed deviation compared to internal speed reference signal. Similar speed deviation functionality is also available in the Crane option, with parameters for speed bandwidth and delay time.

Encoder fault trip conditions:

1. No encoder board detected after power up and AC drive is setup to use encoder.
2. Lost communication to encoder board for more than 2 seconds.
3. If no pulses detected for set delay time [22G1] and drive in Torque Limit (TL) or Current Limit (CL).

Note: If encoder signals are missing or encoder cable disconnected, the measured speed will then be 0 rpm and the AC drive will run with Torque Limit (TL) at very low speed.

Note: Other likely scenarios when encoder signals are lost during operation are tripped drive due to "Overcurrent Fast" or "Desat".

Encoder speed deviation trip condition:

Encoder speed outside set speed deviation band [22G2] for set delay time [22G1].

Note: Encoder speed deviation trip re-uses "Deviation 2" trip message with ID = 2.

Encoder fault delay time [22G1]

Define the encoder fault and speed deviation delay time.

22G1 Enc F Delay	
Default:	Off
Range	Off, 0.01 - 10.00 s where Off = 0

Communication information

Modbus Instance no/DeviceNet no:	43056
Profibus slot/index	168/215
EtherCAT and CANopen index (hex)	4bf0
Profinet IO index	19440
Fieldbus format	Long, 1=0.01 s
Modbus format	Elnt

Encoder fault speed deviation band [22G2]

Defines the max allowed speed deviation band = difference between measured encoder speed and speed ramp output.

22G2 Enc F Band	
Default:	10%
Range	0 - 400 %

Communication information

Modbus Instance no/DeviceNet no:	43057
Profibus slot/index	168/216
EtherCAT and CANopen index (hex)	4bf1
Profinet IO index	19441
Fieldbus format	Long, 1=1 %
Modbus format	Elnt

Encoder max fault counter [22G3]

This is a measured signal showing the maximum time that the speed deviation has exceeded the allowed speed deviation band level, set in [22G2]. The parameter is intended to be used during commissioning for setting up [22G1] and [22G2] to avoid nuisance trips and can be cleared by setting it to 0.

22G3 Max EncFCtr	
Default:	0.000s
Range	0.00 - 10.00 s

Communication information

Modbus Instance no/DeviceNet no:	42913
Profibus slot/index	168/78
EtherCAT and CANopen index (hex)	4b61
Profinet IO index	19297
Fieldbus format	Long, 1=0.001s
Modbus format	Elnt

NOTE: The value is volatile and lost at power down. It is possible to reset the value by clearing the parameter.

Phase order [22H]

Phase sequence for motor output. In this menu you can correct rotation direction on the motor by selecting "reverse" instead of switching the motor cables..

22H Phase order		
Default:	Normal	
Normal	0	Normal phase order (U,V,W)
Reverse	1	Reverse phase order (U, W, V)

Communication information

Modbus Instance no/DeviceNet no:	43058
Profibus slot/index	168/217
EtherCAT and CANopen index (hex)	4bf2
Profinet IO index	19442
Fieldbus format	Uln
Modbus format	Uln

Motor type [22I]

In this menu select type of motor. Emotron AC drives can control Asynchronous motors, Permanent Magnet Synchronous Motor and Synchronous Reluctance Motors.

22I Motor Type		
Default:	Async	
Async	0	Asynchronous motor
PMSM	1	Permanent magnet synchronous motor
Sync Rel	2	Synchronous Reluctance motor

Communication information

Modbus Instance no/DeviceNet no:	43059
Profibus slot/index	168/218
EtherCAT and CANopen index (hex)	4bf3
Profinet IO index	19443
Fieldbus format	Uln
Modbus format	Uln

NOTE: If PMSM is selected in menu [22I], following will be set automatically:

- **Menu "Spin start [33A] "will be hidden. Means that spinstart is not possible.**

If the voltage mentioned on the permanent magnet motor type plate is given as a voltage per speed (no-load voltage/"xx rpm"), e.g. 205V/1000 rpm, the "Motor Voltage" for a nominal synchronous speed of 1500 rpm then can be calculated according to following example:

Motor synchronous speed = 1500 rpm

No-load voltage = 205V/1000rpm

Calculation of Motor Voltage setting:

$MotorVoltage[22I]=$

$$\left(\frac{N_{motorsynchronous}}{N_{motornoload}} \right) \times NoLoadVoltage$$

$$MotorVoltage[221] = \left(\frac{1500rpm}{1000rpm}\right) \times 205V = 307V$$

Note: The “Motor Voltage” is not equal to the Equivalent DC Motor (EDCM) voltage as specified by some motor manufacturers. The “Motor Voltage” setting then can be calculated by:

$$MotorVoltage[221] = \frac{EDCM}{\sqrt{3}}V$$

Extend data [22J]

Additional motor parameters for Permanent Magnet Synchronous Motors (PMSM) and Synchronous Reluctance motors.

This menu is only available if PMSM or Sync Rel is selected in menu [22I].

BEMF [22J1]

Set the back EMF of the motor at the nominal operating point. This parameter may not be explicitly available from the manufacturer, but can then be computed from the electrical constant Ke and the nominal speed.

22J1 BEMF	
Default:	Motor dependent
Range:	100-700 V
Resolution	1 V

Communication information

Modbus Instance no/DeviceNet no:	43391
Profibus slot/index	170/40
EtherCAT and CANopen index (hex)	4d3f
Profinet IO index	19775
Fieldbus format	Long, 1=0.1V
Modbus format	Elnt

Rs (Ω/ph) [22J2]

Set the per phase resistance.

22J2 Rs (Ω/ph)	
Default:	Undef
Undef	Undefined
Range:	0.000001-40.000000 ohm

Communication information

Modbus Instance no/DeviceNet no:	43392
Profibus slot/index	170/41
EtherCAT and CANopen index (hex)	4d40
Profinet IO index	19776
Fieldbus format	Long, 1=0.000001
Modbus format	Elnt

Lsd (mH/ph) [22J3]

Set the per phase d-axis inductance.

22J3 Lsd (mH/ph)	
Default:	Undef
Undef	Undefined
Range:	0.001-10000.000 mH

Communication information

Modbus Instance no/DeviceNet no:	43393
Profibus slot/index	170/42
EtherCAT and CANopen index (hex)	4d41
Profinet IO index	19777
Fieldbus format	Long, 1=0.001
Modbus format	Elnt

Lsq (mH/ph) [22J4]

Set the per phase q-axis inductance.

22J4 Lsq (mH/ph)	
Default:	Undef
Undef	Undefined
Range:	0.001-10000.000 mH

Communication information

Modbus Instance no/DeviceNet no:	43394
Profibus slot/index	170/43
EtherCAT and CANopen index (hex)	4d42
Profinet IO index	19778
Fieldbus format	Long, 1=0.001
Modbus format	Elnt

11.4.5 Motor Protection [230]

This function protects the motor against overload based on the standard IEC 60947-4-2.

Motor I²t Type [231]

The motor protection function makes it possible to protect the motor from overload as published in the standard IEC 60947-4-2. It does this using “Motor I²t Current [232]” as a reference. The “Motor I²t Time [233]” is used to define the time behaviour of the function. The current set in [232] can be delivered infinite in time. If for instance in [233] a time of 1000 s is chosen the upper curve of Fig. 95 is valid. The value on the x-axis is the multiple of the current chosen in [232]. The time [233] is the time that an overloaded motor is switched off or is reduced in power at 1.2 times the current set in [232].

231		Mot I ² t Type	
Default:		Trip	
Off	0	I ² t motor protection is not active.	
Trip	1	When the I ² t time is exceeded, the AC drive will trip on “Motor I ² t”.	
Limit	2	This mode helps to keep the inverter running when the Motor I ² t function is just before tripping the AC drive. The trip is replaced by current limiting with a maximum current level set by the value out of the menu [232]. In this way, if the reduced current can drive the load, the AC drive continues running. If there is no reduction in thermal load, the drive will trip.	

Communication information

Modbus Instance no/DeviceNet no:	43061
Profibus slot/index	168/220
EtherCAT and CANopen index (hex)	4bf5
Profinet IO index	19445
Fieldbus format	UInt
Modbus format	UInt

NOTE: When Mot I²t Type=Limit, the AC drive can control the speed < MinSpeed to reduce the motor current.

Motor I²t Current [232]

Sets the current limit for the motor I²t protection in percent of I_{MOT}.

232		Mot I ² t Curr	
Default:		100% of I _{MOT}	
Range:		0–150% of I _{MOT} (set in menu [224])	

Communication information

Modbus Instance no/DeviceNet no:	43062
Profibus slot/index	168/221
EtherCAT and CANopen index (hex)	4bf6
Profinet IO index	19446
Fieldbus format	Long, 1=1%
Modbus format	Elnt

NOTE: When the selection Limit is set in menu [231], the value must be above the no-load current of the motor.

Motor I²t Time [233]

Sets the time of the I²t function. After this time the limit for the I²t is reached if operating with 120% of the I²t current value. Valid when start from 0 rpm.

NOTE: Not the time constant of the motor.

233		Mot I ² t Time	
Default:		60 s	
Range:		60–1200 s	

Communication information

Modbus Instance no/DeviceNet no:	43063
Profibus slot/index	168/222
EtherCAT and CANopen index (hex)	4bf7
Profinet IO index	19447
Fieldbus format	Long, 1=1 s
Modbus format	Elnt

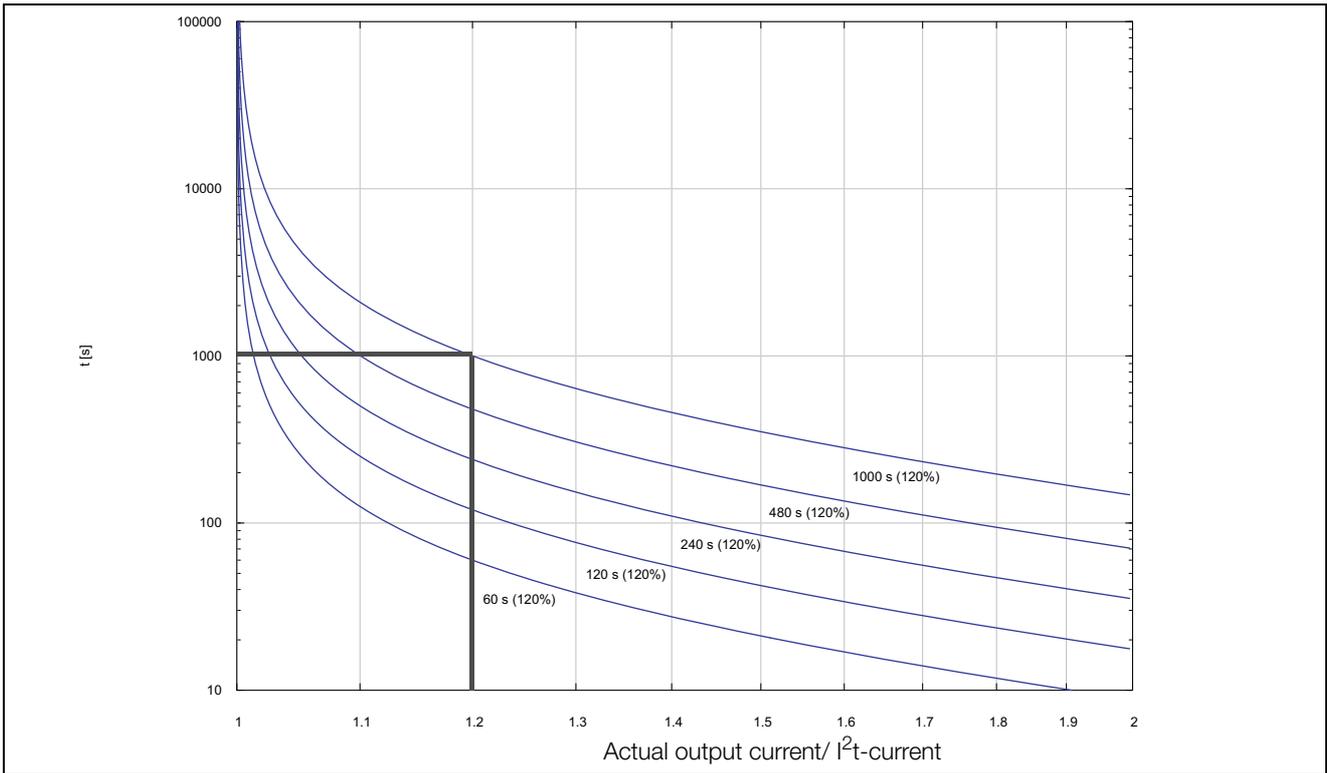


Fig. 95 I^2t function

Fig. 95 shows how the function integrates the square of the motor current according to the “Mot I^2t Curr [232]” and the “Mot I^2t Time [233]”.

When the selection Trip is set in menu [231] the AC drive trips if this limit is exceeded.

When the selection Limit is set in menu [231] the AC drive reduces the torque if the integrated value is 95% or closer to the limit, so that the limit cannot be exceeded.

NOTE: If it is not possible to reduce the current, the AC drive will trip after exceeding 110% of the limit.

Example

In Fig. 95 the thick grey line shows the following example.

- Menu “[232] Mot I^2t Curr” is set to 100%.
1.2 x 100% = 120%
- Menu “[233] Mot I^2t Time” is set to 1000 s.

This means that the AC drive will trip or reduce the current (depending on the setting in menu [231]) after 1000 s if the current is 1.2 times of 100% nominal motor current.

Thermal Protection [234]

This menu selects active sensors for PTC motor protection and activates/deactivates PT100 motor protection. Select active PT100 sensors in menu [236]. The PTC sensor connected to the first board is activated if two boards are installed but only one PTC sensor is activated.

Only visible if one or two PTC/PT100 option boards are installed. The motor thermistors (PTC) must comply with DIN 44081/44082. Please refer to the manual for the PTC/PT100 option board.

234 Thermal Prot		
Default:		Off
Off	0	PTC and PT100 motor protection are disabled.
1xPTC	1	Activates one PTC sensor.
PT100	2	Activates PT100 protection.
1xPTC+ PT100	3	Activate one PTC sensor and PT100 protection.
2xPTC	4	Activates two PTC sensors.
2xPTC+ PT100	5	Activates PTC sensors and PT100 protection.

Communication information

Modbus Instance no/DeviceNet no:	43064
Profibus slot/index	168/223
EtherCAT and CANopen index (hex)	4bf8
Profinet IO index	19448
Fieldbus format	UInt
Modbus format	UInt

NOTE: PTC option and PT100 selections can only be selected in menu [234] if one or two option boards are mounted.

NOTE: If you select the PTC option, the PT100 inputs as motor protection are ignored.

Motor Class [235]

Only visible if the PTC/PT100 option board is installed. Set the class of motor used. The trip levels for the PT100 sensor will automatically be set according to the setting in this menu.

235 Mot Class		
Default:		F 140°C
A 100°C	0	
E 115°C	1	
B 120°C	2	
F 140°C	3	
F Nema 145°C	4	
H 165°C	5	

Communication information

Modbus Instance no/DeviceNet no:	43065
Profibus slot/index	168/224
EtherCAT and CANopen index (hex)	4bf9
Profinet IO index	19449
Fieldbus format	UInt
Modbus format	UInt

NOTE: This menu is only valid for PT 100.

PT100 Inputs [236]

Sets which of PT100 inputs (3 inputs per board) that should be used for thermal protection. Deselecting not used PT100 inputs on the PTC/PT100 option board in order to ignore those inputs, i.e. extra external wiring is not needed if port is not used.

236 PT100 Inputs		
Default:		PT100 1+2+3
Selection:		PT100 1, PT100 2, PT100 1+2, PT100 3, PT100 1+3, PT100 2+3, PT100 1+2+3, PT100 1-4, PT100 1-5, PT100 1-6
PT100 1	1	Channel 1 used for PT100 protection
PT100 2	2	Channel 2 used for PT100 protection
PT100 1+2	3	Channel 1+2 used for PT100 protection
PT100 3	4	Channel 3 used for PT100 protection
PT100 1+3	5	Channel 1+3 used for PT100 protection
PT100 2+3	6	Channel 2+3 used for PT100 protection
PT100 1+2+3	7	Channel 1+2+3 used for PT100 protection

PT100 1-4	8	Channel 1 - 4 used for PT100 protection
PT100 1-5	9	Channel 1 - 5 used for PT100 protection
PT100 1-6	10	Channel 1 - 6 used for PT100 protection

Communication information

Modbus Instance no/DeviceNet no:	43066
Profibus slot/index	168/225
EtherCAT and CANopen index (hex)	4bfa
Profinet IO index	19450
Fieldbus format	UInt
Modbus format	UInt

NOTE: This menu is only active if PT100 is enabled in menu [234].

Motor PTC [237]

For AC drive sizes B to D (VFX48/52-003--074), C2 & D2 (VFX48-025--105), C69 & D69 (VFX69-002--058-54) and C2(69) & D2(69) (VFX69-002--058-20) there is optional possibility to directly connect motor PTC (not to be mixed up with PTC/PT100 option board, see Chapter 13.10 page 229).

In this menu the internal motor PTC hardware option is activated. This PTC input complies with DIN 44081/44082. For electrical specification please refer to the separate manual for the PTC/PT100 option board, same data applies (could be found on www.emotron.com/www.cgglobal.com).

This menu is only visible if a PTC (or resistor <2 kOhm) is connected to terminals X1: 78–79. See Chapter 4.5 page 51 and Chapter 4.5.1 page 51.

NOTE: This function is not related to PTC/PT100 option board.

To enable the function:

1. Connect the thermistor wires to X1: 78–79 or for testing the input, connect a resistor to the terminals . Use a resistor value between 50 and 2000 ohm. Menu [237] will now appear.
2. Activate input by setting menu “[237] Motor PTC”=On.

If activated and <50 ohm a sensor error trip will occur. The fault message “Motor PTC” is shown.

If the function is disabled and the PTC or resistor is removed, the menu will disappear after the next power on.

237 Motor PTC		
Default:		Off
Off	0	Motor PTC protection is deactivated
On	1	Motor PTC protection is activated

Communication information

Modbus Instance no/DeviceNet no:	43067
Profibus slot/index	168/226
EtherCAT and CANopen index (hex)	4bfb
Profinet IO index	19451
Fieldbus format	UInt
Modbus format	UInt

11.4.6 Parameter Set Handling [240]

There are four different parameter sets available in the AC drive. These parameter sets can be used to set the AC drive up for different processes or applications such as different motors used and connected, activated PID controller, different ramp time settings, etc.

A parameter set consists of all parameters with the exception of the Global parameters. The Global parameters are only able to have one value for all parameter sets.

Following parameters are Global: [211] Language, [217] Local Remote, [218] Lock Code, [220] Motor Data, [241] Select Set, [260] Serial Communication and [21B]Mains Supply Voltage .

NOTE: Actual timers are common for all sets. When a set is changed the timer functionality will change according to the new set, but the timer value will stay unchanged.

Select Set [241]

Here you select the parameter set. Every menu included in the parameter sets is designated A, B, C or D depending on the active parameter set. Parameter sets can be selected from the keyboard, via the programmable digital inputs or via serial communication. Parameter sets can be changed during the run. If the sets are using different motors (M1 to M4) the set will be changed only when the motor is stopped.

241		Select Set
Default:		A
Selection:		A, B, C, D, DigIn, Com, Option
A	0	Fixed selection of one of the 4 parameter sets A, B, C or D.
B	1	
C	2	
D	3	
DigIn	4	Parameter set is selected via a digital input. Define which digital input in menu "[520] Digital inputs".
Com	5	Parameter set is selected via serial communication.
Option	6	The parameter set is set via an option. Only available if the option can control the selection.

Communication information

Modbus Instance no/DeviceNet no:	43022
Profibus slot/index	168/181
EtherCAT and CANopen index (hex)	4bce
Profinet IO index	19406
Fieldbus format	UInt
Modbus format	UInt

The active set can be viewed with function [721] VSD status.

NOTE: Parameter set cannot be changed during run if the parameter set includes change of the motor set (M2-M4). In this case always stop the motor before changing parameter set.

Prepare parameter Set when different Motor data M1 - M4:

1. Select desired parameter Set to be set in [241] A - D.
2. Select "Motor Set [212]" if other than the default Set M1.
3. Set relevant motor data in the Menu group [220].
4. Set other desired parameter settings to belong to this parameter Set.

To prepare a Set for another motor, repeat these steps.

Copy Set [242]

This function copies the content of a parameter set into another parameter set.

242		Copy Set
Default:		A>B
A>B	0	Copy set A to set B
A>C	1	Copy set A to set C
A>D	2	Copy set A to set D
B>A	3	Copy set B to set A
B>C	4	Copy set B to set C
B>D	5	Copy set B to set D
C>A	6	Copy set C to set A
C>B	7	Copy set C to set B
C>D	8	Copy set C to set D
D>A	9	Copy set D to set A
D>B	10	Copy set D to set B
D>C	11	Copy set D to set C

Communication information

Modbus Instance no/DeviceNet no:	43021
Profibus slot/index	168/180
EtherCAT and CANopen index (hex)	4bcd
Profinet IO index	19405
Fieldbus format	UInt
Modbus format	UInt

NOTE: The actual value of menu [310] will not be copied into the other set.

A>B means that the content of parameter set A is copied into parameter set B.

Load Default Values Into Set [243]

With this function three different levels (factory settings) can be selected for the four parameter sets. When loading the default settings, all changes made in the software are set to factory settings. This function also includes selections for loading default settings to the four different Motor Data Sets.

243		Default>Set
Default:		A
A	0	Only the selected parameter set will revert to its default settings.
B	1	
C	2	
D	3	
ABCD	4	All four parameter sets will revert to the default settings.
Factory	5	All settings, except [211], [221]-[228], [261], [3A1] and [923], will revert to the default settings.
M1	6	Only the selected motor set will revert to its default settings.
M2	7	
M3	8	
M4	9	
M1234	10	All four motor sets will revert to default settings.

Communication information

Modbus Instance no/DeviceNet no:	43023
Profibus slot/index	168/182
EtherCAT and CANopen index (hex)	4bcf
Profinet IO index	19407
Fieldbus format	UInt
Modbus format	UInt

NOTE: Trip log hour counter and other VIEW ONLY menus are not regarded as settings and will be unaffected.

NOTE: If "Factory" is selected, the message "Sure?" is displayed. Press the + key to display "Yes" and then Enter to confirm.

NOTE: The parameters in menu "[220] Motor data", are not affected by loading defaults when restoring parameter sets A-D.

Copy All Settings to Control Panel [244]

All the settings can be copied into the control panel including the motor data. Start commands will be ignored during copying.

244  Copy to CP		
Default:		No Copy
No Copy	0	Nothing will be copied
Copy	1	Copy all settings

Communication information

Modbus Instance no/DeviceNet no:	43024
Profibus slot/index	168/183
EtherCAT and CANopen index (hex)	4bd0
Profinet IO index	19408
Fieldbus format	UInt
Modbus format	UInt

NOTE: The actual value of menu [310] will not be copied into control panel memory set.

Load Settings from Control Panel [245]

This function can load all four parameter sets from the control panel to the AC drive. Parameter sets from the source AC drive are copied to all parameter sets in the target AC drive, i.e. A to A, B to B, C to C and D to D.

Start commands will be ignored during loading.

245  Load from CP		
Default:		No Copy
No Copy	0	Nothing will be loaded.
A	1	Data from parameter set A is loaded.
B	2	Data from parameter set B is loaded.
C	3	Data from parameter set C is loaded.
D	4	Data from parameter set D is loaded.
ABCD	5	Data from parameter sets A, B, C and D are loaded.
A+Mot	6	Parameter set A and Motor data are loaded.
B+Mot	7	Parameter set B and Motor data are loaded.
C+Mot	8	Parameter set C and Motor data are loaded.
D+Mot	9	Parameter set D and Motor data are loaded.
ABCD+Motor	10	Parameter sets A, B, C, D and Motor data are loaded.
M1	11	Data from motor 1 is loaded.
M2	12	Data from motor 2 is loaded.
M3	13	Data from motor 3 is loaded.
M4	14	Data from motor 4 is loaded.
M1M2M3M4	15	Data from motor 1, 2, 3 and 4 are loaded.
All	16	All data is loaded from the control panel.

Communication information

Modbus Instance no/DeviceNet no:	43025
Profibus slot/index	168/184
EtherCAT and CANopen index (hex)	4bd1
Profinet IO index	19409
Fieldbus format	UInt
Modbus format	UInt

NOTE: Loading from the control panel will not affect the value in menu [310].

11.4.7 Trip Autoreset/Trip Conditions [250]

The benefit of this feature is that occasional trips that do not affect the process will be automatically reset. Only when the failure keeps on coming back, recurring at defined times and therefore cannot be solved by the AC drive, will the unit give an alarm to inform the operator that attention is required.

For all trip functions that can be activated by the user you can select to control the motor down to zero speed according to set deceleration ramp to avoid water hammer.

Also see section 12.2, page 218.

Autoreset example:

In an application it is known that the main supply voltage sometimes disappears for a very short time, a so-called “dip”. That will cause the AC drive to trip an “Undervoltage alarm”. Using the Autoreset function, this trip will be acknowledged automatically.

- Enable the Autoreset function by making the reset input continuously high.
- Activate the Autoreset function in the menu [251], Number of trips.
- Select in menu [259] Undervoltage the trip conditions that shall be allowed to be automatically reset by the Autoreset function, after the set delay time has expired.

Number of Trips [251]

Any number set above 0 activates the Autoreset. This means that after a trip, the AC drive will restart automatically according to the number of attempts selected. No restart attempts will take place unless all conditions are normal.

If the Autoreset counter (not visible) contains more trips than the selected number of attempts, the Autoreset cycle will be interrupted. No Autoreset will then take place.

If there are no trips for more than 10 minutes, the Autoreset counter decreases by one.

If the maximum number of trips has been reached, the trip message hour counter is marked with an “A”. A normal reset is then required.

Example:

- Number of allowed autoreset attempts [251]= 5.
- Within 10 minutes 6 trips occur.
- At the 6th trip there is no autoreset, because the autoreset counter is set to allow only 5 attempts to autoreset a trip.
- To reset the autoreset counter, give a new reset command (from one of the sources for reset control selected in menu [216]).
- The autoreset counter is now zeroed.

251 No of Trips	
Default:	0 (no Autoreset)
Range:	0–10 attempts

Communication information

Modbus Instance no/DeviceNet no:	43071
Profibus slot/index	168/230
EtherCAT and CANopen index (hex)	4bff
Profinet IO index	19455
Fieldbus format	UInt, 1=1
Modbus format	UInt

NOTE: An auto reset is delayed by the remaining ramp time.

Over temperature [252]

Delay time starts counting when the fault is gone. When the time delay has elapsed, the alarm will be reset if the function is active.

252 Over temp		
Default:		Off
Off	0	Off
1–3600	1–3600	1–3600 s

Communication information

Modbus Instance no/DeviceNet no:	43072
Profibus slot/index	168/231
EtherCAT and CANopen index (hex)	4c00
Profinet IO index	19456
Fieldbus format	Long, 1=1 s
Modbus format	Elnt

NOTE: An auto reset is delayed by the remaining ramp time.

Over volt D [253]

Delay time starts counting when the fault is gone. When the time delay has elapsed, the alarm will be reset if the function is active.

253 Over volt D		
Default:		Off
Off	0	Off
1–3600	1–3600	1–3600 s

Communication information

Modbus Instance no/DeviceNet no:	43075
Profibus slot/index	168/234
EtherCAT and CANopen index (hex)	4c03
Profinet IO index	19459
Fieldbus format	Long, 1=1 s
Modbus format	Elnt

NOTE: An auto reset is delayed by the remaining ramp time.

Over volt G [254]

Delay time starts counting when the fault is gone. When the time delay has elapsed, the alarm will be reset if the function is active.

254 Over volt G		
Default:		Off
Off	0	Off
1–3600	1–3600	1–3600 s

Communication information

Modbus Instance no/DeviceNet no:	43076
Profibus slot/index	168/235
EtherCAT and CANopen index (hex)	4c04
Profinet IO index	19460
Fieldbus format	Long, 1=1 s
Modbus format	Elnt

Over volt [255]

Delay time starts counting when the fault is gone. When the time delay has elapsed, the alarm will be reset if the function is active.

255 Over volt		
Default:		Off
Off	0	Off
1–3600	1–3600	1–3600 s

Communication information

Modbus Instance no/DeviceNet no:	43077
Profibus slot/index	168/236
EtherCAT and CANopen index (hex)	4c05
Profinet IO index	19461
Fieldbus format	Long, 1=1 s
Modbus format	Elnt

Motor Lost [256]

Delay time starts counting when the fault is gone. When the time delay has elapsed, the alarm will be reset if the function is active.

256 Motor Lost		
Default:	Off	
Off	0	Off
1-3600	1-3600	1-3600 s

NOTE: Only visible when Motor Lost is selected in menu [423].

Communication information

Modbus Instance no/DeviceNet no:	43083
Profibus slot/index	168/242
EtherCAT and CANopen index (hex)	4c0b
Profinet IO index	19467
Fieldbus format	Long, 1=1 s
Modbus format	Elnt

Locked Rotor [257]

Delay time starts counting when the fault is gone. When the time delay has elapsed, the alarm will be reset if the function is active.

257 Locked Rotor		
Default:	Off	
Off	0	Off
1-3600	1-3600	1-3600 s

Communication information

Modbus Instance no/DeviceNet no:	43086
Profibus slot/index	168/245
EtherCAT and CANopen index (hex)	4c0e
Profinet IO index	19470
Fieldbus format	Long, 1=1 s
Modbus format	Elnt

Power Fault [258]

Delay time starts counting when the fault is gone. When the time delay has elapsed, the alarm will be reset if the function is active.

258 Power Fault		
Default:	Off	
Off	0	Off
1-3600	1-3600	1-3600 s

Communication information

Modbus Instance no/DeviceNet no:	43087
Profibus slot/index	168/246
EtherCAT and CANopen index (hex)	4c0f
Profinet IO index	19471
Fieldbus format	Long, 1=1 s
Modbus format	Elnt

Undervoltage [259]

Delay time starts counting when the fault is gone. When the time delay has elapsed, the alarm will be reset if the function is active.

259 Undervoltage		
Default:	Off	
Off	0	Off
1-3600	1-3600	1-3600 s

Communication information

Modbus Instance no/DeviceNet no:	43088
Profibus slot/index	168/247
EtherCAT and CANopen index (hex)	4c10
Profinet IO index	19472
Fieldbus format	Long, 1=1 s
Modbus format	Elnt

Motor I²t [25A]

Delay time starts counting when the fault is gone. When the time delay has elapsed, the alarm will be reset if the function is active.

25A Motor I ² t		
Default:	Off	
Off	0	Off
1-3600	1-3600	1-3600 s

Communication information

Modbus Instance no/DeviceNet no:	43073
Profibus slot/index	168/232
EtherCAT and CANopen index (hex)	4c01
Profinet IO index	19457
Fieldbus format	Long, 1=1 s
Modbus format	Elnt

Motor I²t Trip Type [25B]

Select the preferred way to react to a Motor I²t trip.

25B Motor I ² t TT		
Default:	Trip	
Trip	0	The motor will coast
Deceleration	1	The motor will decelerate

Communication information

Modbus Instance no/DeviceNet no:	43074
Profibus slot/index	168/233
EtherCAT and CANopen index (hex)	4c02
Profinet IO index	19458
Fieldbus format	UInt
Modbus format	UInt

PT100 [25C]

Delay time starts counting when the fault is gone. When the time delay has elapsed, the alarm will be reset if the function is active.

25C PT100		
Default:	Off	
Off	0	Off
1–3600	1–3600	1–3600 s

Communication information

Modbus Instance no/DeviceNet no:	43078
Profibus slot/index	168/237
EtherCAT and CANopen index (hex)	4c06
Profinet IO index	19462
Fieldbus format	Long, 1=1 s
Modbus format	Elnt

PT100 Trip Type [25D]

Delay time starts counting when the fault is gone. When the time delay has elapsed, the alarm will be reset if the function is active.

25D PT100 TT		
Default:	Trip	
Selection:	Same as menu [25B]	

Communication information

Modbus Instance no/DeviceNet no:	43079
Profibus slot/index	168/238
EtherCAT and CANopen index (hex)	4c07
Profinet IO index	19463
Fieldbus format	UInt
Modbus format	UInt

PTC [25E]

Delay time starts counting when the fault is gone. When the time delay has elapsed, the alarm will be reset if the function is active.

25E PTC		
Default:	Off	
Off	0	Off
1–3600	1–3600	1–3600 s

Communication information

Modbus Instance no/DeviceNet no:	43084
Profibus slot/index	168/243
EtherCAT and CANopen index (hex)	4c0c
Profinet IO index	19468
Fieldbus format	Long, 1=1 s
Modbus format	Elnt

PTC Trip Type [25F]

Select the preferred way to react to a PTC trip.

25F PTC TT		
Default:	Trip	
Selection:	Same as menu [25B]	

Communication information

Modbus Instance no/DeviceNet no:	43085
Profibus slot/index	168/244
EtherCAT and CANopen index (hex)	4c0d
Profinet IO index	19469
Fieldbus format	UInt
Modbus format	UInt

External Trip [25G]

Delay time starts counting when the fault is gone. When the time delay has elapsed, the alarm will be reset if the function is active.

25G Ext Trip		
Default:	Off	
Off	0	Off
1–3600	1–3600	1–3600 s

Communication information

Modbus Instance no/DeviceNet no:	43080
Profibus slot/index	168/239
EtherCAT and CANopen index (hex)	4c08
Profinet IO index	19464
Fieldbus format	Long, 1=1 s
Modbus format	Elnt

External Trip Type [25H]

Select the preferred way to react to an alarm trip.

25H Ext Trip TT	
Default:	Trip
Selection:	Same as menu [25B]

Communication information

Modbus Instance no/DeviceNet no:	43081
Profibus slot/index	168/240
EtherCAT and CANopen index (hex)	4c09
Profinet IO index	19465
Fieldbus format	UInt
Modbus format	UInt

Communication Error [25I]

Delay time starts counting when the fault is gone. When the time delay has elapsed, the alarm will be reset if the function is active.

25I Com Error		
Default:	Off	
Off	0	Off
1-3600	1-3600	1-3600 s

Communication information

Modbus Instance no/DeviceNet no:	43089
Profibus slot/index	168/248
EtherCAT and CANopen index (hex)	4c11
Profinet IO index	19473
Fieldbus format	Long, 1=1 s
Modbus format	Elnt

Communication Error Trip Type [25J]

Select the preferred way to react to a communication trip.

25J Com Error TT	
Default:	Trip
Selection:	Same as menu [25B]

Communication information

Modbus Instance no/DeviceNet no:	43090
Profibus slot/index	168/249
EtherCAT and CANopen index (hex)	4c12
Profinet IO index	19474
Fieldbus format	UInt
Modbus format	UInt

Min Alarm [25K]

Delay time starts counting when the fault is gone. When the time delay has elapsed, the alarm will be reset if the function is active.

25K Min Alarm		
Default:	Off	
Off	0	Off
1-3600	1-3600	1-3600 s

Communication information

Modbus Instance no/DeviceNet no:	43091
Profibus slot/index	168/250
EtherCAT and CANopen index (hex)	4c13
Profinet IO index	19475
Fieldbus format	Long, 1=1 s
Modbus format	Elnt

Min Alarm Trip Type [25L]

Select the preferred way to react to a min alarm trip.

25L Min Alarm TT	
Default:	Trip
Selection:	Same as menu [25B]

Communication information

Modbus Instance no/DeviceNet no:	43092
Profibus slot/index	168/251
EtherCAT and CANopen index (hex)	4c14
Profinet IO index	19476
Fieldbus format	UInt
Modbus format	UInt

Max Alarm [25M]

Delay time starts counting when the fault is gone. When the time delay has elapsed, the alarm will be reset if the function is active.

25M Max Alarm		
Default:	Off	
Off	0	Off
1-3600	1-3600	1-3600 s

Communication information

Modbus Instance no/DeviceNet no:	43093
Profibus slot/index	168/252
EtherCAT and CANopen index (hex)	4c15
Profinet IO index	19477
Fieldbus format	Long, 1=1 s
Modbus format	Elnt

Max Alarm Trip Type [25N]

Select the preferred way to react to a max alarm trip.

25N Max Alarm TT	
Default:	Trip
Selection:	Same as menu [25B]

Communication information

Modbus Instance no/DeviceNet no:	43094
Profibus slot/index	168/253
EtherCAT and CANopen index (hex)	4c16
Profinet IO index	19478
Fieldbus format	UInt
Modbus format	UInt

Over current F [25O]

Delay time starts counting when the fault is gone. When the time delay has elapsed, the alarm will be reset if the function is active.

25O Over curr F		
Default:	Off	
Off	0	Off
1-3600	1-3600	1-3600 s

Communication information

Modbus Instance no/DeviceNet no:	43082
Profibus slot/index	168/241
EtherCAT and CANopen index (hex)	4c0a
Profinet IO index	19466
Fieldbus format	Long, 1=1 s
Modbus format	Elnt

Pump [25P]

Delay time starts counting when the fault is gone. When the time delay has elapsed, the alarm will be reset if the function is active.

25P Pump		
Default:	Off	
Off	0	Off
1-3600	1-3600	1-3600 s

Communication information

Modbus Instance no/DeviceNet no:	43095
Profibus slot/index	168/254
EtherCAT and CANopen index (hex)	4c17
Profinet IO index	19479
Fieldbus format	Long, 1=1 s
Modbus format	Elnt

Over Speed [25Q]

Delay time starts counting when the fault is gone. When the time delay has elapsed, the alarm will be reset if the function is active.

25Q Over speed		
Default:	Off	
Off	0	Off
1-3600	1-3600	1-3600 s

Communication information

Modbus Instance no/DeviceNet no:	43096
Profibus slot/index	169/0
EtherCAT and CANopen index (hex)	4c18
Profinet IO index	19480
Fieldbus format	Long, 1=1 s
Modbus format	Elnt

External Motor Temperature [25R]

Delay time starts counting when the fault disappears. When the time delay has elapsed, the alarm will be reset if the function is active.

25R Ext Mot Temp		
Default:	Off	
Off	0	Off
1-3600	1-3600	1-3600 s

Communication information

Modbus Instance no/DeviceNet no:	43097
Profibus slot/index	168/239
EtherCAT and CANopen index (hex)	4c19
Profinet IO index	19481
Fieldbus format	Long, 1=1 s
Modbus format	Elnt

External Motor Trip Type [25S]

Select the preferred way to react to an alarm trip.

25S Ext Mot TT	
Default:	Trip
Selection:	Same as menu [25B]

Communication information

Modbus Instance no/DeviceNet no:	43098
Profibus slot/index	168/240
EtherCAT and CANopen index (hex)	4c1a
Profinet IO index	19482
Fieldbus format	UInt
Modbus format	UInt

Liquid cooling low level [25T]

Delay time starts counting when the fault disappears. When the time delay has elapsed, the alarm will be reset if the function is active.

25T LC Level		
Default:		Off
Off	0	Off
1-3600	1-3600	1-3600 s

Communication information

Modbus Instance no/DeviceNet no:	43099
Profibus slot/index	169/3
EtherCAT and CANopen index (hex)	4c1b
Profinet IO index	19483
Fieldbus format	Long, 1=1 s
Modbus format	Elnt

Liquid Cooling Low level Trip Type [25U]

Select the preferred way to react to an alarm trip.

25U LC Level TT	
Default:	Trip
Selection:	Same as menu [25B]

Communication information

Modbus Instance no/DeviceNet no:	43100
Profibus slot/index	169/4
EtherCAT and CANopen index (hex)	4c1c
Profinet IO index	19484
Fieldbus format	UInt
Modbus format	UInt

Brake Fault [25V]

Delay time starts counting when the fault disappears. When the time delay has elapsed, the alarm will be reset if the function is active.

25V Brk Fault		
Default		Off
Off	0	Autoreset not activated.
1 - 3600s	1 - 3600	Brake fault auto reset delay time.

Communication information

Modbus Instance no/DeviceNet no:	43070
Profibus slot/index	168/229
EtherCAT and CANopen index (hex)	4bfe
Profinet IO index	19454
Fieldbus format	Long, 1=1s
Modbus format	Elnt

Encoder [25W]

Encoder delay time, starts counting when the fault disappears. When the time delay has elapsed, the alarm will be reset if the function is active.

25W Encoder		
Default:		Off
Off	0	Off
1 - 3600	1 - 3600	1 - 3600 s

Communication information

Modbus Instance no/DeviceNet no:	43561
Profibus slot/index	170/210
EtherCAT and CANopen index (hex)	4de9
Profinet IO index	19945
Fieldbus format	Long, 1=1s
Modbus format	Elnt

Crane deviation [25X]

Deviation delay time, starts counting when the fault is gone. When the time delay has elapsed, the alarm will be reset if the function is active.

25X Crane Deviat		
Default:		Off
Off	0	Off
1 - 3600	1 - 3600	1 - 3600 s

Communication information

Modbus Instance no/DeviceNet no:	43562
Profibus slot/index	170/211
EtherCAT and CANopen index (hex)	4dea
Profinet IO index	19946
Fieldbus format	Long, 1=1s
Modbus format	Elnt

Crane Communication [25Y]

Crane Communication delay time, starts counting when the fault is gone. When the time delay has elapsed, the alarm will be reset if the function is active.

25Y Crane Comm		
Default:	Off	
Off	0	Off
1- 3600	1- 3600	1- 3600 s

Communication information

Modbus Instance no/DeviceNet no:	43563
Profibus slot/index	170/212
EtherCAT and CANopen index (hex)	4deb
Profinet IO index	19947
Fieldbus format	Long, 1=1s
Modbus format	Elnt

11.4.8 Serial Communication [260]

This function is to define the communication parameters for serial communication. There are two types of options available for serial communication, RS232/485 (Modbus/RTU) and fieldbus modules (CANopen, Profibus, DeviceNet, Modbus/TCP, Profinet IO, EtherCAT and EtherNet/IP).

For more information see Chapter 9, page 71 and respective option manual.

Comm Type [261]

Select RS232/485 [262] or Fieldbus [263].

261 Com Type		
Default:	RS232/485	
RS232/485	0	RS232/485 selected
Fieldbus	1	Fieldbus selected (CANopen, Profibus, DeviceNet, Modbus/TCP, Profinet IO, EtherCAT or EtherNet/IP)

Communication information

Modbus Instance no/DeviceNet no:	43031
Profibus slot/index	168/190
EtherCAT and CANopen index (hex)	4bd7
Profinet IO index	19415
Fieldbus format	UInt
Modbus format	UInt

NOTE: Toggling the setting in this menu will perform a soft reset (re-boot) of the Fieldbus module.

RS232/485 [262]

Press Enter to set up the parameters for RS232/485 (Modbus/RTU) communication.

262 RS232/485	
---------------	--

Baud rate [2621]

Set the baud rate for the communication.

NOTE: This baud rate is only used for the isolated RS232/485 option.

2621 Baudrate	
Default:	9600
2400	0
4800	1
9600	2
19200	3
38400	4

Communication information

Modbus Instance no/DeviceNet no:	43032
Profibus slot/index	168/191
EtherCAT and CANopen index (hex)	4bd8
Profinet IO index	19416
Fieldbus format	UInt
Modbus format	UInt

Address [2622]

Enter the unit address for the AC drive.

NOTE: This address is only used for the isolated RS232/485 option.

2622 Address	
Default:	1
Selection:	1–247

Communication information

Modbus Instance no/DeviceNet no:	43033
Profibus slot/index	168/192
EtherCAT and CANopen index (hex)	4bd9
Profinet IO index	19417
Fieldbus format	UInt, 1=1
Modbus format	UInt

Fieldbus [263]

Press Enter to set up the parameters for fieldbus communication.

263 Fieldbus	
--------------	--

Address [2631]

Enter/view the unit/node address of the AC drive. Read & write access for CANopen, Profibus, DeviceNet. Read - only for EtherCAT.

2631 Address	
Default:	62
Range:	CANopen 1-127, Profibus 0–126, DeviceNet 0–63
Node address valid for CANopen (RW), Profibus(RW), DeviceNet (RW) and EtherCAT (RO).	

Communication information

Modbus Instance no/DeviceNet no:	43034
Profibus slot/index	168/199
EtherCAT and CANopen index (hex)	4bda
Profinet IO index	19418
Fieldbus format	UInt, 1=1
Modbus format	UInt

Process Data Mode [2632]

Enter the mode of process data (cyclic data). For further information, see the Fieldbus option manual.

NOTE: For CANopen module this menu is forced to "8".

2632 PrData Mode		
Default:		Basic
None	0	Control/status information is not used.
Basic	4	4 byte process data control/status information is used.
Extended	8	4 byte process data (same as Basic setting) + additional proprietary protocol for advanced users is used.

Communication information

Modbus Instance no/DeviceNet no:	43035
Profibus slot/index	168/194
EtherCAT and CANopen index (hex)	4bdb
Profinet IO index	19419
Fieldbus format	UInt
Modbus format	UInt

Read/Write [2633]

Select read/write to control the inverter over a fieldbus network. For further information, see the Fieldbus option manual.

2633 Read/Write	
Default:	RW
RW	0
Read	1
Valid for process data. Select R (read only) for logging process without writing process data. Select RW in normal cases to control inverter.	

Communication information

Modbus Instance no/DeviceNet no:	43036
Profibus slot/index	168/195
EtherCAT and CANopen index (hex)	4bdc
Profinet IO index	19420
Fieldbus format	UInt
Modbus format	UInt

Additional Process Values [2634]

Define the number of additional process values sent in cyclic messages.

NOTE: For CANopen module this menu is forced to "Basic".

2634 AddPrValues	
Default:	0
Range:	0-8

Communication information

Modbus Instance no/DeviceNet no:	43039
Profibus slot/index	168/198
EtherCAT and CANopen index (hex)	4bdf
Profinet IO index	19423
Fieldbus format	UInt, 1=1
Modbus format	UInt

CANBaudrate [2635]

Set the baud rate for CANopen fieldbus.

NOTE: Used for CANopen module only

2635 CANBaudrate	
Default:	8
0	10 kbps
1	20 kbps
2	50 kbps
3	Reserve
4	100 kbps
5	125 kbps
6	250 kbps
7	500 kbps
8	1 Mbps
9	Auto *

Communication information

Modbus Instance no/DeviceNet no:	43030
Profibus slot/index	168/189
EtherCAT and CANopen index (hex)	4bd6
Profinet IO index	19414
Fieldbus format	UInt, 1=1
Modbus format	UInt

* Under normal traffic conditions, i.e. with cyclic bus traffic above 2 Hz, the baud rate should be detected within 5 seconds.

NOTE: The automatic baud rate detection will NOT work if there is no traffic on the network.

Communication Fault [264]

Main menu for communication fault/warning settings. For further details please see the Fieldbus option manual.

Communication Fault Mode [2641]

Selects action if a communication fault is detected.

2641 ComFlt Mode		
Default:	Off	
Off	0	No communication supervision.
Trip	1	RS232/485 selected: The AC drive will trip if there is no communication for time set in parameter [2642]. Fieldbus selected: The AC drive will trip if: 1. The internal communication between the control board and fieldbus option is lost for time set in parameter [2642]. 2. If a serious network error has occurred.
Warning	2	RS232/485 selected: The AC drive will give a warning if there is no communication for time set in parameter [2642]. Fieldbus selected: The AC drive will give a warning if: 1. The internal communication between the control board and fieldbus option is lost for time set in parameter [2642]. 2. If a serious network error has occurred.

NOTE: Menu [214] and/or [215] must be set to COM to activate the communication fault function.

Communication information

Modbus Instance no/DeviceNet no:	43037
Profibus slot/index	168/196
EtherCAT and CANopen index (hex)	4bdd
Profinet IO index	19421
Fieldbus format	UInt
Modbus format	UInt

Communication Fault Time [2642]

Defines the delay time for the trip/warning.

2642 ComFlt Time	
Default:	0.5 s
Range:	0.1-15 s

Communication information

Modbus Instance no/DeviceNet no:	43038
Profibus slot/index	168/197
EtherCAT and CANopen index (hex)	4bde
Profinet IO index	19422
Fieldbus format	Long, 1=0.1 s
Modbus format	EInt

Ethernet [265]

Settings for Ethernet module (Modbus/TCP, Profinet IO). For further information, see the Fieldbus option manual.

NOTE: The Ethernet module must be re-booted to activate the below settings. For example by toggling parameter [261]. Non-initialized settings indicated by flashing display text.

IP Address [2651]

2651 IP Address	
Default:	0.0.0.0

Communication information

Modbus Instance no/DeviceNet no:	42701, 42702, 42703, 42704
Profibus slot/index	167/115, 167/116, 167/117, 167/118
EtherCAT and CANopen index (hex)	4a8d, 4a8e, 4a8f, 4a90
Profinet IO index	19085, 19086, 19087, 19088
Fieldbus format	UInt, 1=1
Modbus format	UInt

MAC Address [2652]

2652 MAC Address	
Default:	An unique number for the Ethernet module.

Communication information

Modbus Instance no/DeviceNet no:	42705, 42706, 42707, 42708, 42709, 42710
Profibus slot/index	167/119, 167/120, 167/121, 167/122, 167/123, 167/124
EtherCAT and CANopen index (hex)	4a91, 4a92, 4a93, 4a94, 4a95, 4a96,
Profinet IO index	19089, 19090, 19091, 19092, 19093, 19094
Fieldbus format	UInt, 1=1
Modbus format	UInt

Subnet Mask [2653]

2653 Subnet Mask	
Default:	0.0.0.0

Communication information

Modbus Instance no/DeviceNet no:	42711, 42712, 42713, 42714
Profibus slot/index	167/125, 167/126, 167/127, 167/128
EtherCAT and CANopen index (hex)	4a97, 4a98, 4a99, 4a9a
Profinet IO index	19095, 19096, 19097, 19098
Fieldbus format	UInt, 1=1
Modbus format	UInt

Gateway [2654]

2654 Gateway	
Default:	0.0.0.0

Communication information

Modbus Instance no/DeviceNet no:	42715, 42716, 42717, 42718
Profibus slot/index	167/129, 167/130, 167/131, 167/132
EtherCAT and CANopen index (hex)	4a9b, 4a9c, 4a9e, 4a9f
Profinet IO index	19099, 19100, 19101, 19102
Fieldbus format	UInt, 1=1
Modbus format	UInt

DHCP [2655]

2655 DHCP	
Default:	Off
Selection:	On/Off

Communication information

Modbus Instance no/DeviceNet no:	42719
Profibus slot/index	167/133
EtherCAT and CANopen index (hex)	4a9f
Profinet IO index	19103
Fieldbus format	UInt
Modbus format	UInt

Fieldbus Signals [266]

Defines mapping for additional process values. For further information, see the Fieldbus option manual.

FB Signal 1 - 16 [2661]-[266G]

Used to create a block of parameters which are read/written via communication. 1 to 8 read + 1 to 8 write parameters possible.

2661 FB Signal 1	
Default:	0
Range:	0-65535

Communication information

Modbus Instance no/DeviceNet no:	42801-42816
Profibus slot/index	167/215-167/230
EtherCAT and CANopen index (hex)	4af1 - 4b00
Profinet IO index	19185 - 19200
Fieldbus format	UInt, 1=1
Modbus format	UInt

FB Status [269]

Sub menus showing status of fieldbus parameters. Please see the Fieldbus manual for detailed information.

269 FB Status	
----------------------	--

11.5 Process and Application Parameters [300]

These parameters are mainly adjusted to obtain optimum process or machine performance.

The read-out, references and actual values depends on selected process source, [321]:

Table 34

Selected process source	Unit for reference and actual value	Resolution
Speed	rpm	4 digits
Torque	%	3 digits
PT100	°C	3 digits
Frequency	Hz	3 digits

11.5.1 Set/View Reference Value [310]

View reference value

As default the menu [310] is in view operation. The value of the active reference signal is displayed. The value is displayed according to selected process source, [321] or the process unit selected in menu [322].

Set reference value

If the function “Reference Control [214]” is set to “Keyboard”, the reference value can be set in menu “Set/View Ref [310]” or as a motor potentiometer with the + and - keys (default) on the control panel. Selection is made with parameter Keyboard Reference Mode in menu [369]. The ramp times used when setting the reference value with MotPot function selected in [369] are according to menus “Acc MotPot [333]” and “Dec MotPot [334]”.

The ramp times used for the reference value when Normal function is selected in menu [369], are according to “Acc Time [331]” and “Dec Time [332]”.

Menu [310] displays on-line the actual reference value according to the Mode Settings in Table 34.

310 Set/View ref	
Default:	0 rpm
Dependent on:	Process Source [321] and Process Unit [322]
Speed mode	0 - max speed [343]
Torque mode	0 - max torque [351]
Other modes	Min according to menu [324] - max according to menu [325]

Communication information

Modbus Instance no/DeviceNet no:	42991
Profibus slot/index	168/150
EtherCAT and CANopen index (hex)	4baf
Profinet IO index	19375
Fieldbus format	Long, 1=1 rpm, 1 %, 1 °C or 0.001 if Process Value/Process Ref using a [322] unit
Modbus format	Elnt

NOTE: The actual value in menu [310] is not copied, or loaded from the control panel memory when Copy Set [242], Copy to CP [244] or Load from CP [245] is performed.

NOTE: If the MotPot function is used, the reference value ramp times are according to the “Acc MotPot [333]” and “Dec MotPot [334]” settings. Actual speed ramp will be limited according to “Acc Time [331]” and “Dec Time [332]”.

NOTE: Write access to this parameter is only allowed when menu “Ref Control [214]” is set to Keyboard. When Reference control is used, see section “9. Serial communication” on page 71

11.5.2 Process Settings [320]

With these functions, the AC drive can be set up to fit the application. The menus [110], [120], [310], [362]-[368] and [711] use the process unit selected in [321] and [322] for the application, e.g. rpm, bar or m³/h. This makes it possible to easily set up the AC drive for the required process requirements, as well as for copying the range of a feedback sensor to set up the Process Value Minimum and Maximum in order to establish accurate actual process information.

Process Source [321]

Select the signal source for the process value that controls the motor. The Process Source can be set to act as a function of the process signal on AnIn F(AnIn), a function of the motor speed F(Speed), a function of the shaft torque F(Torque) or as a function of a process value from serial communication F(Bus). The right function to select depends on the characteristics and behaviour of the process. If the selection Speed, Torque or Frequency is set, the AC drive will use speed, torque or frequency as reference value.

Example

An axial fan is speed-controlled and there is no feedback signal available. The process needs to be controlled within fixed process values in “m³/hr” and a process read-out of the air flow is needed. The characteristic of this fan is that the air flow is linearly related to the actual speed. So by selecting F(Speed) as the Process Source, the process can easily be controlled.

The selection F(xx) indicates that a process unit and scaling is needed, set in menus [322]-[328]. This makes it possible to e.g. use pressure sensors to measure flow etc. If F(AnIn) is selected, the source is automatically connected to the AnIn which has Process Value as selected.

321 Proc Source		
Default:		Speed
F(AnIn)	0	Function of analogue input. E.g. via PID control, [380].
Speed	1	Speed as process reference ¹ .
Torque	2	Torque as process reference ² .
PT100	3	Temperature as process reference.
F(Speed)	4	Function of speed
F(Torque)	5	Function of torque ²
F(Bus)	6	Function of communication reference
Frequency	7	Frequency as process reference ¹ .

¹. Only when Drive mode [213] is set to Speed or V/Hz.

². Only when Drive mode [213] is set to Torque.

NOTE: When PT100 is selected, use PT100 channel 1 on the PTC/PT100 option board.

NOTE: If Speed, Torque or Frequency is chosen in menu "[321] Proc Source", menus [322] - [328] are hidden.

NOTE: The motor control method depends on the selection of drive mode in menu [213], regardless of selected process source in menu [321].

NOTE: If F (Bus) is chosen in menu [321] see "11.7.1 Analogue Inputs [510]" on page 166.

Communication information

Modbus Instance no/DeviceNet no:	43302
Profibus slot/index	169/206
EtherCAT and CANopen index (hex)	4ce6
Profinet IO index	19686
Fieldbus format	UInt
Modbus format	UInt

Process Unit [322]

322 Proc Unit		
Default:		rpm
Off	0	No unit selection
%	1	Percent
°C	2	Degrees Centigrade
°F	3	Degrees Fahrenheit
bar	4	bar
Pa	5	Pascal
Nm	6	Torque
Hz	7	Frequency
rpm	8	Revolutions per minute
m ³ /h	9	Cubic meters per hour
gal/h	10	Gallons per hour
ft ³ /h	11	Cubic feet per hour
User	12	User defined unit

Communication information

Modbus Instance no/DeviceNet no:	43303
Profibus slot/index	169/207
EtherCAT and CANopen index (hex)	4ce7
Profinet IO index	19687
Fieldbus format	UInt
Modbus format	UInt

NOTE: In case of conflicting setup between this Process Source [321], selection and drive mode [213] the software will automatically overrule the selection in menu [321] according to the following:

[213]=Torque and [321]=Speed => internally [321]=Torque will be used.

[213]=Speed or V/Hz and [321]=Torque => internally [321]=Speed will be used.

User-defined Unit [323]

This menu is only displayed if User is selected in menu [322]. The function enables the user to define a unit with six symbols. Use the Prev and Next key to move the cursor to required position. Then use the + and - keys to scroll down the character list. Confirm the character by moving the cursor to the next position by pressing the Next key.

Character	No. for serial comm.	Character	No. for serial comm.
Space	0	m	58
0-9	1-10	n	59
A	11	ñ	60
B	12	o	61
C	13	ó	62
D	14	ô	63
E	15	p	64
F	16	q	65
G	17	r	66
H	18	s	67
I	19	t	68
J	20	u	69
K	21	ü	70
L	22	v	71
M	23	w	72
N	24	x	73
O	25	y	74
P	26	z	75
Q	27	å	76
R	28	ä	77
S	29	ö	78
T	30	!	79
U	31	"	80
Ü	32	#	81
V	33	\$	82
W	34	%	83
X	35	&	84
Y	36	.	85
Z	37	(86
Å	38)	87
Ä	39	*	88
Ö	40	+	89
a	41	,	90
á	42	-	91

Character	No. for serial comm.	Character	No. for serial comm.
b	43	.	92
c	44	/	93
d	45	:	94
e	46	;	95
é	47	<	96
ê	48	=	97
è	49	>	98
f	50	?	99
g	51	@	100
h	52	^	101
i	53	_	102
í	54	°	103
j	55	2	104
k	56	3	105
l	57		

Example:

Create a user unit named kPa.

1. When in the menu [323] press **+** to show the cursor.
2. Press **→** to move the cursor to the right most position.
3. Press **+** until the character a is displayed.
4. Press **←**.
5. Then press the **+** until P is displayed and press **←**.
6. Repeat until you have entered kPa, confirm with **↵**.

323 User Unit	
Default:	No characters shown

Communication information

Modbus Instance no/DeviceNet no:	43304 - 43309
Profibus slot/index	169/208 - 169/213
EtherCAT and CANopen index (hex)	4ce8 - 4ced
Profinet IO index	19688 - 19693
Fieldbus format	UInt
Modbus format	UInt

Process Min [324]

This function sets the minimum process value allowed.

324 Process Min	
Default:	0
Range:	0.000-10000 (Speed, Torque, F(Speed), F(Torque)) -10000- +10000 (F(AnIn, PT100, F(Bus))

Communication information

Modbus Instance no/DeviceNet no:	43310
Profibus slot/index	169/214
EtherCAT and CANopen index (hex)	4cee
Profinet IO index	19694
Fieldbus format	Long, 1=1 rpm, 1 %, 1 °C or 0.001 if Process Value/Process Ref using a [322] unit
Modbus format	Elnt

Process Max [325]

This menu is not visible when speed, torque or frequency is selected. The function sets the value of the maximum process value allowed.

325 Process Max	
Default:	0
Range:	0.000-10000

Communication information

Modbus Instance no/DeviceNet no:	43311
Profibus slot/index	169/215
EtherCAT and CANopen index (hex)	4cef
Profinet IO index	19695
Fieldbus format	Long, 1=1 rpm, 1 %, 1 °C or 0.001 if Process Value/Process Ref using a [322] unit
Modbus format	Elnt

Ratio [326]

This menu is not visible when speed, frequency or torque is selected. The function sets the ratio between the actual process value and the motor speed so that it has an accurate process value when no feedback signal is used. See Fig. 96.

326 Ratio		
Default:	Linear	
Linear	0	Process is linear related to speed/torque
Quadratic	1	Process is quadratic related to speed/torque

Communication information

Modbus Instance no/DeviceNet no:	43312
Profibus slot/index	169/216
EtherCAT and CANopen index (hex)	4cf0
Profinet IO index	19696
Fieldbus format	UInt
Modbus format	UInt

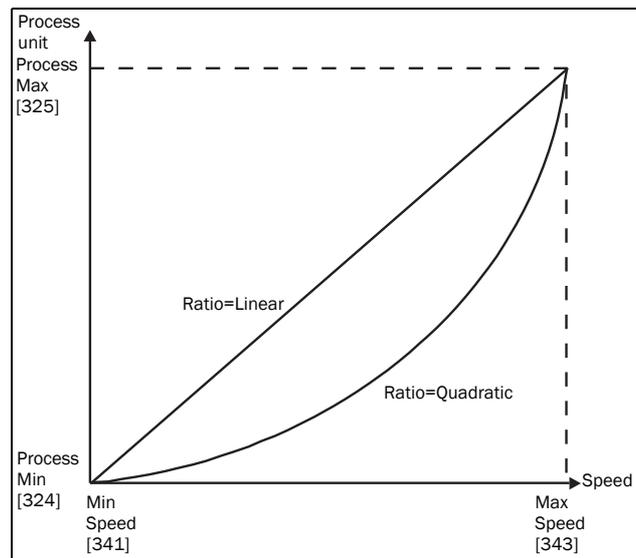


Fig. 96 Ratio

F(Value), Process Min [327]

This function is used for scaling if no sensor is used. It offers you the possibility of increasing the process accuracy by scaling the process values. The process values are scaled by linking them to known data in the AC drive. With “F(Value) Proc Min [327]” the precise value at which the entered “Process Min [324]” is valid can be entered.

NOTE: If Speed, Torque or Frequency is chosen in menu “[321] Proc Source”, menus [322]- [328] are hidden.

327 F(Val) PrMin		
Default:	Min	
Min	-1	According to Min Speed setting in [341].
Max	-2	According to Max Speed setting in [343].
0.000-10000	0-10000	0.000-10000

Communication information

Modbus Instance no/DeviceNet no:	43313
Profibus slot/index	169/217
EtherCAT and CANopen index (hex)	4cf1
Profinet IO index	19697
Fieldbus format	Long, 1=1 rpm, 1 %
Modbus format	Elnt

F(Value), Process Max [328]

This function is used for scaling if no sensor is used. It offers you the possibility of increasing the process accuracy by scaling the process values. The process values are scaled by linking them to known data in the AC drive. With F(Value), Proc Max the precise value at which the entered “Process Max [325]” is valid can be entered.

NOTE: If Speed, Torque or Frequency is chosen in menu “[321] Proc Source”, menus [322]- [328] are hidden.

328 F(Val) PrMax		
Default:	Max	
Min	-1	Min
Max	-2	Max
0.000-10000	0-10000	0.000-10000

Communication information

Modbus Instance no/DeviceNet no:	43314
Profibus slot/index	169/218
EtherCAT and CANopen index (hex)	4cf2
Profinet IO index	19698
Fieldbus format	Long, 1=1 rpm, 1 %
Modbus format	Elnt

Example

A conveyor belt is used to transport bottles. The required bottle speed needs to be within 10 to 100 bottles/s. Process characteristics:

10 bottles/s = 150 rpm

100 bottles/s = 1500 rpm

The amount of bottles is linearly related to the speed of the conveyor belt.

Set-up:

“Process Min [324]” = 10

“Process Max [325]” = 100

“Ratio [326]” = linear

“F(Value), ProcMin [327]” = 150

“F(Value), ProcMax [328]” = 1500

With this set-up, the process data is scaled and linked to known values which results in an accurate control.

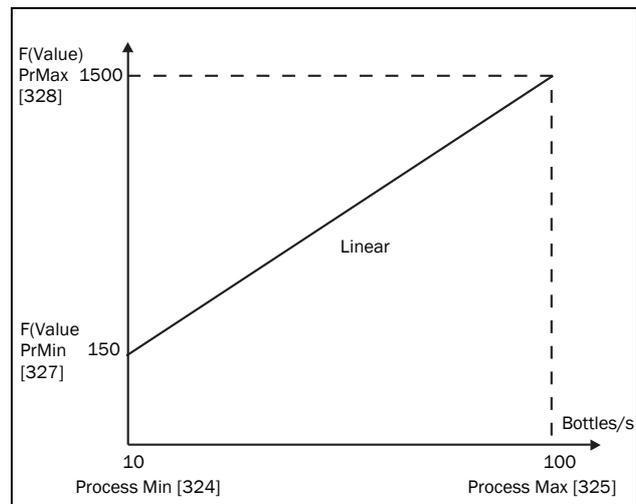


Fig. 97

11.5.3 Start/Stop settings [330]

Submenu with all the functions for acceleration, deceleration, starting, stopping, etc.

Acceleration Time [331]

The acceleration time is defined as the time it takes for the motor to accelerate from 0 rpm to nominal motor speed.

NOTE: If the Acc Time is too short, the motor is accelerated according to the Torque Limit. The actual Acceleration Time may then be longer than the value set.

331 Acc Time	
Default:	10.0 s
Range:	0–3600 s

Communication information

Modbus Instance no/DeviceNet no:	43101
Profibus slot/index	169/5
EtherCAT and CANopen index (hex)	4c1d
Profinet IO index	19485
Fieldbus format	Long, 1=0.01 s
Modbus format	Elnt

Fig. 98 shows the relationship between nominal motor speed/max speed and the acceleration time. The same is valid for the deceleration time.

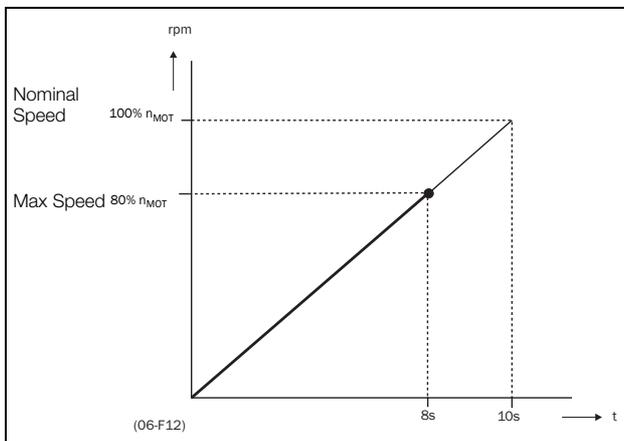


Fig. 98 Acceleration time and maximum speed

Fig. 99 shows the settings of the acceleration and deceleration times with respect to the nominal motor speed.

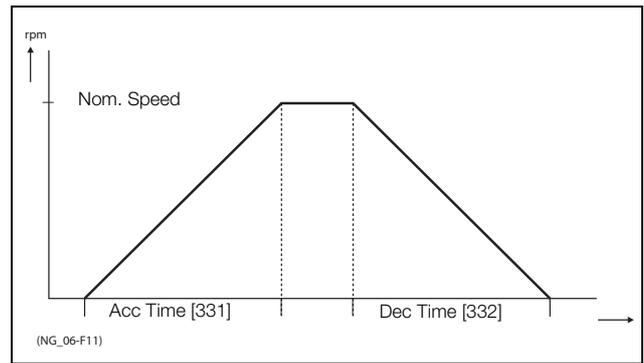


Fig. 99 Acceleration and deceleration times

Deceleration Time [332]

The deceleration time is defined as the time it takes for the motor to decelerate from nominal motor speed to 0 rpm.

332 Dec Time	
Default:	10.0 s
Range:	0–3600 s

Communication information

Modbus Instance no/DeviceNet no:	43102
Profibus slot/index	169/6
EtherCAT and CANopen index (hex)	4c1e
Profinet IO index	19486
Fieldbus format	Long, 1=0.01 s
Modbus format	Elnt

NOTE: If the Dec Time is too short and the generator energy cannot be dissipated in a brake resistor, the motor is decelerated according to the overvoltage limit. The actual deceleration time may be longer than the value set.

Acceleration Time Motor Potentiometer [333]

It is possible to control the speed of the AC drive using the motor potentiometer function. This function controls the speed with separate up and down commands, over remote signals. The MotPot function has separate ramps settings which can be set in “Acc MotPot [333]” and “Dec MotPot [334]”.

If the MotPot function is selected, this is the acceleration time for the MotPot up command. The acceleration time is defined as the time it takes for the motor potentiometer value to increase from 0 rpm to nominal speed.

333	Acc MotPot
Default:	16.0 s
Range:	0.50–3600 s

Communication information

Modbus Instance no/DeviceNet no:	43103
Profibus slot/index	169/7
EtherCAT and CANopen index (hex)	4c1f
Profinet IO index	19487
Fieldbus format	Long, 1=0.01 s
Modbus format	Elnt

Deceleration Time Motor Potentiometer [334]

If the MotPot function is selected, this is the deceleration time for the “MotPot” down command. The deceleration time is defined as the time it takes for the motor potentiometer value to decrease from nominal speed to 0 rpm.

334	Dec MotPot
Default:	16.0 s
Range:	0.50–3600 s

Communication information

Modbus Instance no/DeviceNet no:	43104
Profibus slot/index	169/8
EtherCAT and CANopen index (hex)	4c20
Profinet IO index	19488
Fieldbus format	Long, 1=0.01 s
Modbus format	Elnt

Acceleration Time to Minimum Speed [335]

If minimum speed, [341]>0 rpm, is used in an application, the AC drive uses separate ramp times below this level. With “Acc<MinSpeed [335]” and “Dec<MinSpeed [336]” you can set the required ramp times. Short times can be used to prevent damage and excessive pump wear due to too little lubrication at lower speeds. Longer times can be used to fill up a system smoothly and prevent water hammer due to rapidly exhausting air from the pipe system.

If a Minimum speed is programmed, this parameter will be used to set the the acceleration time parameter [335] for speeds up to minimum speed at a run command. The ramp time is defined as the time it takes for the motor to accelerate from 0 rpm to nominal motor speed.

335	Acc<Min Spd
Default:	10.0 s
Range:	0-3600 s

Communication information

Modbus Instance no/DeviceNet no:	43105
Profibus slot/index	169/9
EtherCAT and CANopen index (hex)	4c21
Profinet IO index	19489
Fieldbus format	Long, 1=0.01 s
Modbus format	Elnt

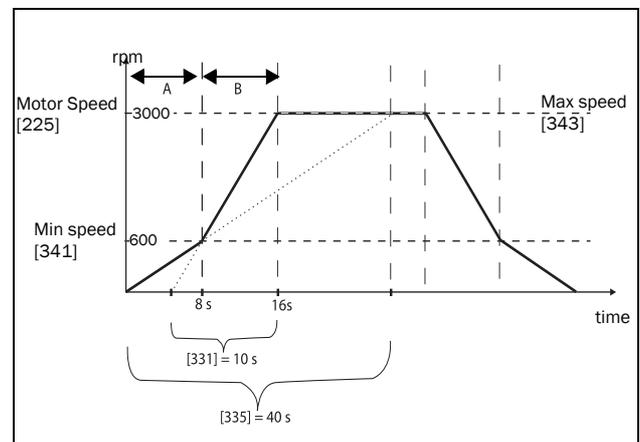


Fig. 100 Calculation example of accelerating times (graphics not proportional).

Example:

“Motor speed [225]”	3000 rpm
Minimum speed [341]	600 rpm
Maximum speed [343]	3000 rpm
Acceleration time [331]	10 seconds
Deceleration time [332]	10 seconds
Acc>Min speed[335]	40 seconds
Dec<Min speed[336]	40 seconds

- A. The drive will start from 0 rpm and accelerate to Minimum speed [341] = 600 rpm in 8 seconds according to ramp time parameter Acc>Min speed [335].
 Calculated as following:
 600 rpm is 20% of 3000 rpm => 20% of 40 s = 8 s.
- B. The acceleration continues from minimum speed level 600 rpm to maximum speed level 3000 rpm with acceleration rate according to ramp time Acceleration time [331].
 Calculate by following:
 3000 - 600= 2400 rpm which is 80 % of 3000 rpm => acceleration tim is 80 % x 10 s = 8 s.
 This means that the total acceleration time from 0 - 3000 rpm will take 8 + 8 = 16 seconds.

Deceleration Time from Minimum Speed [336]

If a minimum speed is programmed, this parameter will be used to set the deceleration time from the minimum speed to 0 rpm at a stop command. The ramp time is defined as the time it takes for the motor to decelerate from the nominal motor speed to 0 rpm.

336 Dec<Min Spd	
Default:	10.0 s
Range:	0-3600 s

Communication information

Modbus Instance no/DeviceNet no:	43106
Profibus slot/index	169/10
EtherCAT and CANopen index (hex)	4c22
Profinet IO index	19490
Fieldbus format	Long, 1=0.01 s
Modbus format	Elnt

Acceleration Ramp Type [337]

Sets the type of all the acceleration ramps in a parameter set. See Fig. 101. Depending on the acceleration and deceleration requirements for the application, the shape of both the ramps can be selected. For applications where speed changes need to be started and stopped smoothly, such as a conveyor belt with materials that can drop following a quick speed change, the ramp shape can be adapted to a S-shape and prevent speed change shocks. For applications that are not critical in this, the speed change can be fully linear over the complete range.

337 Acc Rmp		
Default:		Linear
Linear	0	Linear acceleration ramp.
S-Curve	1	S-shape acceleration ramp.

NOTE: For S-curve ramps the ramp times, [331] and [332], defines the maximum acceleration and deceleration rated, i.e. linear part of S-curve, just as for the linear ramps. The S-curves are implemented so that for a speed step below sync speed the ramps are fully S-shaped while for larger steps the middle part will be linear. Therefore will a S-curve ramp from 0 –sync speed take 2 x Time while a step from 0–2 x sync speed will take 3 x Time (middle part 0.5sync speed – 1.5sync speed linear). Also valid for menu [338], Deceleration ramp type.

Communication information

Modbus Instance no/DeviceNet no:	43107
Profibus slot/index	169/11
EtherCAT and CANopen index (hex)	4c23
Profinet IO index	19491
Fieldbus format	Uln
Modbus format	Uln

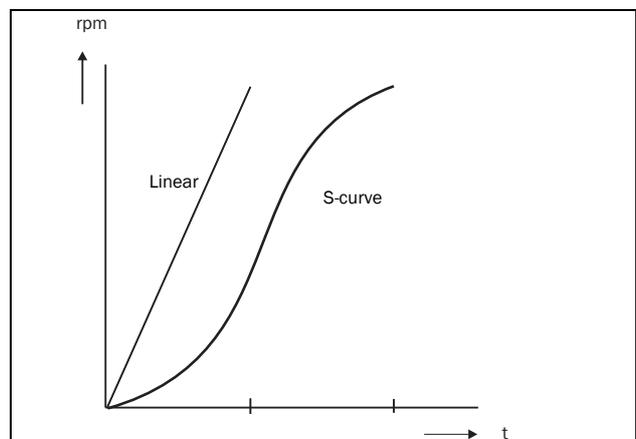


Fig. 101 Shape of acceleration ramp

Deceleration Ramp Type [338]

Sets the ramp type of all deceleration parameters in a parameter set Fig. 102.

338 Dec Rmp	
Default:	Linear
Selection:	Same as menu [337]

Communication information

Modbus Instance no/DeviceNet no:	43108
Profibus slot/index	169/12
EtherCAT and CANopen index (hex)	4c24
Profinet IO index	19492
Fieldbus format	UInt
Modbus format	UInt

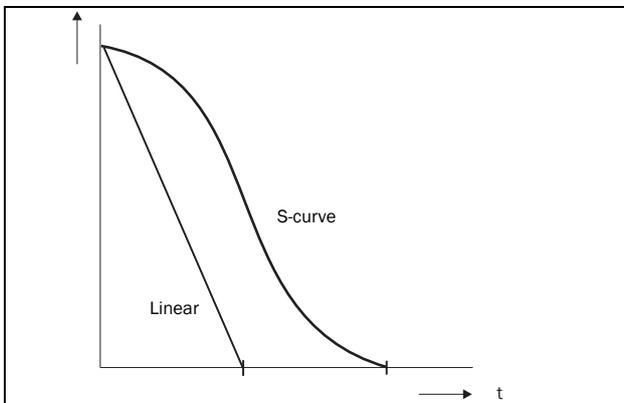


Fig. 102 Shape of deceleration ramp

Start Mode [339]

Sets the way of starting the motor when a run command is given.

339 Start Mode	
Default:	Normal DC
Fast	0 The motor shaft starts rotating immediately once the Run command is given. The motor flux increases gradually.
Normal DC	1 After a Run command the motor will be magnetised first and the stator resistance is measured. Depending on the motor time constant and the size of the motor it can take up to 1.3 s before the motor shaft starts to rotate. This will provide better control of the motor when starting.

Communication information

Modbus Instance no/DeviceNet no:	43109
Profibus slot/index	169/13
EtherCAT and CANopen index (hex)	4c25
Profinet IO index	19493
Fieldbus format	UInt
Modbus format	UInt

Spinstart [33A]

The spinstart will smoothly start a motor which is already rotating by catching the motor at the actual speed and control it to the desired speed. If in an application, such as an exhausting fan, the motor shaft is already rotating due to external conditions, a smooth start of the application is required to prevent excessive wear. With the spinstart=On, the actual control of the motor is delayed due to detecting the actual speed and rotation direction, which depend on motor size, running conditions of the motor before the Spinstart, inertia of the application, etc. Depending on the motor electrical time constant and the size of the motor, it can take maximum a couple of minutes before the motor is caught.

33A Spinstart	
Default:	Off
Off	0 No spinstart. If the motor is already running the AC drive can trip or will start with high current.
On	1 Spinstart will allow the start of a running motor without tripping or high inrush currents. If encoder feedback is used, both encoder speed and current signals are used to perform spinstart function.
Encoder	2 Only encoder speed used for detecting rotating machine, i.e. no rotating machine detection via initial motor current. Note: Only active if encoder is present. If no Encoder, functionality is equal to selection Off.

Communication information

Modbus Instance no/DeviceNet no:	43110
Profibus slot/index	169/14
EtherCAT and CANopen index (hex)	4c26
Profinet IO index	19494
Fieldbus format	UInt
Modbus format	UInt

Stop Mode [33B]

When the AC drive is stopped, different methods to come to a standstill can be selected in order to optimize the stop and prevent unnecessary wear. Stop Mode sets the way of stopping the motor when a Stop command is given.

33B Stop Mode		
Default:	Decel	
Decel	0	The motor decelerates to 0 rpm according to the set deceleration time.
Coast	1	The motor freewheels naturally to 0 rpm.

Communication information

Modbus Instance no/DeviceNet no:	43111
Profibus slot/index	169/15
EtherCAT and CANopen index (hex)	4c27
Profinet IO index	19495
Fieldbus format	UInt
Modbus format	UInt

11.5.4 Mechanical brake control

The four brake-related menus [33C] to [33F] can be used to control mechanical brakes e.g. to handle basic hoisting functions. When hoisting a load generally a mechanical brake holds the load when the AC drive is not running. To prevent the load from falling down a holding torque must be initiated before the mechanical brake is released. On the other hand when stopping hoisting the brake must be activated before the holding torque is removed.

Support is included for a Brake Acknowledge signal via a digital input. It is monitored using a brake fault time parameter. Additional output and trip/warning signals are also included. The acknowledge signal is either connected from the brake contactor or from a proximity switch on the brake.

The brake acknowledge signal can also be used to improve safety by preventing hoist falling load in case the brake is not engaged when stopping.

Brake not released - Brake Fault trip

During start and running the brake acknowledge signal is compared to the actual brake output signal and if no acknowledge, i.e. brake not released, while brake output is high for the Brake Fault time [33H], then a Brake trip is generated.

Brake not engaged - Brake Warning and continued operation (keep torque)

The brake acknowledge signal is compared to the actual brake output signal at stop. If acknowledge is still active, i.e. brake not engaged, while brake output is low for the Brake Engage time [33E] then a Brake warning is generated and the torque is kept, i.e. prolonging normal brake engage mode, until brake closes or an emergency action is needed by the operator, such as setting down the load.

Brake Release Time [33C]

The Brake Release Time sets the time the AC drive delays before ramping up to whatever final reference value is selected. During this time a predefined speed can be generated to hold the load where after the mechanical brake finally releases. This speed can be selected at Release Speed, [33D]. Immediate after the brake release time expiration the brake lift signal is set. The user can set a digital output or relay to the function Brake. This output or relay can control the mechanical brake.

33C Brk Release	
Default:	0.00 s
Range:	0.00–3.00 s

Communication information

Modbus Instance no/DeviceNet no:	43112
Profibus slot/index	169/16
EtherCAT and CANopen index (hex)	4c28
Profinet IO index	19496
Fieldbus format	Long, 1=0.01 s
Modbus format	Elnt

Fig. 103 shows the relation between the four Brake functions.

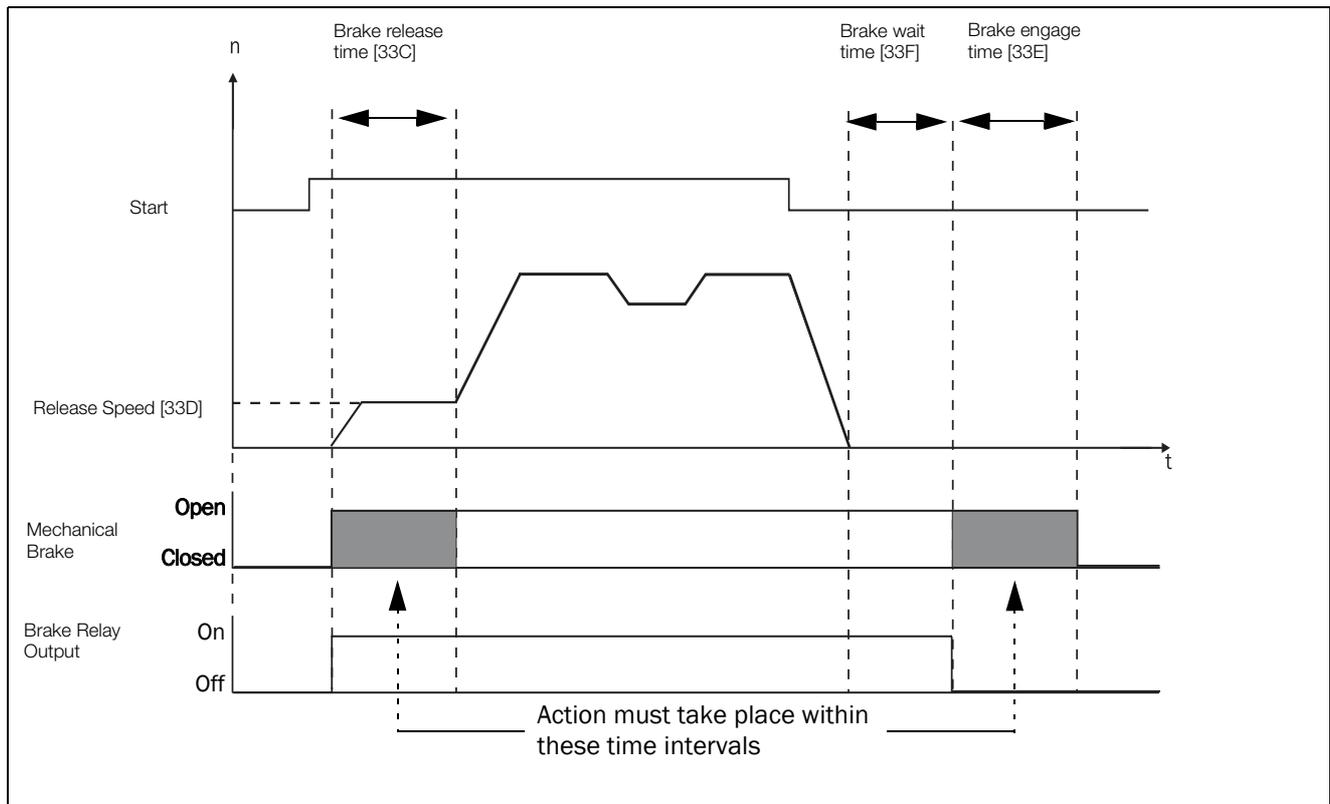


Fig. 103 Brake Output functions

NOTE: Although this function is designed to operate a mechanical brake via the digital outputs or relays (set to brake function) controlling a mechanical brake, it can also be used without a mechanical brake and hold the load in a fixed position.

- Brake Release Time [33C]
- Release Speed [33D]
- Brake Engage Time [33E]
- Brake Wait Time [33F]

The correct time setting depends on the maximum load and the properties of the mechanical brake. During the brake release time it is possible to apply extra holding torque by setting a release speed reference with the function release speed [33D].

Release Speed [33D]

The release speed only operates with the brake function: brake release [33C]. The release speed is the initial speed reference during the brake release time. The torque reference is initialized to 90% of T_{NOM} to ensure that the load is held in place.

33D Release Spd	
Default:	0 rpm
Range:	- 4x Sync. Speed to 4x Sync.
Depend on:	4xmotor sync speed, 1500 rpm for 1470 rpm motor.

Communication information

Modbus Instance no/DeviceNet no:	43113
Profibus slot/index	169/17
EtherCAT and CANopen index (hex)	4c29
Profinet IO index	19497
Fieldbus format	Int, 1=1 rpm
Modbus format	Int, 1=1 rpm

Brake Engage Time [33E]

The brake engage time is the time the load is held while the mechanical brake engages. It is also used to get a firm stop when transmissions, etc. cause “whiplash” effects. In other words, it compensates for the time it takes to engage a mechanical brake.

33E Brk Engage	
Default:	0.00 s
Range:	0.00–3.00 s

Communication information

Modbus Instance no/DeviceNet no:	43114
Profibus slot/index	169/18
EtherCAT and CANopen index (hex)	4c2a
Profinet IO index	19498
Fieldbus format	Long, 1=0.01 s
Modbus format	Elnt

Wait Before Brake Time [33F]

The brake wait time is the time to keep brake open and to hold the load, either in order to be able to speed up immediately, or to stop and engage the brake.

33F Brk Wait	
Default:	0.00 s
Range:	0.00–30.0 s

Communication information

Modbus Instance no/DeviceNet no:	43115
Profibus slot/index	169/19
EtherCAT and CANopen index (hex)	4c2b
Profinet IO index	19499
Fieldbus format	Long, 1=0.01 s
Modbus format	Elnt

Vector Brake [33G]

Braking by increasing the internal electrical losses in the motor.

33G Vector Brake		
Default:	Off	
Off	0	Vector brake switched off. AC drive brakes normal with voltage limit on the DC link.
On	1	Maximum AC drive current (I_{CL}) is available for braking.

Communication information

Modbus Instance no/DeviceNet no:	43116
Profibus slot/index	169/20
EtherCAT and CANopen index (hex)	4c2c
Profinet IO index	19500
Fieldbus format	UInt
Modbus format	UInt

Brake Fault trip time [33H]

The “Brake Fault trip time” for “Brake not released” function is specified in this menu.

33H Brk Fault	
Default:	1.00s
Range	0.00 - 5.00s

Communication information

Modbus Instance no/DeviceNet no:	43117
Profibus slot/index	169/21
EtherCAT and CANopen index (hex)	4c2d
Profinet IO index	19501
Fieldbus format	Long, 1=0.01s
Modbus format	Elnt

Note: The Brake Fault trip time should be set to longer time than the Brake release time[33C].

The “Brake not engaged” warning is using the setting of parameter “Brake Engaged time [33E]”.

Fig. 104 shows principle of brake operation for fault during run (left) and during stop (right).

Release torque [33I]

The Brake Release Time [33C] sets the time the AC drive delays before ramping up to whatever final speed reference value is selected, to allow the brake to be fully opened. During this time a holding torque to prevent roll-back of the load can be activated. The parameter Release Torque [33I] is used for this purpose.

The release torque initiates the torque reference from the speed controller during the Brake Release Time [33C]. The release torque defines a minimum level of release (holding) torque. The set release torque is internally overruled if the actual required holding torque measured at the previous closing of brake is higher.

The release torque is set with sign in order to define the holding torque direction.

33I Release Trq	
Default:	0%
Range	-400% to 400%

Communication information

Modbus Instance no/DeviceNet no:	43118
Profibus slot/index	169/22
EtherCAT and CANopen index (hex)	4c2e
Profinet IO index	19502
Fieldbus format	Long, 1=1%
Modbus format	Elnt

Note! Function is deactivated if set to 0%.

Note! Release Torque [33I] has priority over torque reference initialization by Release Speed [33D].

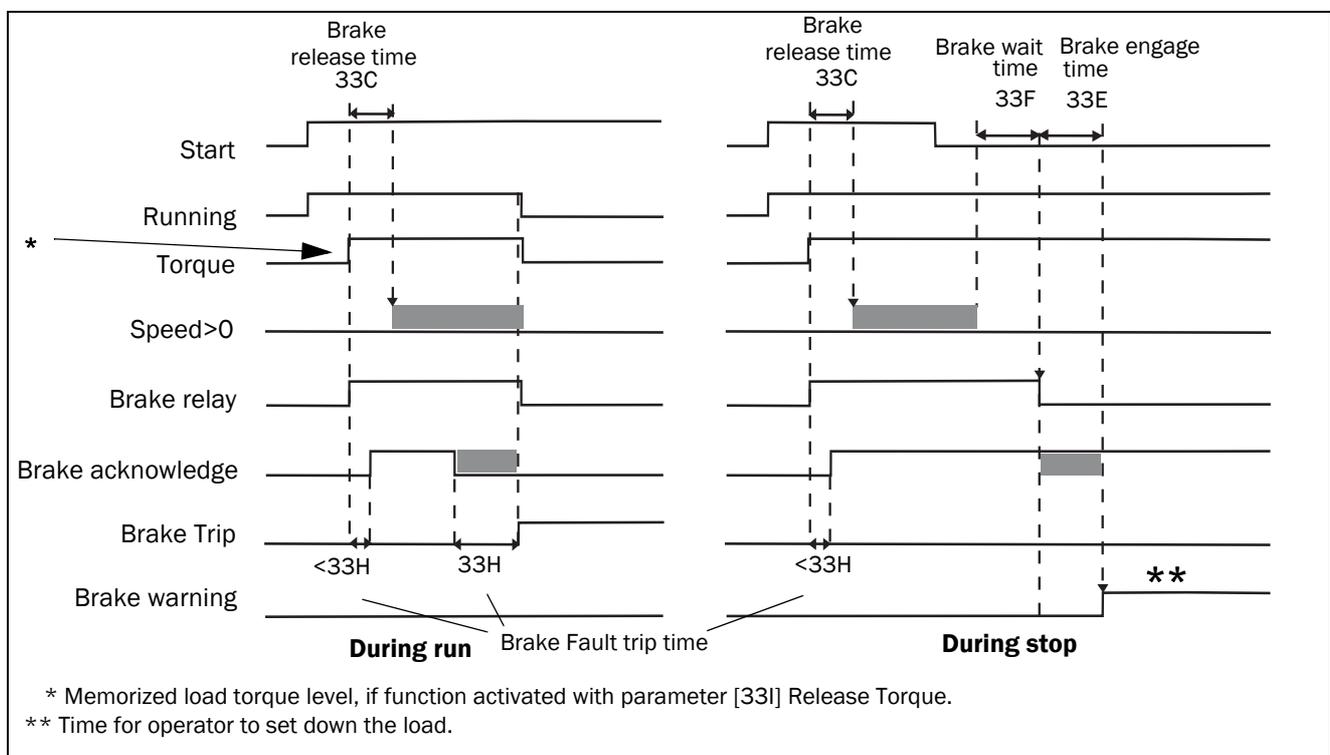


Fig. 104 Principle of Brake operation for fault during run and during stop

DC Hold [33J]

This function makes it possible to apply a DC-voltage to the motor at zero speed. This provides a (low) holding torque. This function is only available in speed mode.

DC Hold [33J1]

Enabling of DC hold functionality.

33J1 DC Hold	
Default:	Off
Off	0
On	1

Communication information

Modbus Instance no/DeviceNet no:	43148
Profibus slot/index	169/52
EtherCAT and CANopen index (hex)	4c4c
Profinet IO index	19532
Fieldbus format	UInt
Modbus format	UInt

DC Holding Speed [33J2]

Select the speed at which DC hold is released / enabled. DC hold is activated if both the speed and the speed reference is below this value.

33J2 DC Hold Spd	
Default:	10rpm
Range:	0 - 250 rpm

Communication information

Modbus Instance no/DeviceNet no:	43149
Profibus slot/index	169/53
EtherCAT and CANopen index (hex)	4c4d
Profinet IO index	19533
Fieldbus format	UInt, 1=1rpm
Modbus format	UInt

DC Holding Current [33J3]

Select the applied DC hold current in percent of nominal motor current.

33J3 DC Hold Cur	
Default:	30 %
Range:	0 - 100 %

Communication information

Modbus Instance no/DeviceNet no:	43150
Profibus slot/index	169/54
EtherCAT and CANopen index (hex)	4c4e
Profinet IO index	19534
Fieldbus format	UInt, 1=1%
Modbus format	UInt

Start Vector [33K]

Select the voltage vector applied at start. The start vector is normally in the direction of the U-phase. It is also possible to sequentially select different start vectors each start. This can be advantageous as it distributes the wear more evenly between different IGBTs. In particular if DC-start is used. The start vector may also be selected based on the encoder position (when applicable).

33K Start Vector		
Default:	0	
Normal (U)	0	U-phase
Sequence	1	Sequentially select different vectors
Encoder	2	Based on encoder position

Communication information

Modbus Instance no/DeviceNet no:	43119
Profibus slot/index	169/23
EtherCAT and CANopen index (hex)	4c2f
Profinet IO index	19503
Fieldbus format	UInt
Modbus format	UInt

11.5.5 Speed [340]

Menu with all parameters for settings regarding to speeds, such as Min/Max speeds, Jog speeds, Skip speeds.

Minimum Speed [341]

Sets the minimum speed. The minimum speed will operate as an absolute lower limit. Used to ensure the motor does not run below a certain speed and to maintain a certain performance.

341 Min Speed	
Default:	0 rpm
Range:	0 - Max Speed
Dependent on:	Set/View ref [310]

NOTE: A lower speed value than the set minimum speed can be shown in the display due to motor slip.

Communication information

Modbus Instance no/DeviceNet no:	43121
Profibus slot/index	169/25
EtherCAT and CANopen index (hex)	4c31
Profinet IO index	19505
Fieldbus format	Int, 1=1 rpm
Modbus format	Int, 1=1 rpm

Stop/Sleep when less than Minimum Speed [342]

With this function it is possible to put the AC drive in “sleep mode” when it is running at minimum speed for the length of time set in menu “Stp<MinSpd [342]”. The AC drive will go into sleep mode after programmed time.

When the reference signal or PID Process controller output value (if PID Process controller is used) raises the required speed value above the min speed value, the AC drive will automatically wake up and ramp up to the required speed.

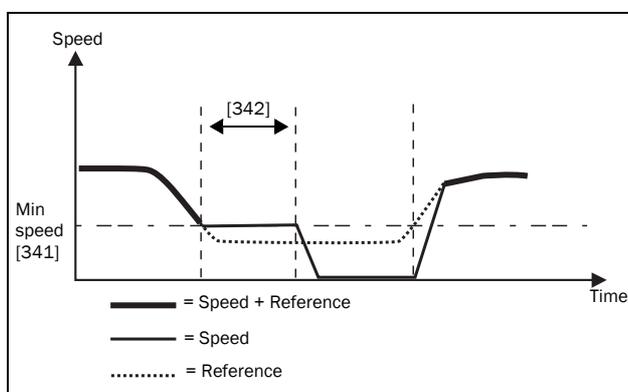


Fig. 105

If you want to use this function when having “process reference” signal via an analogue input, you need to make sure that the concerning analogue input is set up correct, meaning that AnIn Advanced parameter “AnIn1 FcMin [5134]” should be set from “Min” (=default) to “User defined” and “AnIn1 VaMin[5135]” set to a value less than “Min Speed [341]” to make it possible that the analogue input reference can go below the “Min Speed” level to activate the “Sleep mode”. This applies when PID Process controller is not used.

NOTE: If [381] PID Process controller is used, then the PID sleep functionality [386] - [389] is recommended instead of [342]. See further page 144.

NOTE: Menu [386] has higher priority than menu [342].

342 Stp<MinSpd		
Default:	Off	
Off	0	Off
1-3600	1-3600	1-3600 s

Communication information

Modbus Instance no/DeviceNet no:	43122
Profibus slot/index	169/26
EtherCAT and CANopen index (hex)	4c32
Profinet IO index	19506
Fieldbus format	Long, 1=0.01 s
Modbus format	Elnt

Maximum Speed [343]

Sets the maximum speed. The maximum speed will operate as an absolute maximum limit. This parameter is used to prevent damage due to high speed.

The synchronous speed (Sync-spd) is determined by the parameter motor speed [225].

343 Max Speed		
Default:		Sync Speed
Sync Speed	0	Synchronous speed, i.e. no load speed, at nominal frequency.
1-24000rpm	1- 24000	Min Speed - 4 x Motor Sync Speed

Communication information

Modbus Instance no/DeviceNet no:	43123
Profibus slot/index	169/27
EtherCAT and CANopen index (hex)	4c33
Profinet IO index	19507
Fieldbus format	Int, 1=1 rpm
Modbus format	Int, 1=1 rpm

NOTE: It is not possible to set the maximum speed lower than the minimum speed.

Note: Maximum speed [343] has priority over Min Speed [341], i.e. if [343] is set below [341] then the drive will run at [343] Max Speed with acceleration times given by [335] and [336] respectively.

Skip Speed 1 Low [344]

Within the Skip Speed range High to Low, the speed cannot be constant in order to avoid mechanical resonance in the AC drive system.

When Skip Speed Low \leq Ref Speed \leq Skip Speed High, then Output Speed=Skip Speed HI during deceleration and Output Speed=Skip Speed LO during acceleration. Fig. 106 shows the function of skip speed hi and low.

Between Skip Speed HI and LO, the speed changes with the set acceleration and deceleration times. Skipspd1 LO sets the lower value for the 1st skip range.

344	SkipSpd 1 Lo
Default:	0 rpm
Range:	0 - 4 x Motor Sync Speed

Communication information

Modbus Instance no/DeviceNet no:	43124
Profibus slot/index	169/28
EtherCAT and CANopen index (hex)	4c34
Profinet IO index	19508
Fieldbus format	Int, 1=1 rpm
Modbus format	Int, 1=1 rpm

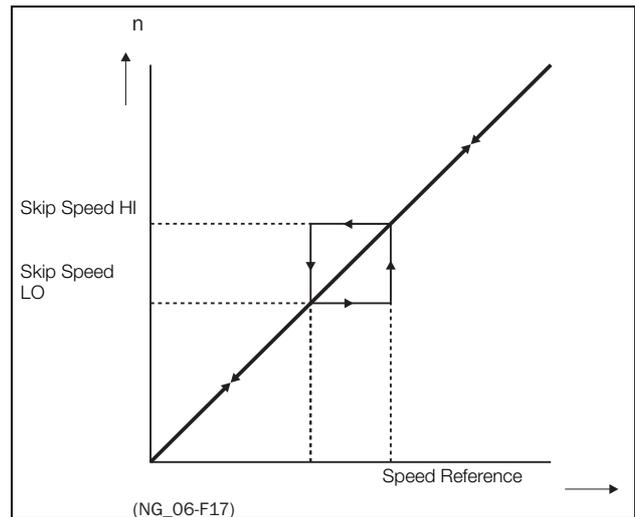


Fig. 106 Skip Speed

NOTE: The two Skip Speed ranges may be overlapped.

Skip Speed 1 High [345]

Skipspd1 HI sets the higher value for the 1st skip range.

345	SkipSpd 1 Hi
Default:	0 rpm
Range:	0 - 4 x Sync Speed

Communication information

Modbus Instance no/DeviceNet no:	43125
Profibus slot/index	169/29
EtherCAT and CANopen index (hex)	4c35
Profinet IO index	19509
Fieldbus format	Int, 1=1 rpm
Modbus format	Int, 1=1 rpm

Skip Speed 2 Low [346]

The same function as menu [344] for the 2nd skip range.

346	SkipSpd 2 Lo
Default:	0 rpm
Range:	0 - 4 x Motor Sync Speed

Communication information

Modbus Instance no/DeviceNet no:	43126
Profibus slot/index	169/30
EtherCAT and CANopen index (hex)	4c36
Profinet IO index	19510
Fieldbus format	Int, 1=1 rpm
Modbus format	Int, 1=1 rpm

Skip Speed 2 High [347]

The same function as menu [345] for the 2nd skip range.

347	SkipSpd 2 Hi
Default:	0 rpm
Range:	0 – 4 x Motor Sync Speed

Communication information

Modbus Instance no/DeviceNet no:	43127
Profibus slot/index	169/31
EtherCAT and CANopen index (hex)	4c37
Profinet IO index	19511
Fieldbus format	Int, 1=1 rpm
Modbus format	Int, 1=1 rpm

Jog Speed [348]

The Jog Speed function is activated by one of the digital inputs. The digital input must be set to the Jog function [520]. The Jog command/function will automatically generate a run command as long as the Jog command/function is active. This is valid independent of settings in menu [215]. The rotation is determined by the polarity of the set Jog Speed.

Example

If Jog Speed = -10, this will give a Run Left command at 10 rpm regardless of RunL or RunR commands. Fig. 107 shows the function of the Jog command/function.

348	Jog Speed
Default:	50 rpm
Range:	-4 x motor sync speed to +4 x motor sync speed
Dependent on:	Defined motor sync speed. Max = 400%, normally max=AC drive I_{max} /motor I_{nom} x 100%.

Communication information

Modbus Instance no/DeviceNet no:	43128
Profibus slot/index	169/32
EtherCAT and CANopen index (hex)	4c38
Profinet IO index	19512
Fieldbus format	Int, 1=1 rpm
Modbus format	Int, 1=1 rpm

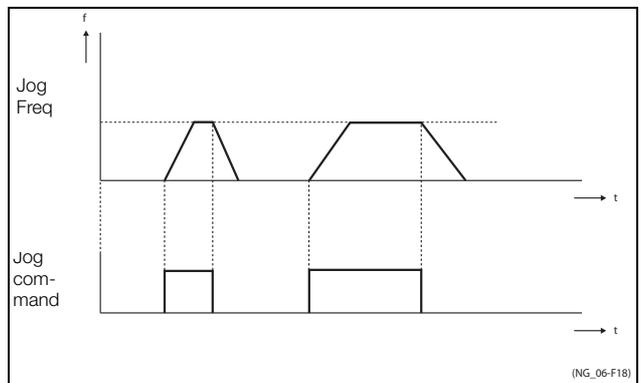


Fig. 107 Jog command

11.5.6 Torques [350]

Menu with all parameters for torque settings.

Maximum Torque [351]

Sets the maximum motor torque (according to menu group “Motor Data [220]”). This Maximum Torque operates as an upper torque limit. A Speed Reference is always necessary to run the motor.

$$T_{MOT}(Nm) = \frac{P_{MOT}(kw) \times 9550}{n_{MOT}(rpm)} = 100\%$$

351 Max Torque	
Default:	120% calculated from the motor data
Range:	0–400%

Communication information

Modbus Instance no/DeviceNet no:	43141
Profibus slot/index	169/45
EtherCAT and CANopen index (hex)	4c45
Profinet IO index	19525
Fieldbus format	Long, 1=1%
Modbus format	Elnt

NOTE: The Max Torque parameter will limit the maximum output current of the AC drive following the relation: 100% T_{mot} corresponds to 100% I_{mot}. The maximum possible setting for parameter 351 is limited by I_{nom}/I_{mot} x 120%, but not higher than 400%.

NOTE: The motor temperature increases very quickly due to extensive power losses.

IxR Compensation [352]

This function compensates for the drop in voltage over different resistances such as (very) long motor cables, chokes and motor stator by increasing the output voltage at a constant frequency. IxR Compensation is most important at low frequencies and is used to obtain a higher starting torque. The maximum voltage increase is 25% of the nominal output voltage. See Fig. 108.

Selecting “Automatic” will use the optimal value according to the internal model of motor. “User-Defined” can be selected when the start conditions of the application do not change and a high starting torque is always required. A fixed IxR Compensation value can be set in the menu [353].

NOTE: This menu is visible only in V/Hz mode.

352 IxR Comp		
Default:	Off	
Off	0	Function disabled
Automatic	1	Automatic compensation
User Defined	2	User defined value in percent.

Communication information

Modbus Instance no/DeviceNet no:	43142
Profibus slot/index	169/46
EtherCAT and CANopen index (hex)	4c46
Profinet IO index	19526
Fieldbus format	UInt
Modbus format	UInt

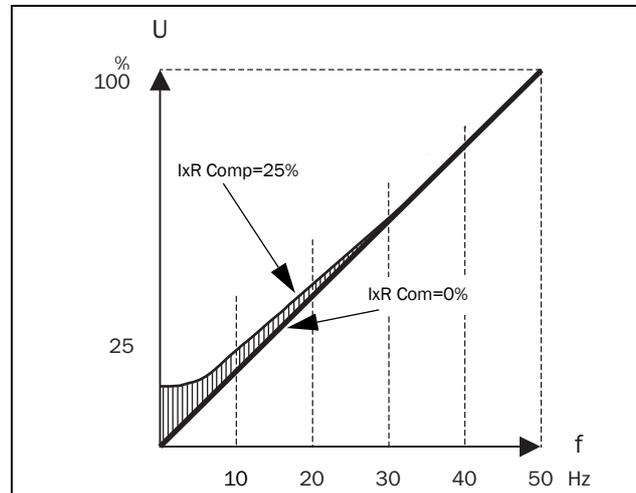


Fig. 108 IxR Comp at Linear V/Hz curve

IxR Comp_user [353]

Only visible if User-Defined is selected in previous menu.

353 IxR CompUsr	
Default:	0.0%
Range:	0-25% x U _{NOM} (0.1% of resolution)

Communication information

Modbus Instance no/DeviceNet no:	43143
Profibus slot/index	169/47
EtherCAT and CANopen index (hex)	4c47
Profinet IO index	19527
Fieldbus format	Long, 1= 0.1 %
Modbus format	Elnt

NOTE: A too high level of IxR Compensation could cause motor saturation. This can cause a “Power Fault” trip. The effect of IxR Compensation is stronger with higher power motors.

NOTE: The motor may be overheated at low speed. Therefore it is important that the Motor I²t Current [232] is set correctly.

Flux Optimization [354]

Asynchronous motors

Flux Optimization for asynchronous motors reduces the energy consumption and the motor noise, at low or no load conditions. Flux Optimization automatically decreases the V/Hz ratio, depending on the actual load of the motor when the process is in a steady state. Fig. 109 shows the area within which the Flux Optimization is active.

Permanent magnet synchronous and synchronous reluctance motors

Flux optimization for permanent magnet synchronous motors and synchronous reluctance motors adjusts the V/Hz ratio, to either minimize the current or by predicting a suitable level based on the torque (and speed). Note that IxR compensation is needed for synchronous motors to get a good start, also when flux optimization is activated.

354 Flux optim		
Default:	Off	
Off	0	Function disabled
On(lmin)	1	Flux controlled to minimize current
On	2	Flux adjusted based on the torque

Communication information

Modbus Instance no/DeviceNet no:	43144
Profibus slot/index	169/48
EtherCAT and CANopen index (hex)	4c48
Profinet IO index	19528
Fieldbus format	UInt
Modbus format	UInt

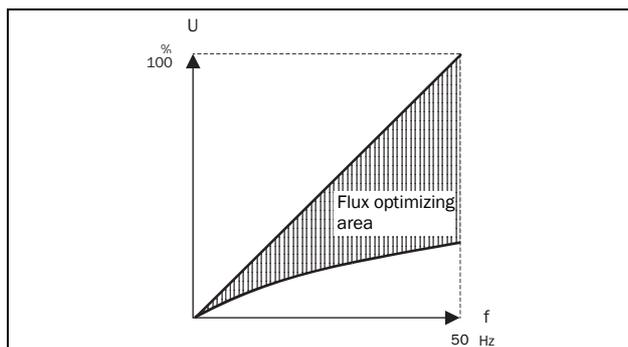


Fig. 109 Flux Optimizing

NOTE: Flux optimization works best at stable situations in slow changing processes.

Maximum power [355]

Sets maximum power. Can be used for limiting motor power in field weakening operation. This function operates as an upper power limit and internally limits the parameter “Max Torque [351]” according to :

$$T_{limit} = P_{limit}[\%] / (\text{Actual Speed} / \text{Sync Speed})$$

355 Max Power		
Default:	Off	
Off	0	Off. No power limit
1 - 400	1 - 400	1 - 400% of motor nominal power

NOTE: The maximum possible setting for parameter [355] is limited by $I_{NOM}/I_{MOT} \times 120\%$, but not higher than 400%.

Communication information

Modbus Instance no/DeviceNet no:	43145
Profibus slot/index	169/49
EtherCAT and CANopen index (hex)	4c49
Profinet IO index	19529
Fieldbus format	Long, 1=1%
Modbus format	Elnt

11.5.7 Preset References [360]

Motor Potentiometer [361]

Sets the properties of the motor potentiometer function. See the parameter “DigIn1 [521]” for the selection of the motor potentiometer function.

361 Motor Pot	
Default:	Non Volatile
Volatile	0 After a stop, trip or power down, the AC drive will start always from zero speed (or minimum speed, if selected).
Non volatile	1 Non Volatile. After a stop, trip or power down of the AC drive, the reference value at the moment of the stop will be memorized. After a new start command the output speed will resume to this saved value.

Communication information

Modbus Instance no/DeviceNet no:	43131
Profibus slot/index	169/35
EtherCAT and CANopen index (hex)	4c3b
Profinet IO index	19515
Fieldbus format	UInt
Modbus format	UInt

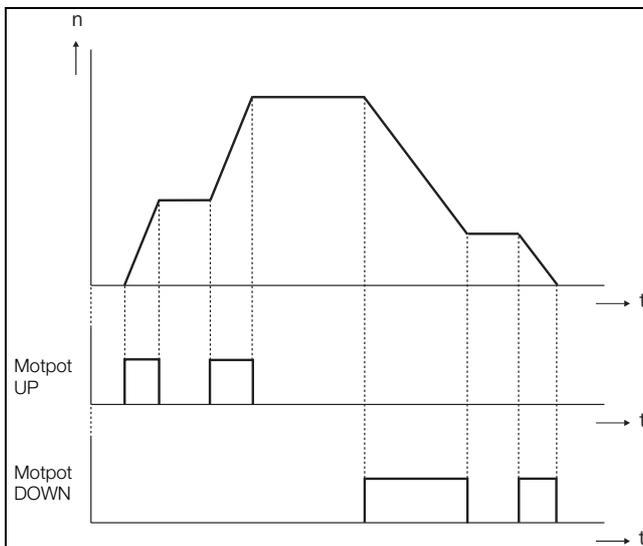


Fig. 110 MotPot function

Preset Ref 1 [362] to Preset Ref 7 [368]

Preset speeds have priority over the analogue inputs. Preset speeds are activated by the digital inputs. The digital inputs must be set to the function Pres. Ref 1, Pres. Ref 2 or Pres. Ref 4.

Depending on the number of digital inputs used, up to 7 preset speeds can be activated per parameter set. Using all the parameter sets, up to 28 preset speeds are possible.

362 Preset Ref 1	
Default:	Speed, 0 rpm
Dependent on:	Process Source [321] and Process Unit [322]
Speed mode	0 - max speed [343]
Torque mode	0 - max torque [351]
Other modes	Min according to menu [324] - max according to menu [325]

Communication information

Modbus Instance no/DeviceNet no:	43132–43138
Profibus slot/index	169/36–169/42
EtherCAT and CANopen index (hex)	4c3c - 4c42
Profinet IO index	19516 - 19522
Fieldbus format	Long, 1 = 1 rpm, 1 %, 1°C or 0.001 if Process Value/Process Ref using a [322] unit
Modbus format	EInt

The same settings are valid for the menus:

- “[363] Preset Ref 2”, with default 250 rpm
- “[364] Preset Ref 3”, with default 500 rpm
- “[365] Preset Ref 4”, with default 750 rpm
- “[366] Preset Ref 5”, with default 1000 rpm
- “[367] Preset Ref 6”, with default 1250 rpm
- “[368] Preset Ref 7”, with default 1500 rpm

The selection of the presets is as in Table 35.

Table 35

Preset Ctrl3	Preset Ctrl2	Preset Ctrl1	Output Speed
0	0	0	Analogue reference
0	0	1 ¹⁾	Preset Ref 1
0	1 ¹⁾	0	Preset Ref 2
0	1	1	Preset Ref 3
1 ¹⁾	0	0	Preset Ref 4
1	0	1	Preset Ref 5
1	1	0	Preset Ref 6
1	1	1	Preset Ref 7

1) = selected if only one preset reference is active
 1 = active input
 0 = non active input

NOTE: If only Preset Ctrl3 is active, then the Preset Ref 4 can be selected. If Presets Ctrl2 and 3 are active, then the Preset Ref 2, 4 and 6 can be selected.

Keyboard reference mode [369]

This parameter sets how the reference value [310] is edited.

369 Key Ref Mode		
Default:		MotPot
Normal	0	The reference value is edited as a normal parameter (the new reference value is activated when Enter is pressed after the value has been changed). The "Acc Time [331]" and "Dec Time [332]" are used.
MotPot	1	The reference value is edited using the motor potentiometer function (the new reference value is activated directly when the key + or - is pressed). The "Acc MotPot [333]" and "Dec MotPot [334]" are used.
MotPot+	2	This selection makes it possible to update the reference in "[310]" directly from the [100]-menu. Pressing +/- in the [100]-menu changes the menu to [310] and there you can continue to press +/- to update the reference. When no key has been pressed for a second the menu returns to [100] automatically.

Communication information

Modbus Instance no/DeviceNet no:	43139
Profibus slot/index	169/43
EtherCAT and CANopen index (hex)	4c43
Profinet IO index	19523
Fieldbus format	UInt
Modbus format	UInt

NOTE: When Key Ref Mode is set to MotPot, the reference value ramp times are according to the "Acc MotPot [333]" and "Dec MotPot [334]" settings. Actual speed ramp will be limited according to "Acc Time [331]" and "Dec Time [332]".

11.5.8 PI Speed Control [370]

The AC drive has an internal speed controller, which is used to keep the shaft speed equal to the set speed reference. This internal speed controller works without an external feedback.

With the parameters speed P gain [372] and speed I time [373] the controller can be optimized manually.

Speed PI Autotune [371]

The function speed autotune will perform a torque step change, and measures the reaction on shaft speed.

It automatically sets the internal speed I time to its optimum value. The speed PI autotune must be done during operation with the motor load connected and the motor running. "Autotune" will be flashing in the display during the autotune operation. When the test is successfully concluded, the display will show "Autotune OK!" for 3 s.

371 Spd PI Auto		
Default:		Off
Off	0	
On	1	

Communication information

Modbus Instance no/DeviceNet no:	43151
Profibus slot/index	169/55
EtherCAT and CANopen index (hex)	4c4f
Profinet IO index	19535
Fieldbus format	UInt
Modbus format	UInt

NOTE: Run the autotune at speed lower than 80% of the nominal motor speed. Otherwise autotune will fail.

NOTE: RUN command must be activated manually via Keyboard button.

NOTE: The setting will automatically return to Off when the autotuning is finished.

NOTE: This menu is only visible if AC drive Mode = Speed or V/Hz.

Speed P Gain [372]

For adjusting the P gain of the internal speed controller. The speed P gain must be manually tuned for a faster reaction to load changes. The speed P gain can be increased until there is audible noise from the motor and then decreased until the noise disappears.

372 Spd P Gain	
Default:	See note
Range:	0.0–60.0

Communication information

Modbus Instance no/DeviceNet no:	43152
Profibus slot/index	169/56
EtherCAT and CANopen index (hex)	4c50
Profinet IO index	19536
Fieldbus format	Long, 1=0.1
Modbus format	Elnt

Speed I Time [373]

To adjust the time of the internal speed controller see parameter Speed PI Autotune [371].

373 Spd I Time	
Default:	See note
Range:	0.05–100 s

Communication information

Modbus Instance no/DeviceNet no:	43153
Profibus slot/index	169/57
EtherCAT and CANopen index (hex)	4c51
Profinet IO index	19537
Fieldbus format	Long, 1=0.01 s
Modbus format	Elnt

NOTE: The default settings are calculated for a standard 4-pole motor without load according to the nominal power of the AC drive.

11.5.9 PID Process Control [380]

The PID controller is used to control an external process via a feedback signal. The reference value can be set via analogue input AnIn1, at the Control Panel [310] by using a Preset Reference, or via serial communication. The feedback signal (actual value) must be connected to an analogue input that is set to the function Process Value.

Process PID Control [381]

This function enables the PID controller and defines the response to a changed feedback signal.

381 PID Control		
Default:	Off	
Off	0	PID control deactivated.
On	1	The speed increases when the feedback value decreases. PID settings according to menus [381] to [385].
Invert	2	The speed decreases when the feedback value decreases. PID settings according to menus [383] to [385].

Communication information

Modbus Instance no/DeviceNet no:	43154
Profibus slot/index	169/58
EtherCAT and CANopen index (hex)	4c52
Profinet IO index	19538
Fieldbus format	UInt
Modbus format	UInt

PID P Gain [383]

Setting the P gain for the PID controller.

383 PID P Gain	
Default:	1.0
Range:	0.0–30.0

Communication information

Modbus Instance no/DeviceNet no:	43156
Profibus slot/index	169/60
EtherCAT and CANopen index (hex)	4c54
Profinet IO index	19540
Fieldbus format	Long, 1=0.1
Modbus format	Elnt

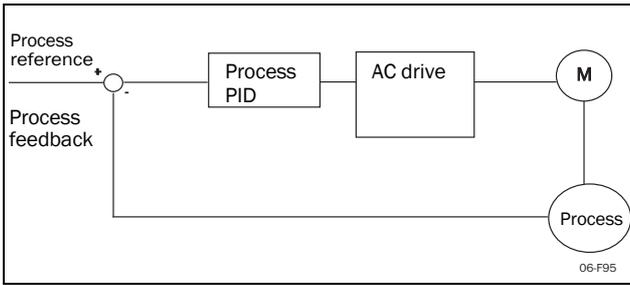


Fig. 111 Closed loop PID control

PID I Time [384]

Setting the integration time for the PID controller.

384	PID I Time
Default:	1.00 s
Range:	0.01–300 s

Communication information

Modbus Instance no/DeviceNet no:	43157
Profibus slot/index	169/61
EtherCAT and CANopen index (hex)	4c55
Profinet IO index	19541
Fieldbus format	Long, 1=0.01 s
Modbus format	Elnt

Process PID D Time [385]

Setting the differentiation time for the PID controller.

385	PID D Time
Default:	0.00 s
Range:	0.00–30 s

Communication information

Modbus Instance no/DeviceNet no:	43158
Profibus slot/index	169/62
EtherCAT and CANopen index (hex)	4c56
Profinet IO index	19542
Fieldbus format	Long, 1=0.01 s
Modbus format	Elnt

PID sleep functionality

This function is controlled via a wait delay and a separate wake-up margin condition. With this function it is possible to put the AC drive in “sleep mode” when the process value is at its set point and the motor is running at minimum speed for the length of the time set in [386]. By going into sleep mode, the by the application consumed energy is reduced to a minimum. When the process feedback value goes below the set margin on the process reference as set in [387], the AC drive will wake up automatically and normal PID operation continues, see examples.

NOTE: When the drive is in Sleep mode, this is indicated with “slp” in the lower left corner of the display.

PID sleep when less than minimum speed [386]

If the PID output is equal to or less than minimum speed for given delay time, the AC drive will go to sleep.

386	PID<MinSpd
Default:	Off
Range:	Off, 0.01 –3600 s

Communication information

Modbus Instance no/DeviceNet no:	43371
Profibus slot/index	170/20
EtherCAT and CANopen index (hex)	4d2b
Profinet IO index	19755
Fieldbus format	Long, 1=0.01 s
Modbus format	Elnt

NOTE: Menu [386] has higher priority than menu [342].

PID Activation Margin [387]

The PID activation (wake-up) margin is related to the process reference and sets the limit when the AC drive should wake-up/start again.

387 PID Act Marg	
Default:	0
Range:	0 – 10000 in Process unit

Communication information

Modbus Instance no/DeviceNet no:	43372
Profibus slot/index	170/21
EtherCAT and CANopen index (hex)	4d2c
Profinet IO index	19756
Fieldbus format	Long, 1= 1 rpm, 1 %, 1°C or 0.001 if Process Value/Process Ref using a [322] unit
Modbus format	Elnt

NOTE: The margin is always a positive value.

Example 1 PID control = normal (flow or pressure control)

[321] = F (AnIn)
 [322] = Bar
 [310] = 20 Bar
 [342] = 2 s (inactive since [386] is activated and have higher priority)
 [381] = On
 [386] = 10 s
 [387] = 1 Bar

The AC drive will stop/sleep when the speed (PID output) is below or equal to Min Speed for 10 seconds. The AC drive will activate/wake up when the “Process value” goes below the PID Activation Margin which is related to the process reference, i.e. goes below (20-1) Bar. See Fig. 112.

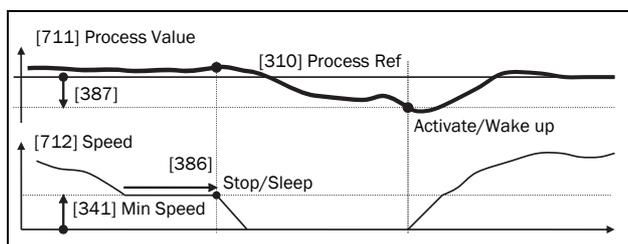


Fig. 112 PID Stop/sleep with normal PID

Example 2 PID control = inverted (tank level control)

[321] = F (AnIn)
 [322] = m
 [310] = 7 m
 [342] = 2 s (inactive since [386] is activated and have higher priority)
 [381] = Inverted
 [386] = 30 s
 [387] = 1 m

The AC drive will stop/sleep when the speed (PID output) is below or equal to Min Speed for 30 seconds. The AC drive will activate/wake up when the “Process value” goes above the PID Activation Margin which is related to the process reference, i.e. goes above (7+1) m. See Fig. 113.

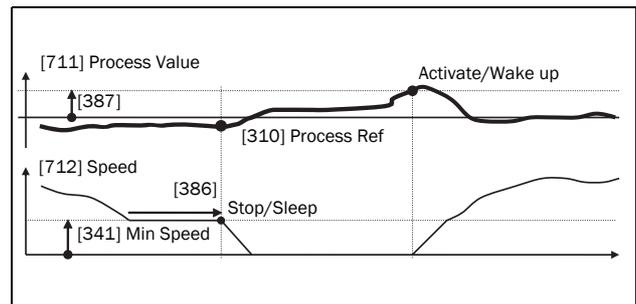


Fig. 113 PID Stop/sleep with inverted PID

PID Steady State Test [388]

In application situations where the feedback can become independent of the motor speed, this PID Steady Test function can be used to overrule the PID operation and force the AC drive to go in sleep mode i.e. the AC drive automatically reduces the output speed while at the same time ensures the process value.

Example: pressure controlled pump systems with low/no flow operation and where the process pressure has become independent of the pump speed, e.g. due to slowly closed valves. By going into Sleep mode, heating of the pump and motor will be avoided and no energy is spilled.

PID Steady state test delay.

NOTE: It is important that the system has reached a stable situation before the Steady State Test is initiated.

388 PID Stdy Tst	
Default:	Off
Range:	Off, 0.01–3600 s

Communication information

Modbus Instance no/DeviceNet no:	43373
Profibus slot/index	170/22
EtherCAT and CANopen index (hex)	4d2d
Profinet IO index	19757
Fieldbus format	Long, 1=0.01 s
Modbus format	Elnt

PID Steady State Margin [389]

PID steady state margin defines a margin band around the reference that defines “steady state operation”. During the steady state test the PID operation is overruled and the AC drive is decreasing the speed as long as the PID error is within the steady state margin. If the PID error goes outside the steady state margin the test failed and normal PID operation continues, see example.

389 PID Stdy Mar	
Default:	0
Range:	0–10000 in process unit

Communication information

Modbus Instance no/DeviceNet no:	43374
Profibus slot/index	170/23
EtherCAT and CANopen index (hex)	4d2e
Profinet IO index	19758
Fieldbus format	Long, 1= 1 rpm, 1 %, 1°C or 0.001 if Process Value/ Process Ref using a [322] unit
Modbus format	EInt

Example: The PID Steady Test starts when the process value [711] is within the margin and Steady State Test Wait Delay has expired. The PID output will decrease speed with a step value which corresponds to the margin as long as the Process value [711] stays within steady state margin. When Min Speed [341] is reached the steady state test was successful and stop/sleep is commanded if PID sleep function [386] and [387] is activated. If the Process value [711] goes outside the set steady state margins then the test

failed and normal PID operation will continue, see Fig. 114.

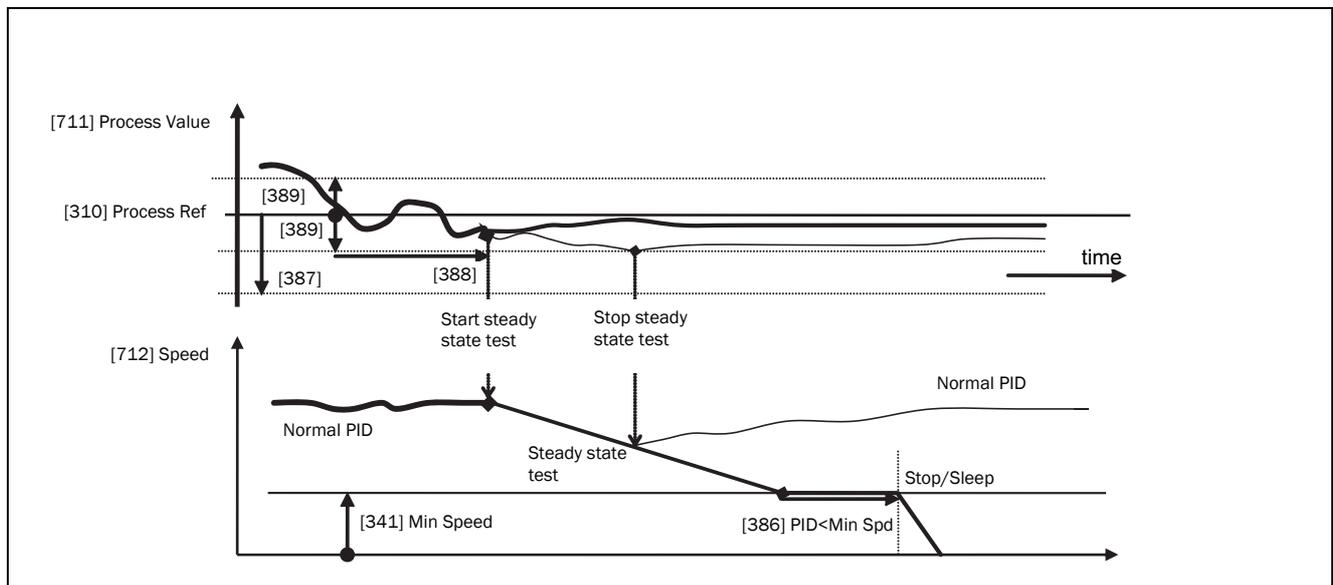


Fig. 114 Steady state test

11.5.10 Pump/Fan Control [390]

The Pump Control functions are in menu [390]. The function is used to control a number of drives (pumps, fans, etc.) of which one is always driven by the AC drive.

Pump enable [391]

This function will enable the pump control to set all relevant pump control functions.

391		Pump enable
Default:		Off
Off	0	Pump control is switched off.
On	1	Pump control is on: - Pump control parameters [392] to [39G] appear and are activated according to default settings. - View functions [39H] to [39M] are added in the menu structure.

Communication information

Modbus Instance no/DeviceNet no:	43161
Profibus slot/index	169/65
EtherCAT and CANopen index (hex)	4c59
Profinet IO index	19545
Fieldbus format	UInt
Modbus format	UInt

Number of Drives [392]

Sets the total number of drives which are used, including the Master AC drive. The setting here depends on the parameter "Select Drive [393]". After the number of drives is chosen it is important to set the relays for the pump control. If the digital inputs are also used for status feedback, these must be set for the pump control according to; Pump 1 OK– Pump6 OK in menu [520].

392		No of Drives
Default:		2
1-3		Number of drives if I/O Board is not used.
1-6		Number of drives if 'Alternating MASTER' is used, see Select Drive [393]. (I/O Board is used.)
1-7		Number of drives if 'Fixed MASTER' is used, see Select Drive [393]. (I/O Board is used.)

NOTE: Used relays must be defined as Slave Pump or Master Pump. Used digital inputs must be defined as Pump Feedback.

Communication information

Modbus Instance no/DeviceNet no:	43162
Profibus slot/index	169/66
EtherCAT and CANopen index (hex)	4c5a
Fieldbus format	UInt
Modbus format	UInt

Select Drive [393]

Sets the main operation of the pump system. 'Sequence' and 'Runtime' are Fixed MASTER operation. 'All' means Alternating MASTER operation.

393		Select Drive
Default:		Sequence
Sequence	0	Fixed MASTER operation: - The additional drives will be selected in sequence, i.e. first pump 1 then pump 2 etc. - A maximum of 7 drives can be used.
Run Time	1	Fixed MASTER operation: - The additional drives will be selected depending on the Run Time. So the drive with the lowest Run Time will be selected first. The Run Time is monitored in menus [39H] to [39M] in sequence. For each drive the Run Time can be reset. - When drives are stopped, the drive with the longest Run Time will be stopped first. - Maximum 7 drives can be used.
All	2	Alternating MASTER operation: - When the drive is powered up, one drive is selected as the Master drive. The selection criteria depends on the Change Condition [394]. The drive will be selected according to the Run Time. So the drive with the lowest Run Time will be selected first. The Run Time is monitored in menus [39H] to [39M] in sequence. For each drive the Run Time can be reset. - A maximum of 6 drives can be used.

Communication information

Modbus Instance no/DeviceNet no:	43163
Profibus slot/index	169/67
EtherCAT and CANopen index (hex)	4c5b
Profinet IO index	19547
Fieldbus format	UInt, 1=1
Modbus format	UInt

NOTE: This menu will NOT be active if only one drive is selected.

Change Condition [394]

This parameter determines the criteria for changing the master. This menu only appears if Alternating MASTER operation is selected. The elapsed run time of each drive is monitored. The elapsed run time always determines which drive will be the 'new' master drive.

This function is only active if the parameter "Select Drive [393]" = "All" is used.

394		Change Cond
Default:		Both
Stop	0	The Runtime of the master drive determines when a master drive has to be changed. The change will only take place after a: - Power Up - Stop - Standby condition - Trip condition.
Timer	1	The master drive will be changed if the timer setting in Change Timer [395] has elapsed. The change will take place immediately. So during operation the additional pumps will be stopped temporarily, the 'new' master will be selected according to the Run Time and the additional pumps will be started again. It is possible to leave 2 pumps running during the change operation. This can be set with Drives on Change [396].
Both	2	The master drive will be changed if the timer setting in Change Timer [395] has elapsed. The 'new' master will be selected according to the elapsed Run Time. The change will only take place after a: - Power Up - Stop - Standby condition. - Trip condition.

Communication information

Modbus Instance no/DeviceNet no:	43164
Profibus slot/index	169/68
EtherCAT and CANopen index (hex)	4c5c
Profinet IO index	19548
Fieldbus format	UInt
Modbus format	UInt

NOTE: If the Status feedback inputs (Digin 9 to Digin 14) are used, the master drive will be changed immediately if the feedback generates an 'Error'.

Change Timer [395]

When the time set here is elapsed, the master drive will be changed. This function is only active if "Select Drive [393]" = All and "Change Cond [394]" = Timer/ Both.

395		Change Timer
Default:		50 h
Range:		1-3000 h

Communication information

Modbus Instance no/DeviceNet no:	43165
Profibus slot/index	169/69
EtherCAT and CANopen index (hex)	4c5d
Profinet IO index	19549
Fieldbus format	UInt, 1=1 h
Modbus format	UInt, 1=1 h

Drives on Change [396]

If a master drive is changed according to the timer function (Change Condition=Timer/Both [394]), it is possible to leave additional pumps running during the change operation. With this function the change operation will be as smooth as possible. The maximum number to be programmed in this menu depends on the number of additional drives.

Example:

If the number of drives is set to 6, the maximum value will be 4. This function is only active if "Select Drive [393]" = All.

396		Drives on Ch
Default:		0
Range:		0 to (the number of drives - 2)

Communication information

Modbus Instance no/DeviceNet no:	43166
Profibus slot/index	169/70
EtherCAT and CANopen index (hex)	4c5e
Profinet IO index	19550
Fieldbus format	UInt
Modbus format	UInt

Upper Band [397]

If the speed of the master drive comes into the upper band, an additional drive will be added after a delay time that is set in “Start delay [399]”.

397 Upper Band	
Default:	10%
Range:	0-100% of total min speed to max speed

Communication information

Modbus Instance no/DeviceNet no:	43167
Profibus slot/index	169/71
EtherCAT and CANopen index (hex)	4c5f
Profinet IO index	19551
Fieldbus format	Long, 1=1%
Modbus format	Elnt

Example:

Max Speed = 1500 rpm

Min Speed = 300 rpm

Upper Band = 10%

Start delay will be activated:

Range = Max Speed to Min Speed = 1500–300 = 1200 rpm

10% of 1200 rpm = 120 rpm

Start level = 1500–120 = 1380 rpm

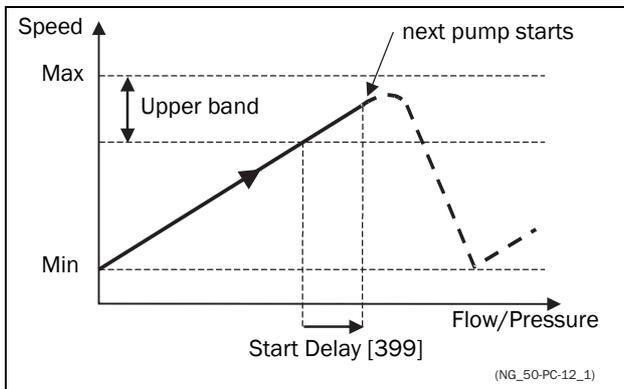


Fig. 115 Upper band

Lower Band [398]

If the speed of the master drive comes into the lower band an additional drive will be stopped after a delay time. This delay time is set in the parameter “Stop Delay [39A]”.

398 Lower Band	
Default:	10%
Range:	0-100% of total min speed to max speed

Communication information

Modbus Instance no/DeviceNet no:	43168
Profibus slot/index	169/72
EtherCAT and CANopen index (hex)	4c60
Profinet IO index	19552
Fieldbus format	Long, 1=1%
Modbus format	Elnt

Example:

Max Speed = 1500 rpm

Min Speed = 300 rpm

Lower Band = 10%

Stop delay will be activated:

Range = Max Speed - Min Speed = 1500–300 = 1200 rpm

10% of 1200 rpm = 120 rpm

Start level = 300 + 120 = 420 rpm

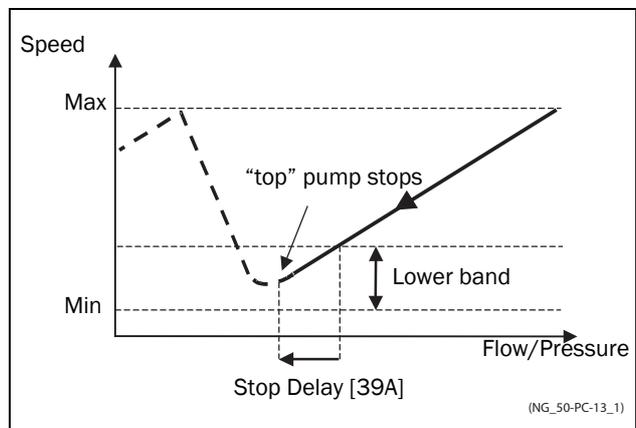


Fig. 116 Lower band

Start Delay [399]

This delay time must have elapsed before the next pump is started. A delay time prevents the nervous switching of pumps.

399 Start Delay	
Default:	0 s
Range:	0-999 s

Communication information

Modbus Instance no/DeviceNet no:	43169
Profibus slot/index	169/73
EtherCAT and CANopen index (hex)	4c61
Profinet IO index	19553
Fieldbus format	Long, 1=1s
Modbus format	Elnt

Stop Delay [39A]

This delay time must have elapsed before the 'top' pump is stopped. A delay time prevents the nervous switching of pumps.

39A Stop Delay	
Default:	0 s
Range:	0-999 s

Communication information

Modbus Instance no/DeviceNet no:	43170
Profibus slot/index	169/74
EtherCAT and CANopen index (hex)	4c62
Profinet IO index	19554
Fieldbus format	Long, 1=1 s
Modbus format	Elnt

Upper Band Limit [39B]

If the speed of the pump reaches the upper band limit, the next pump is started immediately without delay. If a start delay is used this delay will be ignored. Range is between 0%, equalling max speed, and the set percentage for the "UpperBand [397]".

39B Upp Band Lim	
Default:	0%
Range:	0 to Upper Band level. 0% (=max speed) means that the Limit function is switched off.

Communication information

Modbus Instance no/DeviceNet no:	43171
Profibus slot/index	169/75
EtherCAT and CANopen index (hex)	4c63
Profinet IO index	19555
Fieldbus format	Long, 1=1%
Modbus format	Elnt

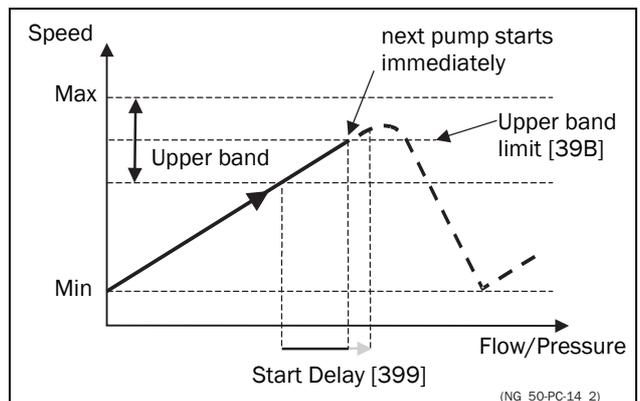


Fig. 117 Upper band limit

Lower Band Limit [39C]

If the speed of the pump reaches the lower band limit, the 'top' pump is stopped immediately without delay. If a stop delay is used this delay will be ignored. Range is from 0%, equalling min speed, to the set percentage for the "Lower Band [398]".

39C Low Band Lim	
Default:	0%
Range:	0 to Lower Band level. 0% (=min speed) means that the Limit function is switched off.

Communication information

Modbus Instance no/DeviceNet no:	43172
Profibus slot/index	169/76
EtherCAT and CANopen index (hex)	4c64
Profinet IO index	19556
Fieldbus format	Long, 1=1%
Modbus format	Elnt

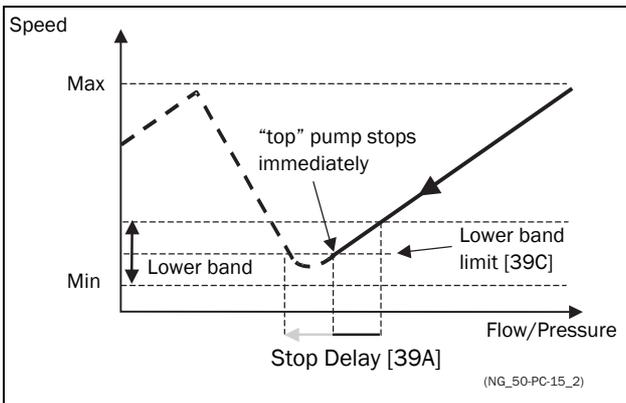


Fig. 118 Lower band limit

Settle Time Start [39D]

The settle start allows the process to settle after a pump is switched on before the pump control continues. If an additional pump is started D.O.L. (Direct On Line) or Y/Δ, the flow or pressure can still fluctuate due to the 'rough' start/stop method. This could cause unnecessary starting and stopping of additional pumps.

During the Settle start:

- PID controller is off.
- The speed is kept at a fixed level after adding a pump.

39D Settle Start	
Default:	0 s
Range:	0-999 s

Communication information

Modbus Instance no/DeviceNet no:	43173
Profibus slot/index	169/77
EtherCAT and CANopen index (hex)	4c65
Profinet IO index	19557
Fieldbus format	Long, 1=1 s
Modbus format	Elnt

Transition Speed Start [39E]

The transition speed start is used to minimize a flow/pressure overshoot when adding another pump. When an additional pump needs to be switched on, the master pump will slow down to the set transition speed start value, before the additional pump is started. The setting depends on the dynamics of both the master drive and the additional drives.

The transition speed is best set by trial and error.

In general:

- If the additional pump has 'slow' start/stop dynamics, then a higher transition speed should be used.
- If the additional pump has 'fast' start/stop dynamics, then a lower transition speed should be used.

39E TransS Start	
Default:	60%
Range:	0-100% of total min speed to max speed

Communication information

Modbus Instance no/DeviceNet no:	43174
Profibus slot/index	169/78
EtherCAT and CANopen index (hex)	4c66
Profinet IO index	19558
Fieldbus format	Long, 1=1%
Modbus format	Elnt

NOTE: If set to 100 %, the transition speed, when starting pumps, is ignored and no speed adaption is made.

I.e. the slave pump is started directly and speed of the master pump is maintained.

Example

Max Speed = 1500 rpm
 Min Speed = 200 rpm
 TransS Start = 60%

When an additional pump is needed, the speed will be controlled down to min speed + (60% x (1500 rpm - 200 rpm)) = 200 rpm + 780 rpm = 980 rpm. When this speed is reached, the additional pump with the lowest run time hours will be switched on.

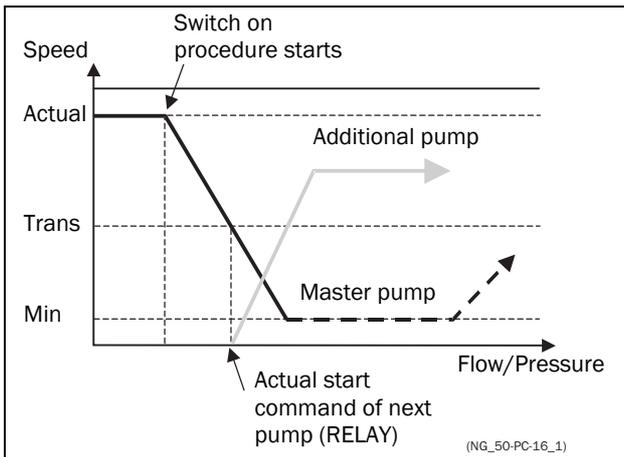


Fig. 119 Transition speed start

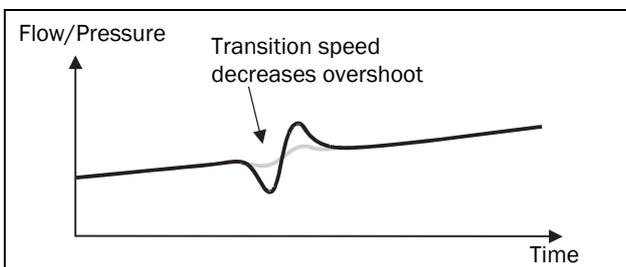


Fig. 120 Effect of transition speed

Settle Time Stop [39F]

The settle stop allows the process to settle after a pump is switched off before the pump control continues. If an additional pump is stopped D.O.L. (Direct On Line) or Y/Δ, the flow or pressure can still fluctuate due to the 'rough' start/stop method. This could cause unnecessary starting and stopping of additional pumps.

During the Settle stop:

- PID controller is off.
- the speed is kept at a fixed level after stopping a pump

39F Settle Stop	
Default:	0 s
Range:	0–999 s

Communication information

Modbus Instance no/DeviceNet no:	43175
Profibus slot/index	169/79
EtherCAT and CANopen index (hex)	4c67
Profinet IO index	19559
Fieldbus format	Long, 1=1 s
Modbus format	Elnt

Transition Speed Stop [39G]

The transition speed stop is used to minimize a flow/pressure overshoot when shutting down an additional pump. The setting depends on the dynamics of both the master drive and the additional drives.

In general:

- If the additional pump has 'slow' start/stop dynamics, then a higher transition speed should be used.
- If the additional pump has 'fast' start/stop dynamics, then a lower transition speed should be used.

39G TransS Stop	
Default:	60%
Range:	0-100% of total min speed to max speed

Communication information

Modbus Instance no/DeviceNet no:	43176
Profibus slot/index	169/80
EtherCAT and CANopen index (hex)	4c68
Profinet IO index	19560
Fieldbus format	Long, 1=1%
Modbus format	Elnt

NOTE: If set to 0 %, the transition speed when stopping pumps, is ignored and no speed adaption is made.

I.e. the slave pump is stopped directly and speed of the master pump is continued.

Example

Max Speed = 1500 rpm
 Min Speed = 200 rpm
 TransS Start = 60%

When less additional pumps are needed, the speed will be controlled up to min speed + (60% x (1500 rpm - 200 rpm)) = 200 rpm + 780 rpm = 980 rpm. When this speed is reached, the additional pump with the highest run time hours will be switched off.

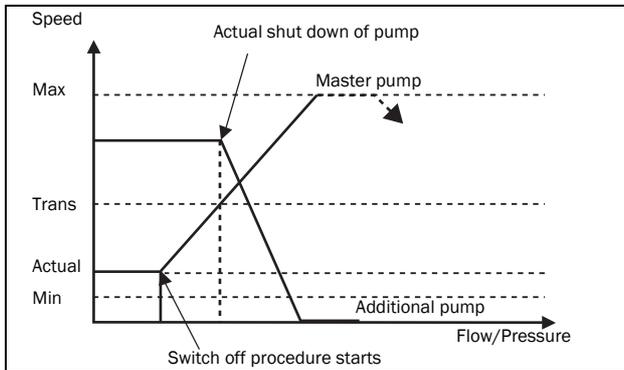


Fig. 121 Transition speed stop

Run Times 1-6 [39H] to [39M]

39H Run Time 1	
Unit:	h:mm:ss (hours:minutes:seconds)
Range:	0:00:00–262143:59:59

Communication information

Modbus Instance no/ DeviceNet no:	31051 : 31052 : 31053(hr:min:sec) 31054 : 31055 : 31056(hr:min:sec) 31057 : 31058 : 31059(hr:min:sec) 31060 : 31061 : 31062(hr:min:sec) 31063 : 31064 : 31065(hr:min:sec) 31066 : 31067 : 31068(hr:min:sec)
Profibus slot/index	121/195, 121/196, 121/197, 121/198, 121/199, 121/200, 121/201, 121/202, 121/203, 121/204, 121/205, 121/206, 121/207, 121/208, 121/209, 121/210, 121/211, 121/212
EtherCAT and CANopenindex (hex)	241b : 241c : 241d 241e : 241f : 2420 2421 : 2422 : 2423 2424 : 2425 : 2426 2427 : 2428 : 2429 242a : 242b : 242c
Profinet IO index	1051:1052:1053 - 1068
Fieldbus format	Long, 1=1h/m/s
Modbus format	Elnt

Reset Run Times 1-6 [39H1] to [39M1]

39H1 Rst Run Tm1		
Default:	No	
No	0	
Yes	1	

Communication information

Modbus Instance no/DeviceNet no:	38–43, pump 1 -6
Profibus slot/index	0/37–0/42
EtherCAT and CANopen index (hex)	2026 - 202b
Profinet IO index	38 - 43
Fieldbus format	UInt
Modbus format	UInt

Pump Status [39N]

39N Pump 123456	
Indication	Description
C	Control, master pump, only when alternating master is used
D	Direct control
O	Pump is off
E	Pump error

Communication information

Modbus Instance no/DeviceNet no:	31069
Profibus slot/index	121/213
EtherCAT and CANopen index (hex)	242d
Profinet IO index	1069
Fieldbus format	UInt
Modbus format	UInt

Number backup/reserve [39P]

Sets the number of pumps used for backup/reserve which in normal conditions can not be selected. This function can be used for increasing redundancy in the pump system by having pumps in reserve that can be activated when some pumps indicate fault or are shut off for maintenance.

39P No of Backup	
Default:	0
Range:	0-3

Communication information

Modbus Instance no/DeviceNet no:	43177
Profibus slot/index	169/81
EtherCAT and CANopen index (hex)	4c69
Profinet IO index	19561
Fieldbus format	UInt
Modbus format	UInt

11.5.11 Crane Option [3A0]

Settings for the optional Crane board (Crane Remote Input/Output card). See also the Crane option instruction manual.

NOTE: This menu is only visible if the crane board is connected to the AC drive.

Crane enable [3A1]

When the crane option board is connected, it is possible to (de)activate the crane option board inputs.

NOTE: Deviation function is active even if [3A1]=off.

3A1 Crane enable		
Default:	Off	
Off	0	Crane option board deactivated
On	1	Crane option board activated

Communication information

Modbus Instance no/DeviceNet no:	43181
Profibus slot/index	169/85
EtherCAT and CANopen index (hex)	4c6d
Profinet IO index	19565
Fieldbus format	UInt
Modbus format	UInt

Control [3A2]

To select the type of crane joystick control.

3A2 Control		
Default:	4-Speeds	
4-Speeds	0	4-Speed joystick
3-Pos	1	3-Position switch
Analogue	2	Analogue joystick

Communication information

Modbus Instance no/DeviceNet no:	43182
Profibus slot/index	169/86
EtherCAT and CANopen index (hex)	4c6e
Profinet IO index	19566
Fieldbus format	UInt
Modbus format	UInt

Crane Relay CR1 [3A3]

Crane Relay CR1 on the Crane option board is fixed to the No Trip function.

3A3 Crane Relay1	
Default:	No Trip
Selections	Fixed to No Trip

Communication information

Modbus Instance no/DeviceNet no:	43183
Profibus slot/index	169/87
EtherCAT and CANopen index (hex)	4c6f
Profinet IO index	19567
Fieldbus format	UInt
Modbus format	UInt

Crane Relay CR2 [3A4]

To select the function of Crane Relay CR2 on the Crane option board. Same selections as for the relays on the control board.

3A4 Crane Relay2	
Default:	Brake
Selections	Same selections as for the relays on the control board

Communication information

Modbus Instance no/DeviceNet no:	43184
Profibus slot/index	169/88
EtherCAT and CANopen index (hex)	4c70
Profinet IO index	19568
Fieldbus format	UInt
Modbus format	UInt

Pre Limit Switch Speed [3A5]

To set the speed used when Pre-Limit Switch on the Crane option board is active.

3A5 PreLimSwSpd	
Default:	0 rpm
Range:	0 – 4 x Motor Sync speed

Communication information

Modbus Instance no/DeviceNet no:	43185
Profibus slot/index	169/89
EtherCAT and CANopen index (hex)	4c71
Profinet IO index	19569
Fieldbus format	Int, 1=1 rpm
Modbus format	Int, 1=1 rpm

Crawl speed H/R [3A6]

To set the speed used when crawling (min. speed) during a hoisting operation. Activated with input A1, Crawl H/R=Start in positive speed direction

3A6 CrawlSpd H/R	
Default:	0
Range:	0 – 4 x Sync speed

Communication information

Modbus Instance no/DeviceNet no:	43189
Profibus slot/index	169/93
EtherCAT and CANopen index (hex)	4c75
Profinet IO index	19573
Fieldbus format	Int, 1=1 rpm
Modbus format	Int, 1=1 rpm

Crawl speed L/L [3A7]

To set the speed used when crawling (min. speed) during lowering operation. Activated with input A2, Crawl L/L=Start in negative speed direction.

3A7 CrawlSpd L/L	
Default:	0
Range:	0 – 4 x Sync speed

Communication information

Modbus Instance no/DeviceNet no:	43190
Profibus slot/index	169/94
EtherCAT and CANopen index (hex)	4c76
Profinet IO index	19574
Fieldbus format	Int, 1=1 rpm
Modbus format	Int, 1=1 rpm

Speed 2 [3A8]

To set the speed used when the input B1, Speed 2 on the Crane option board is active.

3A8 Speed 2	
Default:	0
Range:	0 – 4 x Sync speed

Communication information

Modbus Instance no/DeviceNet no:	43186
Profibus slot/index	169/90
EtherCAT and CANopen index (hex)	4c72
Profinet IO index	19570
Fieldbus format	Int, 1=1 rpm
Modbus format	Int, 1=1 rpm

Speed 3 [3A9]

To set the speed used when the input B2, Speed 3 on the Crane option board is active.

3A9 Speed 3	
Default:	0
Range:	0 – 4 x Motor Sync speed

Communication information

Modbus Instance no/DeviceNet no:	43187
Profibus slot/index	169/91
EtherCAT and CANopen index (hex)	4c73
Profinet IO index	19571
Fieldbus format	Int, 1=1 rpm
Modbus format	Int, 1=1 rpm

Speed 4 [3AA]

To set the speed used when the input B3, Speed 4 on the Crane option board is active.

3AA Speed 4	
Default:	0
Range:	0 – 4 x Motor Sync speed

Communication information

Modbus Instance no/DeviceNet no:	43188
Profibus slot/index	169/92
EtherCAT and CANopen index (hex)	4c74
Profinet IO index	19572
Fieldbus format	Int, 1=1 rpm
Modbus format	Int, 1=1 rpm

Deviation Band width [3AB]

To define the speed deviation window within which the AC drive is in control of the motor.

3AB Dev Bandwidt	
Default:	0
Range:	0 – 4 x Sync speed

Communication information

Modbus Instance no/DeviceNet no:	43191
Profibus slot/index	169/95
EtherCAT and CANopen index (hex)	4c77
Profinet IO index	19575
Fieldbus format	Int, 1=1 rpm
Modbus format	Int, 1=1 rpm

Deviation Time [3AC]

To set the time during which the deviation condition must be active, before the inverter trips.

3AC Dev. Time	
Default:	0.10 s
Range:	0.05 – 1 s

Communication information

Modbus Instance no/DeviceNet no:	43192
Profibus slot/index	169/96
EtherCAT and CANopen index (hex)	4c78
Profinet IO index	19576
Fieldbus format	Long, 1=0.001 s
Modbus format	Elnt

LAFS Load [3AD]

To set the load below which the VFB/VFX goes into load dependent field weakening operation.

3AD LAFS Load		
Default:		Off
Off	0	Off
1–100	1–100	1% – 100%

Communication information

Modbus Instance no/DeviceNet no:	43193
Profibus slot/index	169/97
EtherCAT and CANopen index (hex)	4c79
Profinet IO index	19577
Fieldbus format	Long, 1=1%
Modbus format	Elnt

When set to OFF, the load dependent field weakening function is switched off.

CRIO N input function [3AG]

Sets the function of CRIO/Crane I/O interface N(Null) input.

3AG Crane N Func		
Default:		Zero Pos
Off	0	N input not used
Zero Pos	1	N input used for joystick zero position indication.
Brk Ackn	2	N input used for Brake Acknowledge. see page 131.

Communication information

Modbus Instance no/DeviceNet no:	43194
Profibus slot/index	169/98
EtherCAT and CANopen index (hex)	4c7a
Profinet IO index	19578
Fieldbus format	UInt
Modbus format	UInt

Note: Brake Acknowledge via Crane I/O has priority (and overrules) Brake acknowledge via control board I/O ([521 DigIn1] - [528 Dig In8]).

11.6 Load Monitor and Process Protection [400]

11.6.1 Load Monitor [410]

The monitor functions enable the AC drive to be used as a load monitor. Load monitors are used to protect machines and processes against mechanical overload and underload, e.g. a conveyer belt or screw conveyer jamming, belt failure on a fan and a pump dry running. See explanation in Chapter 7.5 page 67.

Alarm Select [411]

Selects the types of alarms that are active.

411 Alarm Select		
Default:		Off
Off	0	No alarm functions active.
Min	1	Min Alarm active. The alarm output functions as an underload alarm.
Max	2	Max Alarm active. The alarm output functions as an overload alarm.
Max+Min	3	Both Max and Min alarm are active. The alarm outputs function as overload and underload alarms.

Communication information

Modbus Instance no/DeviceNet no:	43321
Profibus slot/index	169/225
EtherCAT and CANopen index (hex)	4cf9
Profinet IO index	19705
Fieldbus format	UInt
Modbus format	UInt

Alarm Trip [412]

Selects which alarm must cause a trip to the AC drive.

412 Alarm trip	
Default:	Off
Selection:	Same as in menu [411]

Communication information

Modbus Instance no/DeviceNet no:	43322
Profibus slot/index	169/226
EtherCAT and CANopen index (hex)	4cfa
Profinet IO index	19706
Fieldbus format	UInt
Modbus format	UInt

Ramp Alarm [413]

This function inhibits the (pre) alarm signals during acceleration/deceleration of the motor to avoid false alarms.

413 Ramp Alarm		
Default:		Off
Off	0	(Pre) alarms are inhibited during acceleration/deceleration.
On	1	(Pre) alarms active during acceleration/deceleration.

Communication information

Modbus Instance no/DeviceNet no:	43323
Profibus slot/index	169/227
EtherCAT and CANopen index (hex)	4cfb
Profinet IO index	19707
Fieldbus format	UInt
Modbus format	UInt

Alarm Start Delay [414]

This parameter is used if, for example, you want to override an alarm during the start-up procedure.

Sets the delay time after a run command, after which the alarm may be given.

- If Ramp Alarm=On. The start delay begins after a RUN command.
- If Ramp Alarm=Off. The start delay begins after the acceleration ramp.

414 Start Delay	
Default:	2 s
Range:	0-3600 s

Communication information

Modbus Instance no/DeviceNet no:	43324
Profibus slot/index	169/228
EtherCAT and CANopen index (hex)	4cfc
Profinet IO index	19708
Fieldbus format	Long, 1=1 s
Modbus format	EInt

Load Type [415]

In this menu you select monitor type according to the load characteristic of your application. By selecting the required monitor type, the overload and underload alarm function can be optimized according to the load characteristic.

When the application has a constant load over the whole speed range, i.e. extruder or screw compressor, the load type can be set to basic. This type uses a single value as a reference for the nominal load. This value is used for the complete speed range of the AC drive. The value can be set or automatically measured. See Autoset Alarm [41A] and "Normal Load [41B]" about setting the nominal load reference.

The Load Curve mode uses an interpolated curve with 9 load values at 8 equal speed intervals. This curve is populated by a test run with a real load. This can be used with any smooth load curve including constant load.

The Load Curve R is a relative load curve in % of Load set in the Load Curve. There is also a minimum margin set in menu "Minimum Absolute Margin [41D]".

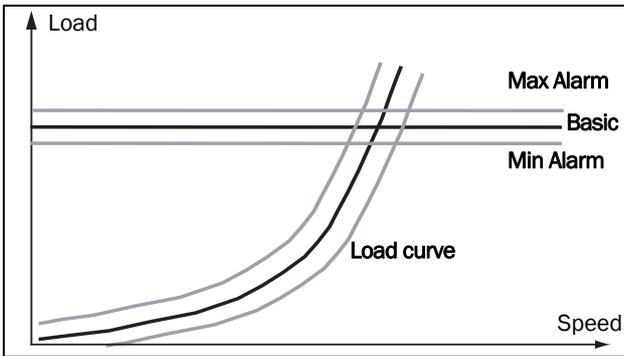


Fig. 122 Basic load type and Load curve

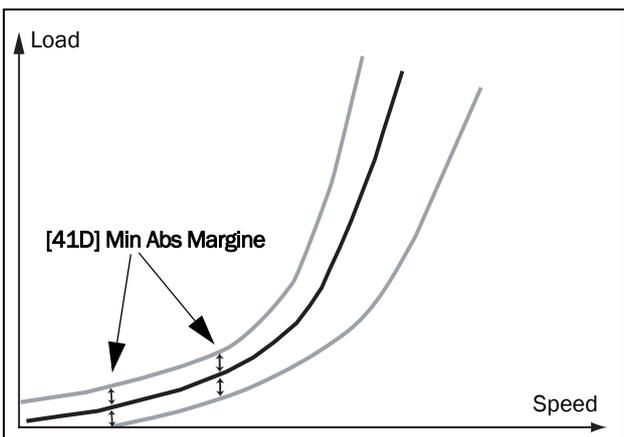


Fig. 123 Load Curve R with Min ABS margin.

415 Load Type	
Default:	Basic
Basic	0 Uses a fixed maximum and minimum load level over the full speed range. Can be used in situations where the torque is independent of the speed.
Load Curve	1 Uses the measured actual load characteristic of the process over the speed range.
Load Curve R	2 Uses a relative load margin with a minimum margin set in menu [41D].

Communication information

Modbus Instance no/DeviceNet no:	43325
Profibus slot/index	169/229
EtherCAT and CANopen index (hex)	4cfd
Profinet IO index	19709
Fieldbus format	UInt
Modbus format	UInt

Max Alarm [416]

Max Alarm Margin [4161]

With load type Basic, [415], used the Max Alarm Margin sets the band above the "Normal Load [41B]" menu that does not generate an alarm. With load type Load Curve [415] used, the Max Alarm Margin sets the band above the Load Curve [41C], that does not generate an alarm. The Max Alarm Margin is a percentage of nominal motor torque.

In case of Load Curve R, the margin is percentage of Load curve torque at the actual speed.

4161 MaxAlarmMar	
Default:	15%
Range:	0-400%

Communication information

Modbus Instance no/DeviceNet no:	43326
Profibus slot/index	169/230
EtherCAT and CANopen index (hex)	4cfe
Profinet IO index	19710
Fieldbus format	Long, 1=1%
Modbus format	Eint

Max Alarm delay [4162]

When the load level without interruption exceeds the alarm level longer than set “Max Alarm delay” time, an alarm is activated.

4162 MaxAlarmDel	
Default:	0.1 s
Range:	0-90 s

Communication information

Modbus Instance no/DeviceNet no:	43330
Profibus slot/index	169/234
EtherCAT and CANopen index (hex)	4d02
Profinet IO index	19714
Fieldbus format	Long, 1=0.1 s
Modbus format	Elnt

Max Pre Alarm [417]

Max Pre AlarmMargin [4171]

With load type Basic [415], used the Max Pre-Alarm Margin sets the band above the Normal Load, [41B], menu that does not generate a pre-alarm. With load type Load Curve, [415], used the Max Pre-Alarm Margin sets the band above the Load Curve, [41C], that does not generate a pre-alarm. The Max Pre-Alarm Margin is a percentage of nominal motor torque.

In case of Load Curve R, the margin is percentage of Load curve torque at the actual speed.

4171 MaxPreAlMar	
Default:	10%
Range:	0-400%

Communication information

Modbus Instance no/DeviceNet no:	43327
Profibus slot/index	169/231
EtherCAT and CANopen index (hex)	4cff
Profinet IO index	19711
Fieldbus format	Long, 1=1%
Modbus format	Elnt

Max Pre Alarm delay [4172]

When the load level without interruption exceeds the alarm level longer than set “Max PreAlarm delay” time, a warning is activated.

4172 MaxPreAlDel	
Default:	0.1 s
Range:	0-90 s

Communication information

Modbus Instance no/DeviceNet no:	43331
Profibus slot/index	169/235
EtherCAT and CANopen index (hex)	4d03
Profinet IO index	19715
Fieldbus format	Long, 1=0.1 s
Modbus format	Elnt

Min Pre Alarm [418]

Min Pre Alarm Margin [4181]

With load type Basic, [415], used the Min Pre-Alarm Margin sets the band under the Normal Load, [41B], menu that does not generate a pre-alarm. With load type Load Curve, [415], used the Min Pre-Alarm Margin sets the band under the Load Curve, [41C], that does not generate a pre-alarm. The Min Pre-Alarm Margin is a percentage of nominal motor torque.

In case of Load Curve R, the margin is percentage of Load curve torque at the actual speed.

4181 MinPreAlMar	
Default:	10%
Range:	0-400%

Communication information

Modbus Instance no/DeviceNet no:	43328
Profibus slot/index	169/232
EtherCAT and CANopen index (hex)	4d00
Profinet IO index	19712
Fieldbus format	Long, 1=1%
Modbus format	Elnt

Min Pre Alarm Response delay [4182]

When the load level without interruption is below the alarm level longer than set “Min PreAlarm delay” time, a warning is activated.

4182 MinPreAlDel	
Default:	0.1 s
Range:	0-90 s

Communication information

Modbus Instance no/DeviceNet no:	43332
Profibus slot/index	169/236
EtherCAT and CANopen index (hex)	4d04
Profinet IO index	19716
Fieldbus format	Long, 1=0.1 s
Modbus format	Elnt

Min Alarm [419]

Min Alarm Margin [4191]

With load type Basic, [415], used the Min Alarm Margin sets the band under the “Normal Load [41B]”, menu that does not generate an alarm. With load type “Load Curve [415]”, used the Min Alarm Margin sets the band under the “Load Curve [41C]”, that does not generate an alarm. The Max Alarm Margin is a percentage of nominal motor torque.

In case of Load Curve R, the margin is percentage of Load curve torque at the actual speed.

4191 MinAlarmMar	
Default:	15%
Range:	0-400%

Communication information

Modbus Instance no/DeviceNet no:	43329
Profibus slot/index	169/233
EtherCAT and CANopen index (hex)	4d01
Profinet IO index	19713
Fieldbus format	Long, 1=1%
Modbus format	Elnt

Min Alarm Response delay [4192]

When the load level without interruption is below the alarm level longer than set “Min Alarm delay” time, an alarm is activated.

4192 MinAlarmDel	
Default:	0.1 s
Range:	0-90 s

Communication information

Modbus Instance no/DeviceNet no:	43333
Profibus slot/index	169/237
EtherCAT and CANopen index (hex)	4d05
Profinet IO index	19717
Fieldbus format	Long, 1=0.1 s
Modbus format	Elnt

Autoset Alarm [41A]

The Autoset Alarm function can measure the nominal load that is used as reference for the alarm levels. If the selected “Load Type [415]” is Basic it copies the load the motor is running with to the menu “Normal Load [41B]”. The motor must run on the speed that generates the load that needs to be recorded. If the selected “Load Type [415]” is Load Curve it performs a test-run and populates the “Load Curve [41C]” with the found load values.



WARNING!

When autoset does a test run the motor and application/machine will ramp up to maximum speed.

NOTE: The motor must be running for the Autoset Alarm function to succeed. A not running motor generates a “Failed!” message.

41A AutoSet Alarm		
Default:	No	
No	0	
Yes	1	

Communication information

Modbus Instance no/DeviceNet no:	43334
Profibus slot/index	169/238
EtherCAT and CANopen index (hex)	4d06
Profinet IO index	19718
Fieldbus format	Uln
Modbus format	Uln

The default set levels for the (pre)alarms are:

Overload	Max Alarm	menu [4161] + [41B]
	Max Pre Alarm	menu [4171] + [41B]
Underload	Min Pre Alarm	menu [41B] - [4181]
	Min Alarm	menu [41B] - [4191]

These default set levels can be manually changed in menus [416] to [419]. After execution the message "Autoset OK!" is displayed for 1s and the selection reverts to "No".

Normal Load [41B]

Set the level of the normal load. The alarm or pre alarm will be activated when the load is above/under normal load \pm margin.

41B Normal Load	
Default:	100%
Range:	0-400% of max torque

NOTE: 100% Torque means: $I_{NOM} = I_{MOT}$. The maximum depends on the motor current and AC drive max current settings, but the absolute maximum adjustment is 400%.

Communication information

Modbus Instance no/DeviceNet no:	43335
Profibus slot/index	169/239
EtherCAT and CANopen index (hex)	4d07
Profinet IO index	19719
Fieldbus format	Long, 1=1%
Modbus format	Elnt

Load Curve [41C]

The load curve function can be used with any smooth load curve. The curve can be populated with a test-run or the values can be entered or changed manually.

Load Curve 1-9 [41C1]-[41C9]

The measured load curve is based on 9 stored samples. The curve starts at minimum speed and ends at maximum speed, the range in between is divided into 8 equal steps. The measured values of each sample are displayed in [41C1] to [41C9] and can be adapted manually. The value of the 1st sampled value on the load curve is displayed.

41C1 Load Curve1	
Default:	100%
Range:	0-400% of max torque

Communication information

Modbus Instance no/DeviceNet no:	43336%, 43337 rpm, 43338 %, 43339 rpm, 43340 %, 43341 rpm, 43342 %, 43343 rpm, 43344 %, 43345 rpm, 43346 %, 43347 rpm, 43348 %, 43349 rpm, 43350 %, 43351 rpm, 43352 %, 43353 rpm
Profibus slot/index	169/240, 169/242, 169/244, 169/246, 169/248, 169/250, 169/252, 169/254, 170/1
EtherCAT and CANopen index (hex)	4d08 %, 4d09 rpm, 4d0a %, 4d0b rpm, 4d0c %, 4d0d rpm, 4d0e %, 4d0f rpm, 4d10 %, 4d11 rpm, 4d12 %, 4d13 rpm, 4d14 %, 4d15 rpm, 4d16 %, 4d17 rpm, 4d18 %, 4d19 rpm
Profinet IO index	19720 %, 19721 rpm, 19722 %, 19723 rpm, 19724 %, 19725 rpm, 19726 %, 19727 rpm, 19728 %, 19729 rpm, 19730 %, 19731 rpm, 19732 %, 19733 rpm, 19734 %, 19735 rpm, 19736 %, 19738 rpm,
Fieldbus format	Long, 1=1 %, Int 1=1 rpm
Modbus format	Elnt

NOTE: The speed values depend on the Min- and Max Speed values. they are read only and cannot be changed.

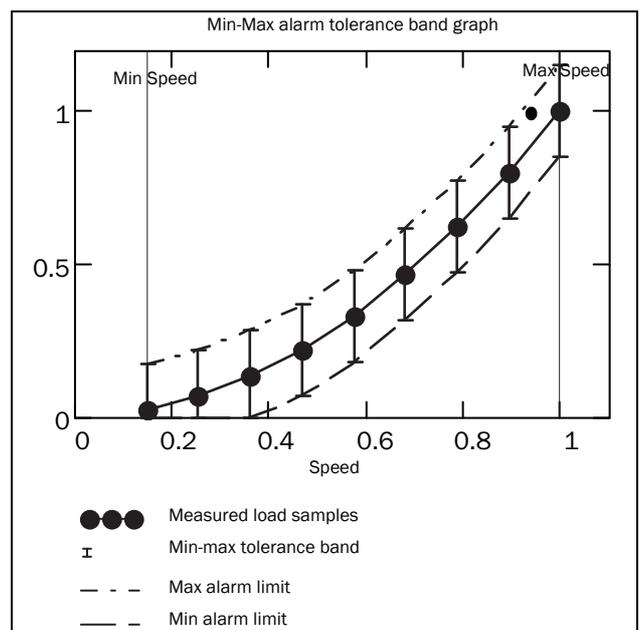


Fig. 124

Minimum Absolute Margin [41D]

This menu is displayed when using “Load Curve R”
Set absolute minimum margin of the Load Curve in % of nominal motor torque.

41D MinAbsMarg	
Default:	3 %
Range:	0 - 31 %

Communication information

Modbus Instance no/DeviceNet no:	43354
Profibus slot/index	170/3
EtherCAT and CANopen index (hex)	4d1a
Profinet IO index	19738
Fieldbus format	Long, 1 = 1%
Modbus format	Elnt

11.6.2 Process Protection [420]

Submenu with settings regarding protection functions for the AC drive and the motor.

Low Voltage Override [421]

If a dip in the mains supply occurs and the low voltage override function is enabled, the AC drive will automatically decrease the motor speed to keep control of the application and prevent an under voltage trip until the input voltage rises again. Therefore the rotating energy in the motor/load is used to keep the DC link voltage level at the override level, for as long as possible or until the motor comes to a standstill. This is dependent on the inertia of the motor/load combination and the load of the motor at the time the dip occurs, see Fig. 125.

421 Low Volt OR		
Default:	On	
Off	0	At a voltage dip the low voltage trip will protect.
On	1	At mains dip, AC drive ramps down until voltage rises.

Communication information

Modbus Instance no/DeviceNet no:	43361
Profibus slot/index	170/10
EtherCAT and CANopen index (hex)	4d21
Profinet IO index	19745
Fieldbus format	UInt
Modbus format	UInt

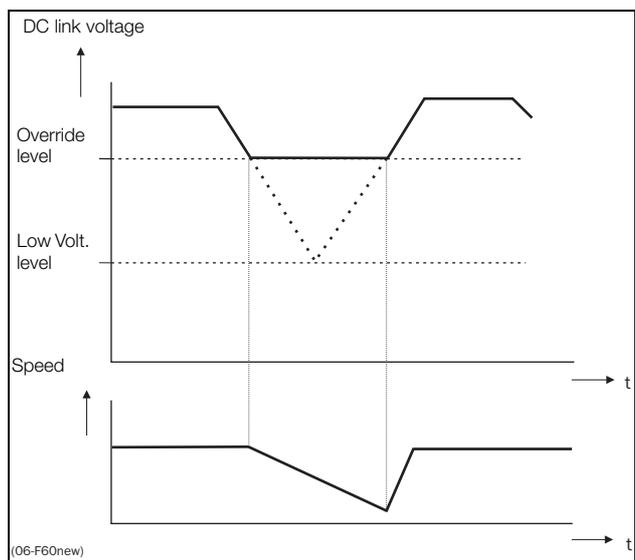


Fig. 125 Low voltage override

NOTE: During the low voltage override the LED trip/limit blinks.

Rotor locked [422]

With the rotor locked function enabled, the AC drive will protect the motor and application when this is stalled whilst increasing the motor speed from standstill. This protection will coast the motor to stop and indicate a fault when the Torque Limit has been active at very low speed for more than 5 seconds.

422 Rotor locked		
Default:		Off
Off	0	No detection
On	1	AC drive will trip when locked rotor is detected. Trip message "Locked Rotor".

Communication information

Modbus Instance no/DeviceNet no:	43362
Profibus slot/index	170/11
EtherCAT and CANopen index (hex)	4d22
Profinet IO index	19746
Fieldbus format	UInt
Modbus format	UInt

Motor lost [423]

With the motor lost function enabled, the AC drive is able to detect a fault in the motor circuit: motor, motor cable, thermal relay or output filter. Motor lost will cause a trip, and the motor will coast to standstill, when a missing motor phase is detected during a period of 500 ms. The detection time during DC-start is 50 ms and during Fast-start 10 ms.

423 Motor lost		
Default:		Off
Off	0	Function switched off to be used if no motor or very small motor connected.
Trip	1	AC drive will trip when the motor is disconnected. Trip message "Motor Lost".
Start	2	Test for disconnected motor will only be performed during start routine.

Communication information

Modbus Instance no/DeviceNet no:	43363
Profibus slot/index	170/12
EtherCAT and CANopen index (hex)	4d23
Profinet IO index	19747
Fieldbus format	UInt
Modbus format	UInt

Overvolt control [424]

Used to switch off the overvoltage control function when only braking by brake chopper and resistor is required. The overvoltage control function, limits the braking torque so that the DC link voltage level is controlled at a high, but safe, level. This is achieved by limiting the actual deceleration rate during stopping. In case of a defect at the brake chopper or the brake resistor the AC drive will trip for "Overvoltage" to avoid a fall of the load e.g. in crane applications.

NOTE: Overvoltage control should not be activated if brake chopper is used.

424 Over Volt Ctl		
Default:		On
On	0	Overvoltage control activated
Off	1	Overvoltage control off

Communication information

Modbus Instance no/DeviceNet no:	43364
Profibus slot/index	170/13
EtherCAT and CANopen index (hex)	4d24
Profinet IO index	19748
Fieldbus format	UInt
Modbus format	UInt

11.7 I/Os and Virtual Connections [500]

Main menu with all the settings of the standard inputs and outputs of the AC drive.

11.7.1 Analogue Inputs [510]

Submenu with all settings for the analogue inputs.

AnIn1 Function [511]

Sets the function for Analogue input 1. Scale and range are defined by AnIn1 Advanced settings [513].

511 AnIn1 Fc		
Default:		Process Ref
Off	0	Input is not active
Max Speed	1	The input acts as an upper speed limit.
Max Torque	2	The input acts as an upper torque limit.
Process Val	3	The input value equals the actual process value (feedback) and is compared to the reference signal (set point) by the PID controller, or can be used to display and view the actual process value.
Process Ref	4	Reference value is set for control in process units, see Process Source [321] and Process Unit [322].
Min Speed	5	The input acts as a lower speed limit.

Communication information

Modbus Instance no/DeviceNet no:	43201
Profibus slot/index	169/105
EtherCAT and CANopen index (hex)	4c81
Profinet IO index	19585
Fieldbus format	UInt
Modbus format	UInt

NOTE: When AnInX Func=Off, the connected signal will still be available for Comparators [610].

Adding analogue inputs

If more than one analogue input is set to the same function, the values of the inputs can be added together. In the following examples we assume that Process Source [321] is set to Speed.

Example 1: Add signals with different weight (fine tuning).

Signal on AnIn1 = 10 mA

Signal on AnIn2 = 5 mA

[511] AnIn1 Function = Process Ref.

[512] AnIn1 Setup = 4-20 mA

[5134] AnIn1 Function Min = Min (0 rpm)

[5136] AnIn1 Function Max = Max (1500 rpm)

[5138] AnIn1 Operation = Add+

[514] AnIn2 Function = Process Ref.

[515] AnIn2 Setup = 4-20 mA

[5164] AnIn2 Function Min = Min (0 rpm)

[5166] AnIn2 Function Max = User defined

[5167] AnIn2 Value Max = 300 rpm

[5168] AnIn2 Operation = Add+

Calculation:

$AnIn1 = (10-4) / (20-4) \times (1500-0) + 0 = 562.5 \text{ rpm}$

$AnIn2 = (5-4) / (20-4) \times (300-0) + 0 = 18.75 \text{ rpm}$

The actual process reference will be:

$+562.5 + 18.75 = 581 \text{ rpm}$

Analogue Input Selection via Digital Inputs:

When two different external Reference signals are used, e.g. 4-20mA signal from control centre and a 0-10 V locally mounted potentiometer, it is possible to switch between these two different analogue input signals via a Digital Input set to "AnIn Select".

AnIn1 is 4-20 mA

AnIn2 is 0-10 V

DigIn3 is controlling the AnIn selection; HIGH is 4-20 mA, LOW is 0-10 V

"[511] AnIn1 Fc" = Process Ref;
set AnIn1 as reference signal input

"[512] AnIn1 Setup" = 4-20mA;
set AnIn1 for a current reference signal

"[513A] AnIn1 Enabl" = DigIn;
set AnIn1 to be active when DigIn3 is HIGH

"[514] AnIn2 Fc" = Process Ref;
set AnIn2 as reference signal input

"[515] AnIn2 Setup" = 0-10V;
set AnIn2 for a voltage reference signal

"[516A] AnIn2 Enabl" = !DigIn;
set AnIn2 to be active when DigIn3 is LOW

"[523] DigIn3=AnIn";
set DigIn3 as input for selection of AI reference

Subtracting analogue inputs

Example 2: Subtract two signals

Signal on AnIn1 = 8 V

Signal on AnIn2 = 4 V

[511] AnIn1 Function = Process Ref.

[512] AnIn1 Setup = 0-10 V

[5134] AnIn1 Function Min = Min (0 rpm)

[5136] AnIn1 Function Max = Max (1500 rpm)

[5138] AnIn1 Operation = Add+

[514] AnIn2 Function = Process Ref.

[515] AnIn2 Setup = 0-10 V

[5164] AnIn2 Function Min = Min (0 rpm)

[5166] AnIn2 Function Max = Max (1500 rpm)

[5168] AnIn2 Operation = Sub-

Calculation:

$$\text{AnIn1} = (8-0) / (10-0) \times (1500-0) + 0 = 1200 \text{ rpm}$$

$$\text{AnIn2} = (4-0) / (10-0) \times (1500-0) + 0 = 600 \text{ rpm}$$

The actual process reference will be:

$$+1200 - 600 = 600 \text{ rpm}$$

AnIn1 Setup [512]

The analogue input setup is used to configure the analogue input in accordance with the signal used that will be connected to the analogue input. With this selection the input can be determined as current (4-20 mA) or voltage (0-10 V) controlled input. Other selections are available for using a threshold (live zero), a bipolar input function, or a user defined input range. With a bipolar input reference signal, it is possible to control the motor in two directions. See Fig. 126.

NOTE: The selection of voltage or current input is done with S1. When the switch is in voltage mode only the voltage menu items are selectable. With the switch in current mode only the current menu items are selectable.

512 AnIn1 Setup		
Default:	4-20 mA	
Dependent on	Setting of switch S1	
4-20mA	0	The current input has a fixed threshold (Live Zero) of 4 mA and controls the full range for the input signal. See Fig. 81.
0-20mA	1	Normal full current scale configuration of the input that controls the full range for the input signal. See Fig. 80.
User mA	2	The scale of the current controlled input, that controls the full range for the input signal. Can be defined by the advanced AnIn Min and AnIn Max menus.
User Bipol mA	3	Sets the input for a bipolar current input, where the scale controls the range for the input signal. Scale can be defined in advanced menu AnIn Bipol.
0-10V	4	Normal full voltage scale configuration of the input that controls the full range for the input signal. See Fig. 80.
2-10V	5	The voltage input has a fixed threshold (Live Zero) of 2 V and controls the full range for the input signal. See Fig. 81.
User V	6	The scale of the voltage controlled input, that controls the full range for the input signal. Can be defined by the advanced AnIn Min and AnIn Max menus.
User Bipol V	7	Sets the input for a bipolar voltage input, where the scale controls the range for the input signal. Scale can be defined in advanced menu AnIn Bipol.

NOTE: For bipolar function, input RunR and RunL needs to be active and Rotation, [219] must be set to "R+L".

NOTE: Always check the needed set up when the setting of S1 is changed; selection will not adapt automatically.

Communication information

Modbus Instance no/DeviceNet no:	43202
Profibus slot/index	169/106
EtherCAT and CANopen index (hex)	4c82
Profinet IO index	19586
Fieldbus format	UInt
Modbus format	UInt

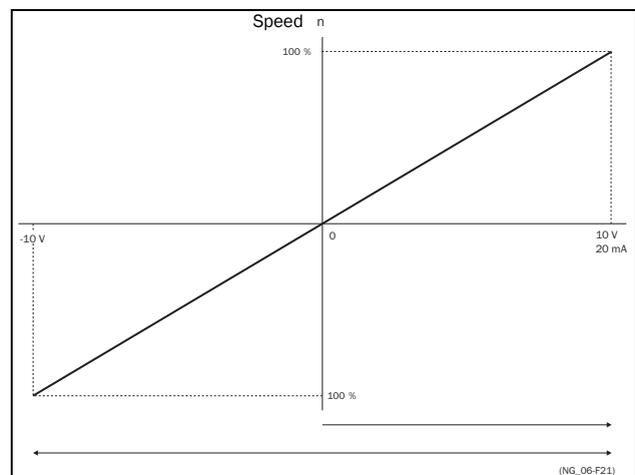


Fig. 126

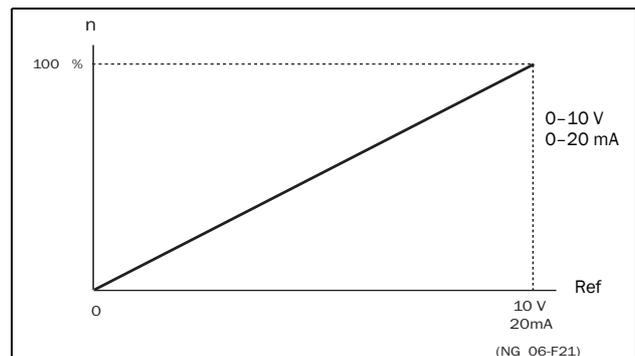


Fig. 127 Normal full-scale configuration

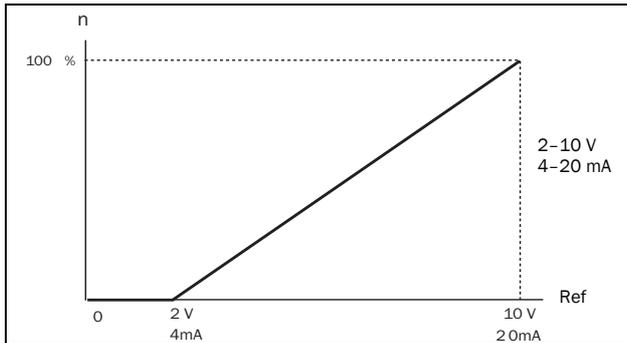


Fig. 128 2–10 V/4–20 mA (Live Zero)

AnIn1 Advanced [513]

NOTE: The different menus will automatically be set to either “mA” or “V”, based on the selection in AnIn 1 Setup [512].

513	AnIn1 Advan
------------	--------------------

AnIn1 Min [5131]

Parameter to set the minimum value of the external reference signal. Only visible if [512] = User mA/V.

5131	AnIn1 Min
Default:	0 V/4.00 mA
Range:	0.00–20.00 mA 0–10.00 V

Communication information

Modbus Instance no/DeviceNet no:	43203
Profibus slot/index	169/107
EtherCAT and CANopen index (hex)	4c83
Profinet IO index	19587
Fieldbus format	Long, 1=0.01 mA, 0.01 V
Modbus format	Elnt

AnIn1 Max [5132]

Parameter to set the maximum value of the external reference signal. Only visible if [512] = User mA/V.

5132	AnIn1 Max
Default:	10.00 V/20.00 mA
Range:	0.00–20.00 mA 0–10.00 V

Communication information

Modbus Instance no/DeviceNet no:	43204
Profibus slot/index	169/108
EtherCAT and CANopen index (hex)	4c84
Profinet IO index	19588
Fieldbus format	Long, 1=0.01 mA, 0.01 V
Modbus format	Elnt

Special function: Inverted reference signal

If the AnIn minimum value is higher than the AnIn maximum value, the input will act as an inverted reference input, see Fig. 129.

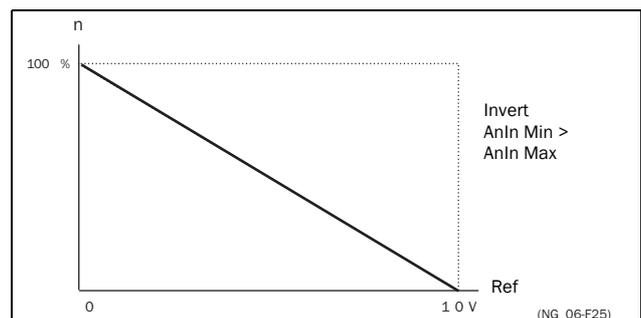


Fig. 129 Inverted reference

AnIn1 Bipol [5133]

This menu is automatically displayed if AnIn1 Setup is set to User Bipol mA or User Bipol V. The window will automatically show mA or V range according to selected function. The range is set by changing the positive maximum value; the negative value is automatically adapted accordingly. Only visible if [512] = User Bipol mA/V. The inputs RunR and RunL input need to be active, and “Rotation [219]”, must be set to “R+L”, to operate the bipolar function on the analogue input.

5133	AnIn1 Bipol
Default:	10.00 V/20.00 mA
Range:	0.0–20.0 mA, 0.00–10.00 V

Communication information

Modbus Instance no/DeviceNet no:	43205
Profibus slot/index	169/109
EtherCAT and CANopen index (hex)	4c85
Profinet IO index	19589
Fieldbus format	Long, 1=0.01 mA, 0.01 V
Modbus format	Elnt

AnIn1 Function Min [5134]

With AnIn1 Function Min the physical minimum value is scaled to selected process unit. The default scaling is dependent of the selected function of AnIn1 [511].

5134 AnIn1 FcMin		
Default:		Min
Min	0	Min value
Max	1	Max value
User-defined	2	Define user value in menu [5135]

Table 36 shows corresponding values for the min and max selections depending on the function of the analogue input [511].

Table 36

AnIn Function	Min	Max
Speed	Min Speed [341]	Max Speed [343]
Torque	0%	Max Torque [351]
Process Ref	Process Min [324]	Process Max [325]
Process Value	Process Min [324]	Process Max [325]

Communication information

Modbus Instance no/DeviceNet no:	43206
Profibus slot/index	169/110
EtherCAT and CANopen index (hex)	4c86
Profinet IO index	19590
Fieldbus format	UInt
Modbus format	UInt

AnIn1 Function Value Min [5135]

With AnIn1 Function VaMin you define a user-defined value for the signal. Only visible when user-defined is selected in menu [5134].

5135 AnIn1 VaMin	
Default:	0.000
Range:	-10000.000 – 10000.000

Communication information

Modbus Instance no/DeviceNet no:	43541
Profibus slot/index	170/190
EtherCAT and CANopen index (hex)	4dd5
Profinet IO index	19925
Fieldbus format	Long, 1=1 rpm, 1 %, 1° or 0.001 if Process Value/Process Ref using a [322] unit
Modbus format	Elnt

AnIn1 Function Max [5136]

With AnIn1 Function Max the physical maximum value is scaled to selected process unit. The default scaling is dependent of the selected function of AnIn1 [511]. See Table 36.

5136 AnIn1 FcMax		
Default:		Max
Min	0	Min value
Max	1	Max value
User-defined	2	Define user value in menu [5137]

Communication information

Modbus Instance no/DeviceNet no:	43207
Profibus slot/index	169/111
EtherCAT and CANopen index (hex)	4c87
Profinet IO index	19591
Fieldbus format	UInt
Modbus format	UInt

AnIn1 Function Value Max [5137]

With AnIn1 Function VaMax you define a user-defined value for the signal. Only visible when user-defined is selected in menu [5136].

5137 AnIn1 VaMax	
Default:	0.000
Range:	-10000.000 – 10000.000

Communication information

Modbus Instance no/DeviceNet no:	43551
Profibus slot/index	170/200
EtherCAT and CANopen index (hex)	4ddf
Profinet IO index	19935
Fieldbus format	Long, 1=1 rpm, 1 %, 1° or 0.001 if Process Value/Process Ref using a [322] unit
Modbus format	Elnt

NOTE: With AnIn Min, AnIn Max, AnIn Function Min and AnIn Function Max settings, loss of feedback signals (e.g. voltage drop due to long sensor wiring) can be compensated to ensure an accurate process control.

Example:

Process sensor is a sensor with the following specification:

Range: 0–3 bar

Output: 2–10 mA

Analogue input should be set up according to:

[512] AnIn1 Setup = User mA

[5131] AnIn1 Min = 2 mA

[5132] AnIn1 Max = 10 mA

[5134] AnIn1 Function Min = User-defined

[5135] AnIn1 VaMin = 0.000 bar

[5136] AnIn1 Function Max = User-defined

[5137] AnIn1 VaMax = 3.000 bar

AnIn1 Operation [5138]

5138 AnIn1 Oper		
Default:	Add+	
Add+	0	Analogue signal is added to selected function in menu [511].
Sub-	1	Analogue signal is subtracted from selected function in menu [511].

Communication information

Modbus Instance no/DeviceNet no:	43208
Profibus slot/index	169/112
EtherCAT and CANopen index (hex)	4c88
Profinet IO index	19592
Fieldbus format	UInt
Modbus format	UInt

AnIn1 Filter [5139]

If the input signal is unstable (e.g. fluctuation reference value), the filter can be used to stabilize the signal. A change of the input signal will reach 63% on AnIn1 within the set AnIn1 Filter time. After 5 times the set time, AnIn1 will have reached 100% of the input change. See Fig. 130.

5139 AnIn1 Filt	
Default:	0.1 s
Range:	0.001 – 10.0 s

Communication information

Modbus Instance no/DeviceNet no:	43209
Profibus slot/index	169/113
EtherCAT and CANopen index (hex)	4c89
Profinet IO index	19593
Fieldbus format	Long, 1=0.001 s
Modbus format	Elnt

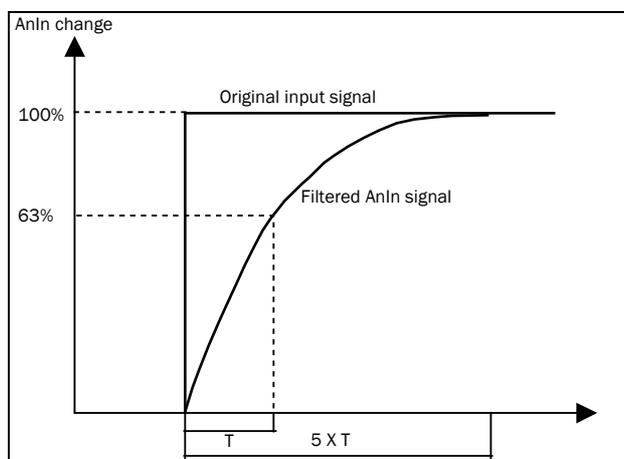


Fig. 130

AnIn1 Enable [513A]

Parameter for enable/disable analogue input selection via digital inputs (DigIn set to function AnIn Select).

513A AnIn1 Enabl		
Default:	On	
On	0	AnIn1 is always active
IDigIn	1	AnIn1 is only active if the digital input is low.
DigIn	2	AnIn1 is only active if the digital input is high.

Communication information

Modbus Instance no/DeviceNet no:	43210
Profibus slot/index	169/114
EtherCAT and CANopen index (hex)	4c8a
Profinet IO index	19594
Fieldbus format	UInt
Modbus format	UInt

AnIn2 Function [514]

Parameter for setting the function of Analogue Input 2.

Same function as “AnIn1 Fc [511]”.

514 AnIn2 Fc	
Default:	Off
Selection:	Same as in menu [511]

Communication information

Modbus Instance no/DeviceNet no:	43211
Profibus slot/index	169/115
EtherCAT and CANopen index (hex)	4c8b
Profinet IO index	19595
Fieldbus format	UInt
Modbus format	UInt

AnIn2 Setup [515]

Parameter for setting the function of Analogue Input 2.

Same functions as “AnIn1 Setup [512]”.

515 AnIn2 Setup	
Default:	4 – 20 mA
Dependent on	Setting of switch S2
Selection:	Same as in menu [512].

Communication information

Modbus Instance no/DeviceNet no:	43212
Profibus slot/index	169/116
EtherCAT and CANopen index (hex)	4c8c
Profinet IO index	19596
Fieldbus format	UInt
Modbus format	UInt

AnIn2 Advanced [516]

Same functions and submenus as under “AnIn1 Advan [513]”.

516	AnIn2 Advan
------------	--------------------

Communication information

Modbus Instance no/DeviceNet no:	43213–43220, 43542, 43552
Profibus slot/index	169/117–124, 170/191, 170/201
EtherCAT and CANopen index (hex)	4c8d - 4c94, 4dd6, 4de0
Profinet IO index	19597-19604, 19926, 19936
Fieldbus format	See [5131] - [5137].
Modbus format	

AnIn3 Function [517]

Parameter for setting the function of Analogue Input 3.

Same function as “AnIn1 Fc [511]”.

517	AnIn3 Fc
Default:	Off
Selection:	Same as in menu [511]

Communication information

Modbus Instance no/DeviceNet no:	43221
Profibus slot/index	169/125
EtherCAT and CANopen index (hex)	4c95
Profinet IO index	19605
Fieldbus format	UInt
Modbus format	UInt

AnIn3 Setup [518]

Same functions as “AnIn1 Setup [512]”.

518	AnIn3 Setup
Default:	4–20 mA
Dependent on	Setting of switch S3
Selection:	Same as in menu [512].

Communication information

Modbus Instance no/DeviceNet no:	43222
Profibus slot/index	169/126
EtherCAT and CANopen index (hex)	4c96
Profinet IO index	19606
Fieldbus format	UInt
Modbus format	UInt

AnIn3 Advanced [519]

Same functions and submenus as under “AnIn1 Advan [513]”.

519	AnIn3 Advan
------------	--------------------

Communication information

Modbus Instance no/DeviceNet no:	43223–43230, 43543, 43553
Profibus slot/index	169/127–169/134, 170/192, 170/202
EtherCAT and CANopen index (hex)	4c97 - 4c9e, 4dd7, 4de1
Profinet IO index	19607-19614, 19927, 19937
Fieldbus format	See [5131] - [5137].
Modbus format	

AnIn4 Function [51A]

Parameter for setting the function of Analogue Input 4.

Same function as “AnIn1 Fc [511]”.

51A	AnIn4 Fc
Default:	Off
Selection:	Same as in menu [511]

Communication information

Modbus Instance no/DeviceNet no:	43231
Profibus slot/index	169/135
EtherCAT and CANopen index (hex)	4c9f
Profinet IO index	19615
Fieldbus format	UInt
Modbus format	UInt

AnIn4 Set-up [51B]

Same functions as “AnIn1 Setup [512]”.

51B	AnIn4 Setup
Default:	4-20 mA
Dependent on	Setting of switch S4
Selection:	Same as in menu [512].

Communication information

Modbus Instance no/DeviceNet no:	43232
Profibus slot/index	169/136
EtherCAT and CANopen index (hex)	4ca0
Profinet IO index	19616
Fieldbus format	UInt
Modbus format	UInt

AnIn4 Advanced [51C]

Same functions and submenus as under “AnIn1 Advan[513]”.

51C	AnIn4 Advan
------------	--------------------

Communication information

Modbus Instance no/DeviceNet no:	43233–43240, 43544, 43554
Profibus slot/index	169/137–144, 170/193, 170/203
EtherCAT and CANopen index (hex)	4ca1 - 4ca8, 4dd8, 4de2
Profinet IO index	19617-19624, 19928, 19938
Fieldbus format	See [5131] - [5137].
Modbus format	

11.7.2 Digital Inputs [520]

Submenu with all the settings for the digital inputs.

NOTE: Additional inputs will become available when the I/O option boards are connected.

Digital Input 1 [521]

To select the function of the digital input.

On the standard control board there are eight digital inputs.

If the same function is programmed for more than one input that function will be activated according to “OR” logic if nothing else is stated.

521		DigIn 1
Default:		RunL
Off	0	The input is not active.
Lim Switch +	1	AC drive ramps to stop and prevents rotation in “R” direction (clockwise), when the signal is low! NOTE: The Lim Switch+ is active low. NOTE: Activated according to “AND” logic.
Lim Switch -	2	AC drive ramps to stop and prevents rotation in “L” direction (counter clockwise) when the signal is low! NOTE: The Lim Switch- is active low. NOTE: Activated according to “AND” logic.
Ext. Trip	3	Be aware that if there is nothing connected to the input, the AC drive will trip at “External trip” immediately. NOTE: The External Trip is active low. NOTE: Activated according to “AND” logic.
Stop	4	Stop command according to the selected Stop mode in menu [33B]. NOTE: The Stop command is active low. NOTE: Activated according to “AND” logic.
Enable	5	Enable command. General start condition to run the AC drive. If made low during running the output of the AC drive is cut off immediately, causing the motor to coast to zero speed. NOTE: If none of the digital inputs are programmed to “Enable”, the internal enable signal is active. NOTE: Activated according to “AND” logic.
RunR	6	Run Right command (positive speed). The output of the AC drive will be a clockwise rotary field.
RunL	7	Run Left command (negative speed). The output of the AC drive will be a counter-clockwise rotary field.

Reset	9	Reset command. To reset a Trip condition and to enable the Autoreset function.
Preset Ctrl1	10	To select the Preset Reference.
Preset Ctrl2	11	To select the Preset Reference.
Preset Ctrl3	12	To select the Preset Reference.
MotPot Up	13	Increases the internal reference value according to the set AccMotPot time [333]. Has the same function as a “real” motor potentiometer, see Fig. 110.
MotPot Down	14	Decreases the internal reference value according to the set DecMotPot time [334]. See MotPot Up.
Pump1 Feedb	15	Feedback input pump1 for Pump/Fan control and informs about the status of the auxiliary connected pump/fan.
Pump2 Feedb	16	Feedback input pump 2 for Pump/Fan control and informs about the status of the auxiliary connected pump/fan.
Pump3 Feedb	17	Feedback input pump3 for Pump/Fan control and informs about the status of the auxiliary connected pump/fan.
Pump4 Feedb	18	Feedback input pump 4 for Pump/Fan control and informs about the status of the auxiliary connected pump/fan.
Pump5 Feedb	19	Feedback input pump5 for Pump/Fan control and informs about the status of the auxiliary connected pump/fan.
Pump6 Feedb	20	Feedback input pump 6 for Pump/Fan control and informs about the status of the auxiliary connected pump/fan.
Timer 1	21	Timer 1 Delay [643] will be activated on the rising edge of this signal.
Timer 2	22	Timer 2 Delay [653] will be activated on the rising edge of this signal.
Set Ctrl 1	23	Activates other parameter set. See Table 37 for selection possibilities.
Set Ctrl 2	24	Activates other parameter set. See Table 37 for selection possibilities.
Mot PreMag	25	Pre-magnetises the motor. Used for faster motor start.
Jog	26	To activate the Jog function. Gives a Run command with the set Jog speed and Direction, page 138.
Ext Mot Temp	27	Be aware that if there is nothing connected to the input, the AC drive will trip at “External Motor Temp” immediately. NOTE: The External Motor Temp is active low.
Loc/Rem	28	Activate local mode defined in [2171] and [2172].
AnIn select	29	Activate/deactivate analogue inputs defined in [513A], [516A], [519A] and [51CA]

LC Level	30	Liquid cooling low level signal. NOTE: The Liquid Cooling Level is active low.
Brk Ackn	31	Brake acknowledge input for Brake Fault control. Function is activated via this selection see menu [33H] page 133
Sleep	32	Possible to enter sleep mode through DigIn

NOTE: For bipolar function, input RunR and RunL needs to be active and “Rotation [219]” must be set to “R+L”.

Communication information

Modbus Instance no/DeviceNet no:	43241
Profibus slot/index	169/145
EtherCAT and CANopen index (hex)	4ca9
Profinet IO index	19625
Fieldbus format	UInt
Modbus format	UInt

Table 37

Parameter Set	Set Ctrl 1	Set Ctrl 2
A	0	0
B	1	0
C	0	1
D	1	1

NOTE: To activate the parameter set selection, menu 241 must be set to DigIn.

Digital Input 2 [522] to Digital Input 8 [528]

Same function as “DigIn 1[521]”. Default function for DigIn 8 is Reset. For DigIn 3 to 7 the default function is Off.

522 DigIn 2	
Default:	RunR
Selection:	Same as in menu [521]

Communication information

Modbus Instance no/DeviceNet no:	43242 – 43248
Profibus slot/index	169/146 – 169/152
EtherCAT and CANopen index (hex)	4caa - 4cb0
Profinet IO index	19626 - 19632
Fieldbus format	UInt
Modbus format	UInt

Additional digital inputs [529] to [52H]

Additional digital inputs with I/O option board installed, “B1 DigIn 1 [529]” - “B3 DigIn 3 [52H]”. B stands for board and 1 to 3 is the number of the board which is related to the position of the I/O option board on the option mounting plate. The functions and selections are the same as “DigIn 1 [521]”.

Communication information

Modbus Instance no/DeviceNet no:	43501–43509
Profibus slot/index	170/150–170/158
EtherCAT and CANopen index (hex)	4dad - 4db5
Profinet IO index	19885 - 19893
Fieldbus format	UInt
Modbus format	UInt

11.7.3 Analogue Outputs [530]

Submenu with all settings for the analogue outputs. Selections can be made from application and AC drive values, in order to visualize actual status. Analogue outputs can also be used as a mirror of the analogue input. Such a signal can be used as:

- a reference signal for the next AC drive in a Master/Slave configuration (see Fig. 131).
- a feedback acknowledgement of the received analogue reference value.

AnOut1 Function [531]

Sets the function for the Analogue Output 1. Scale and range are defined by AnOut1 Advanced settings [533].

531 AnOut1 Fc		
Default:		Speed
Process Val	0	Actual process value according to Process feedback signal.
Speed	1	Actual speed.
Torque	2	Actual torque.
Process Ref	3	Actual process reference value.
Shaft Power	4	Actual shaft power.
Frequency	5	Actual frequency.
Current	6	Actual current.
El power	7	Actual electrical power.
Output volt	8	Actual output voltage.
DC-voltage	9	Actual DC link voltage.
AnIn1	10	Mirror of received signal value on AnIn1.
AnIn2	11	Mirror of received signal value on AnIn2.
AnIn3	12	Mirror of received signal value on AnIn3.
AnIn4	13	Mirror of received signal value on AnIn4.
Speed Ref	14	Actual internal speed reference Value after ramp and V/Hz.
Torque Ref	15	Actual torque reference value (=0 in V/Hz mode)

NOTE: When selections AnIn1, AnIn2 AnIn4 is selected, the setup of the AnOut (menu [532] or [535]) has to be set to 0-10V or 0-20mA. When the AnOut Setup is set to e.g. 4-20mA, the mirroring is not working correct.

Communication information

Modbus Instance no/DeviceNet no:	43251
Profibus slot/index	169/155
EtherCAT and CANopen index (hex)	4cb3
Profinet IO index	19635
Fieldbus format	UInt
Modbus format	UInt

AnOut 1 Setup [532]

Preset scaling and offset of the output configuration.

532 AnOut1 Setup		
Default:		4-20mA
4-20mA	0	The current output has a fixed threshold (Live Zero) of 4 mA and controls the full range for the output signal. See Fig. 128.
0-20mA	1	Normal full current scale configuration of the output that controls the full range for the output signal. See Fig. 127.
User mA	2	The scale of the current controlled output that controls the full range for the output signal. Can be defined by the advanced AnOut Min and AnOut Max menus.
User Bipol mA	3	Sets the output for a bipolar current output, where the scale controls the range for the output signal. Scale can be defined in advanced menu AnOut Bipol.
0-10V	4	Normal full voltage scale configuration of the output that controls the full range for the output signal. See Fig. 127.
2-10V	5	The voltage output has a fixed threshold (Live Zero) of 2 V and controls the full range for the output signal. See Fig. 128.
User V	6	The scale of the voltage controlled output that controls the full range for the output signal. Can be defined by the advanced AnOut Min and AnOut Max menus.
User Bipol V	7	Sets the output for a bipolar voltage output, where the scale controls the range for the output signal. Scale can be defined in advanced menu AnOut Bipol.

Communication information

Modbus Instance no/DeviceNet no:	43252
Profibus slot/index	169/156
EtherCAT and CANopen index (hex)	4cb4
Profinet IO index	19636
Fieldbus format	UInt
Modbus format	UInt

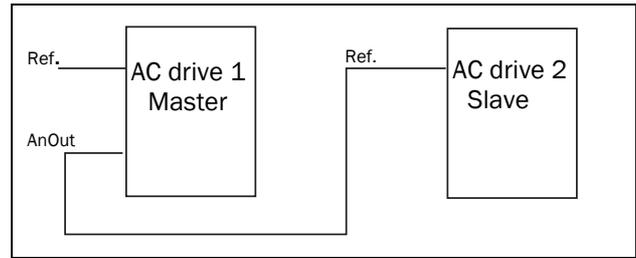


Fig. 131

AnOut1 Advanced [533]

With the functions in the AnOut1 Advanced menu, the output can be completely defined according to the application needs. The menu will automatically be adapted to “mA” or “V”, according to the selection in “AnOut1 Setup [532]”.

533 AnOut 1 Adv	
-----------------	--

AnOut1 Min [5331]

This parameter is automatically displayed if User mA or User V is selected in menu “AnOut 1 Setup [532]”. The menu will automatically adapt to current or voltage setting according to the selected setup. Only visible if [532] = User mA/V.

5331 AnOut 1 Min	
Default:	4 mA
Range:	0.00 – 20.00 mA, 0 – 10.00 V

Communication information

Modbus Instance no/DeviceNet no:	43253
Profibus slot/index	169/157
EtherCAT and CANopen index (hex)	4cb5
Profinet IO index	19637
Fieldbus format	Long, 1=0.01 V, 0.01 mA
Modbus format	EInt

AnOut1 Max [5332]

This parameter is automatically displayed if User mA or User V is selected in menu “AnOut1 Setup [532]”. The menu will automatically adapt to current or voltage setting according to the selected setup. Only visible if [532] = User mA/V.

5332 AnOut 1 Max	
Default:	20.00 mA
Range:	0.00–20.00 mA, 0–10.00 V

Communication information

Modbus Instance no/DeviceNet no:	43254
Profibus slot/index	169/158
EtherCAT and CANopen index (hex)	4cb6
Profinet IO index	19638
Fieldbus format	Long, 1=0.01 V, 0.01 mA
Modbus format	Elnt

AnOut1 Bipol [5333]

Automatically displayed if User Bipol mA or User Bipol V is selected in menu AnOut1 Setup. The menu will automatically show mA or V range according to the selected function. The range is set by changing the positive maximum value; the negative value is automatically adapted accordingly. Only visible if [512] = User Bipol mA/V.

5333 AnOut1Bipol	
Default:	-10.00–10.00 V
Range:	-10.00–10.00 V, -20.0–20.0 mA

Communication information

Modbus Instance no/DeviceNet no:	43255
Profibus slot/index	169/159
EtherCAT and CANopen index (hex)	4cb7
Profinet IO index	19639
Fieldbus format	Long, 1=0.01 V, 0.01 mA
Modbus format	Elnt

AnOut1 Function Min [5334]

With AnOut1 Function Min the physical minimum value is scaled to selected presentation. The default scaling is dependent of the selected function of “AnOut1 [531]”.

5334 AnOut1FCMin		
Default:		Min
Min	0	Min value
Max	1	Max value
User-defined	2	Define user value in menu [5335]

Table 38 shows corresponding values for the min and max selections depending on the function of the analogue output [531].

Table 38

AnOut Function	Min Value	Max Value
Process Value	Process Min [324]	Process Max [325]
Speed	Min Speed [341]	Max Speed [343]
Torque	0%	Max Torque [351]
Process Ref	Process Min [324]	Process Max [325]
Shaft Power	0%	Motor Power [223]
Frequency	Fmin *	Motor Frequency [222]
Current	0 A	Motor Current [224]
El Power	0 W	Motor Power [223]
Output Voltage	0 V	Motor Voltage [221]
DC voltage	0 V	1000 V
AnIn1	AnIn1 Function Min	AnIn1 Function Max
AnIn2	AnIn2 Function Min	AnIn2 Function Max
AnIn3	AnIn3 Function Min	AnIn3 Function Max
AnIn4	AnIn4 Function Min	AnIn4 Function Max

*) Fmin is dependent on the set value in menu “Minimum Speed [341]”.

Communication information

Modbus Instance no/DeviceNet no:	43256
Profibus slot/index	169/160
EtherCAT and CANopen index (hex)	4cb8
Profinet IO index	19640
Fieldbus format	UInt
Modbus format	UInt

Example

Set the AnOut function for Motorfrequency to 0Hz, set AnOut functionMin [5334] to “User-defined” and AnOut1 VaMin[5335] = 0.0. This results in an analogue output signal from 0/4 mA to 20mA: 0Hz to Fmot.

This principle is valid for all Min to Max settings.

AnOut1 Function Value Min [5335]

With AnOut1 Function VaMin you define a user-defined value for the signal. Only visible when user-defined is selected in menu [5334].

5335 AnOut1VaMin	
Default:	0.000
Range:	-10000.000–10000.000

Communication information

Modbus Instance no/DeviceNet no:	43545
Profibus slot/index	170/194
EtherCAT and CANopen index (hex)	4dd9
Profinet IO index	19929
Fieldbus format	Long, 1=1 rpm, 1 %, 1W, 0.1 Hz, 0.1 V, 0.1 A or 0.001 via process value [322]
Modbus format	Elnt

AnOut1 Function Max [5336]

With AnOut1 Function Max the physical minimum value is scaled to selected presentation. The default scaling is dependent on the selected function of AnOut1 [531]. See Table 38.

5336 AnOut1FCMax		
Default:		Max
Min	0	Min value
Max	1	Max value
User defined	2	Define user value in menu [5337]

Communication information

Modbus Instance no/DeviceNet no:	43257
Profibus slot/index	169/161
EtherCAT and CANopen index (hex)	4cb9
Profinet IO index	19641
Fieldbus format	UInt
Modbus format	UInt

NOTE: It is possible to set AnOut1 up as an inverted output signal by setting AnOut1 Min > AnOut1 Max. See Fig. 129, page 168.

AnOut1 Function Value Max [5337]

With AnOut1 Function VaMax you define a user-defined value for the signal. Only visible when user-defined is selected in menu [5334].

5337 AnOut1VaMax	
Default:	0.000
Range:	-10000.000–10000.000

Communication information

Modbus Instance no/DeviceNet no:	43555
Profibus slot/index	170/204
EtherCAT and CANopen index (hex)	4de3
Profinet IO index	19939
Fieldbus format	Long, 1=1 rpm, 1 %, 1W, 0.1 Hz, 0.1 V, 0.1 A or 0.001 via process value [322]
Modbus format	Elnt

AnOut2 Function [534]

Sets the function for the Analogue Output 2.

534 AnOut2 Fc	
Default:	Torque
Selection:	Same as in menu [531]

Communication information

Modbus Instance no/DeviceNet no:	43261
Profibus slot/index	169/165
EtherCAT and CANopen index (hex)	4cbd
Profinet IO index	19645
Fieldbus format	UInt
Modbus format	UInt

AnOut2 Setup [535]

Preset scaling and offset of the output configuration for analogue output 2.

535 AnOut2 Setup	
Default:	4-20mA
Selection:	Same as in menu [532]

Communication information

Modbus Instance no/DeviceNet no:	43262
Profibus slot/index	169/166
EtherCAT and CANopen index (hex)	4cbe
Profinet IO index	19646
Fieldbus format	UInt
Modbus format	UInt

AnOut2 Advanced [536]

Same functions and submenus as under AnOut1 Advanced [533].

536	AnOut2 Advan
------------	---------------------

Communication information

Modbus Instance no/DeviceNet no:	43263–43267, 43546, 43556
Profibus slot/index	169/167–169/171, 170/195, 170/205
EtherCAT and CANopen index (hex)	4cbf - 4cc3, 4dda, 4de4
Profinet IO index	19647 - 19651, 19930, 19940
Fieldbus format	See [533]- [5367].
Modbus format	

11.7.4 Digital Outputs [540]

Submenu with all the settings for the digital outputs.

Digital Out 1 [541]

Sets the function for the digital output 1.

NOTE: The definitions described here are valid for the active output condition.

541 DigOut 1		
Default:		Ready
Off	0	Output is not active and constantly low.
On	1	Output is made constantly high, i.e. for checking circuits and trouble shooting.
Run	2	Running. The AC drive output is active = produces current for the motor.
Stop	3	The AC drive output is not active.
0Hz	4	The output frequency=0±0.1Hz when in Run condition.
Acc/Dec	5	The speed is increasing or decreasing along the acc. ramp dec. ramp.
At Process	6	The output = Reference.
At Max spd	7	The frequency is limited by the Maximum Speed.
No Trip	8	No Trip condition active.
Trip	9	A Trip condition is active.
AutoRst Trip	10	Autoreset trip condition active.
Limit	11	A Limit condition is active.
Warning	12	A Warning condition is active.
Ready	13	The AC drive is ready for operation. This means that the AC drive is powered up and healthy.
$T = T_{lim}$	14	The torque is limited by the torque limit function.
$I > I_{nom}$	15	The output current is higher than the motor nominal current [224], reduced according to Motor ventilation [228], see Fig. 94, page 100.
Brake	16	The output is used to control a mechanical brake.
Sgnl<Offset	17	One of the AnIn input signals is lower than 75% of the threshold level.
Alarm	18	The max or min alarm level has been reached.
Pre-Alarm	19	The max or min pre alarm level has been reached.

Max Alarm	20	The max alarm level has been reached.
Max PreAlarm	21	The max pre alarm level has been reached.
Min Alarm	22	The min alarm level has been reached.
Min PreAlarm	23	The min pre alarm Level has been reached.
LY	24	Logic output Y.
!LY	25	Logic output Y inverted.
LZ	26	Logic output Z.
!LZ	27	Logic output Z inverted.
CA 1	28	Analogue comparator 1 output.
!A1	29	Analogue comp 1 inverted output.
CA 2	30	Analogue comparator 2 output.
!A2	31	Analogue comp 2 inverted output.
CD 1	32	Digital comparator 1 output.
ID1	33	Digital comp 1 inverted output.
CD 2	34	Digital comparator 2 output.
ID2	35	Digital comp 2 inverted output.
Operation	36	Run command is active or AC drive running. The signal can be used to control the mains contactor if the AC drive is equipped with Standby supply option.
T1Q	37	Timer1 output
!T1Q	38	Timer1 inverted output
T2Q	39	Timer2 output
!T2Q	40	Timer2 inverted output
Sleeping	41	Sleeping function activated
Crane Deviat	42	Tripped on deviation
PumpSlave1	43	Activate pump slave 1
PumpSlave2	44	Activate pump slave 2
PumpSlave3	45	Activate pump slave 3
PumpSlave4	46	Activate pump slave 4
PumpSlave5	47	Activate pump slave 5
PumpSlave6	48	Activate pump slave 6
PumpMaster 1	49	Activate pump master 1
PumpMaster 2	50	Activate pump master 2
PumpMaster 3	51	Activate pump master 3
PumpMaster 4	52	Activate pump master 4
PumpMaster 5	53	Activate pump master 5

PumpMaster 6	54	Activate pump master 6
All Pumps	55	All pumps are running
Only Master	56	Only the master is running
Loc/Rem	57	Local/Rem mode indication Local = 1, Remote = 0
Standby	58	Standby supply option is active
PTC Trip	59	Trip when function is active
PT100 Trip	60	Trip when function is active
Overvolt	61	Overvoltage due to high main voltage
Overvolt G	62	Overvoltage due to generation mode
Overvolt D	63	Overvoltage due to deceleration
Acc	64	Acceleration along the acc. ramp
Dec	65	Deceleration along the dec. ramp
i ² t	66	i ² t limit protection active
V-Limit	67	Overvoltage limit function active
C-Limit	68	Overcurrent limit function active
Overtemp	69	Over temperature warning
Low voltage	70	Low voltage warning
DigIn 1	71	Digital input 1
DigIn 2	72	Digital input 2
DigIn 3	73	Digital input 3
DigIn 4	74	Digital input 4
DigIn 5	75	Digital input 5
DigIn 6	76	Digital input 6
DigIn 7	77	Digital input 7
DigIn 8	78	Digital input 8
ManRst Trip	79	Active trip that needs to be manually reset
Com Error	80	Serial communication lost
External Fan	81	The AC drive requires external cooling. Internal fans are active.
LC Pump	82	Activate liquid cooling pump
LC HE Fan	83	Activate liquid cooling heat exchanger fan
LC Level	84	Liquid cooling low level signal active
Run Right	85	Positive speed (>0.5%), i.e. forward/clockwise direction.
Run Left	86	Negative speed (<0.5%), i.e. reverse counter clockwise direction.
Com Active	87	Fieldbus communication active.
Brk Fault	88	Tripped on brake fault (not released)
BrkNotEngage	89	Warning and continued operation (keep torque) due to Brake not engaged during stop.
Option	90	Failure occurred in built-in option board.

CA3	91	Analogue comparator 3 output
IA3	92	Analogue comparator 3 inverted output
CA4	93	Analogue comparator 4 output
IA4	94	Analogue comparator 4 inverted output
CD3	95	Digital comparator 3 output
ID3	96	Digital comparator 3 inverted output
CD4	97	Digital comparator 4 output
ID4	98	Digital comparator 4 inverted output
C1Q	99	Counter 1 output
IC1Q	100	Counter 1 inverted output
C2Q	101	Counter 2 output
IC2Q	102	Counter 2 Inverted output
Enc Error	103	Tripped on Encoder error
Crane Comm	104	Crane Communication lost
Spin Start	105	Spin start is active

Communication information

Modbus Instance no/DeviceNet no:	43271
Profibus slot/index	169/175
EtherCAT and CANopen index (hex)	4cc7
Profinet IO index	19655
Fieldbus format	UInt
Modbus format	UInt

Digital Out 2 [542]

NOTE: The definitions described here are valid for the active output condition.

Sets the function for the digital output 2.

542 DigOut2	
Default:	Brake
Selection:	Same as in menu [541]

Communication information

Modbus Instance no/DeviceNet no:	43272
Profibus slot/index	169/176
EtherCAT and CANopen index (hex)	4cc8
Profinet IO index	19656
Fieldbus format	UInt
Modbus format	UInt

11.7.5 Relays [550]

Submenu with all the settings for the relay outputs. The relay mode selection makes it possible to establish a “fail safe” relay operation by using the normal closed contact to function as the normal open contact.

NOTE: Additional relays will become available when I/O option boards are connected. Maximum 3 boards with 3 relays each.

Relay 1 [551]

Sets the function for the relay output 1. Same function as digital output 1 [541] can be selected.

551 Relay 1	
Default:	Trip
Selection:	Same as in menu [541]

Communication information

Modbus Instance no/DeviceNet no:	43273
Profibus slot/index	169/177
EtherCAT and CANopen index (hex)	4cc9
Profinet IO index	19657
Fieldbus format	UInt
Modbus format	UInt

Relay 2 [552]

NOTE: The definitions described here are valid for the active output condition.

Sets the function for the relay output 2.

552 Relay 2	
Default:	Run
Selection:	Same as in menu [541]

Communication information

Modbus Instance no/DeviceNet no:	43274
Profibus slot/index	169/178
EtherCAT and CANopen index (hex)	4cca
Profinet IO index	19658
Fieldbus format	UInt
Modbus format	UInt

Relay 3 [553]

Sets the function for the relay output 3.

553 Relay 3	
Default:	Off
Selection:	Same as in menu [541]

Communication information

Modbus Instance no/DeviceNet no:	43275
Profibus slot/index	169/179
EtherCAT and CANopen index (hex)	4ccb
Profinet IO index	19659
Fieldbus format	UInt
Modbus format	UInt

Board Relay [554] to [55C]

These additional relays are only visible if an I/O option board is fitted in slot 1, 2, or 3. The outputs are named B1 Relay 1–3, B2 Relay 1–3 and B3 Relay 1–3. B stands for board and 1–3 is the number of the board which is related to the position of the I/O option board on the option mounting plate.

NOTE: Visible only if optional board is detected or if any input/output is activated.

Communication information

Modbus Instance no/DeviceNet no:	43511–43519
Profibus slot/index	170/160–170/168
EtherCAT and CANopen index (hex)	4db7 - 4dbf
Profinet IO index	19895 - 19903
Fieldbus format	UInt
Modbus format	UInt

Relay Advanced [55D]

This function makes it possible to ensure that the relay will also be closed when the AC drive is malfunctioning or powered down.

Example

A process always requires a certain minimum flow. To control the required number of pumps by the relay mode NC, the e.g. the pumps can be controlled normally by the pump control, but are also activated when the AC drive is tripped or powered down.

55D Relay Adv	
---------------	--

Relay 1 Mode [55D1]

55D1 Relay1 Mode		
Default:	N.O	
N.O	0	The normal open contact of the relay will be activated when the function is active.
N.C	1	The normally closed contact of the relay will act as a normal open contact. The contact will be opened when function is not active and closed when function is active.

Communication information

Modbus Instance no/DeviceNet no:	43276
Profibus slot/index	169/180
EtherCAT and CANopen index (hex)	4ccc
Profinet IO index	19660
Fieldbus format	UInt
Modbus format	UInt

Relay Modes [55D2] to [55DC]

Same function as for “Relay 1 Mode [55D1]”.

Communication information

Modbus Instance no/DeviceNet no:	43277, 43278, 43521–43529
Profibus slot/index	169/181, 169/182, 170/170–170/178
EtherCAT and CANopen index (hex)	4ccd, 4cce, 4dc1 - 4dc9
Profinet IO index	19661, 19662, 19905 - 19913
Fieldbus format	UInt
Modbus format	UInt

11.7.6 Virtual Connections [560]

Functions to enable eight internal connections of comparator, timer and digital signals, without occupying physical digital in/outputs. Virtual connections are used to wireless connection of a digital output function to a digital input function. Available signals and control functions can be used to create your own specific functions.

Example of start delay

The motor will start in RunR 10 seconds after DigIn1 gets high. DigIn1 has a time delay of 10 s.

Menu	Parameter	Setting
[521]	DigIn1	Timer 1
[561]	VIO 1 Dest	RunR
[562]	VIO 1 Source	T1Q
[641]	Timer1 Trig	DigIn 1
[642]	Timer1 Mode	Delay
[643]	Timer1 Delay	0:00:10

NOTE: When a digital input and a virtual destination are set to the same function, this function will act as an OR logic function.

Virtual Connection 1 Destination [561]

With this function the destination of the virtual connection is established. When a function can be controlled by several sources, e.g. VC destination or Digital Input, the function will be controlled in conformity with "OR logic". See DigIn for descriptions of the different selections.

561 VIO 1 Dest	
Default:	Off
Selection:	Same selections as for Digital Input 1, menu [521].

Communication information

Modbus Instance no/DeviceNet no:	43281
Profibus slot/index	169/185
EtherCAT and CANopen index (hex)	4cd1
Profinet IO index	19665
Fieldbus format	UInt
Modbus format	UInt

Virtual Connection 1 Source [562]

With this function the source of the virtual connection is defined. See DigOut 1 for description of the different selections.

562 VIO 1 Source	
Default:	Off
Selection:	Same as for menu [541].

Communication information

Modbus Instance no/DeviceNet no:	43282
Profibus slot/index	169/186
EtherCAT and CANopen index (hex)	4cd2
Profinet IO index	19666
Fieldbus format	UInt
Modbus format	UInt

Virtual Connections 2-8 [563] to [56G]

Same function as virtual connection 1 [561] and [562].

Communication information for virtual connections 2-8 Destination.

Modbus Instance no/DeviceNet no:	43283, 43285, 43287, 43289, 43291, 43293, 43295
Profibus slot/index	169/ 187, 189, 191, 193, 195, 197, 199
EtherCAT and CANopen index (hex)	4cd3, 4cd5, 4cd17, 4cd9, 4cdb, 4cdd, 4cdf
Profinet IO index	19667, 19669, 19671, 19673, 19675, 19677, 19679
Fieldbus format	UInt
Modbus format	UInt

Communication information for virtual connections 2-8 Source.

Modbus Instance no/DeviceNet no:	43284, 43286, 43288, 43290, 43292, 43294, 43296
Profibus slot/index	169/ 188, 190, 192, 194, 196, 198, 200
EtherCAT and CANopen index (hex)	4cd4, 4cd6, 4cd8, 4cda, 4cdc, 4cde, 4ce0
Profinet IO index	19668, 19670, 19672, 19674, 19676, 19678, 19680
Fieldbus format	UInt
Modbus format	UInt

11.8 Logical Functions and Timers [600]

With the Comparators, Logic Functions and Timers, conditional signals can be programmed for control or signalling features. This gives you the ability to compare different signals and values in order to generate monitoring/controlling features.

11.8.1 Comparators [610]

The comparators available make it possible to monitor different internal signals and values, and visualize via digital relay outputs, when a specific value or status is reached or established.

Analogue comparators [611] - [614]

There are 4 analogue comparators that compare any available analogue value (including the analogue reference inputs) with two adjustable levels. The two levels available are Level HI and Level LO. There are two analogue comparator types selectable, an analogue comparator with hysteresis and an analogue window comparator.

The analogue hysteresis type comparator uses the two available levels to create a hysteresis for the comparator between setting and resetting the output. This function gives a clear difference in switching levels, which lets the process adapt until a certain action is started. With such a hysteresis, even an unstable analogue signal can be monitored without getting a nervous comparator output signal. Another feature is the possibility to get a fixed indication that a certain level has been passed. The comparator can latch by setting Level LO to a higher value than Level HI.

The analogue window comparator uses the two available levels to define the window in which the analogue value should be within for setting the comparator output. The input analogue value of the comparator can also be selected as bipolar, i.e. treated as signed value or unipolar, i.e. treated as absolute value.

Refer to Fig. 136, page 188 where these functions are illustrated.

Digital comparators [615]

There are 4 digital comparators that compare any available digital signal.

The output signals of these comparators can be logically tied together to yield a logical output signal.

All the output signals can be programmed to the digital or relay outputs or used as a source for the virtual connections [560].

CA1 Setup [611]

Analogue comparator 1, parameter group.

Analogue Comparator 1, Value [6111]

Selection of the analogue value for Analogue Comparator 1 (CA1).

Analogue comparator 1 compares the selectable analogue value in menu [6111] with the constant Level HI in menu [6112] and constant Level LO in menu [6113]. If Bipolar type[6115] input signal is selected then the comparison is made with sign otherwise if unipolar selected then comparison is made with absolute values.

For Hysteresis comparator type [6114], when the value exceeds the upper limit level high, the output signal CA1 is set high and !A1 low, see Fig. 132. When the value decreases below the lower limit, the output signal CA1 is set low and !A1 high.

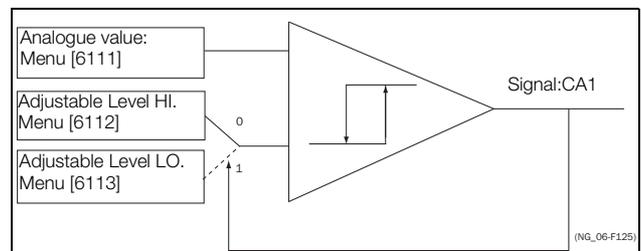


Fig. 132 Analogue comparator type Hysteresis

For Window comparator type [6114], when the value is between the lower and upper levels, the output signal value CA1 is set high and !A1 low, see Fig. 135, page 186. When the value is outside the band of lower and upper levels, the output CA1 is set low and !A1 high.

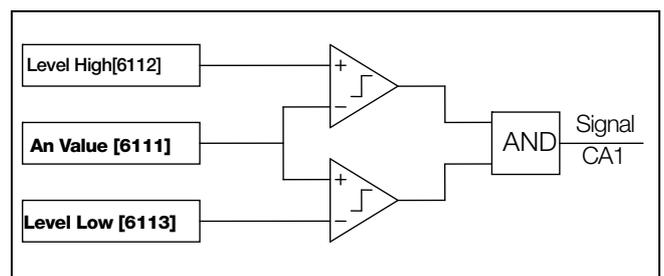


Fig. 133 Analogue comparator type "Window"

The output signal can be programmed as a virtual connection source and to the digital or relay outputs.

6111 CA1 Value		
Default:		Speed
Process Val	0	Set by Process settings [321] and [322]
Speed	1	rpm
Torque	2	%
Shaft Power	3	kW
EI Power	4	kW
Current	5	A
Output Volt	6	V
Frequency	7	Hz
DC Voltage	8	V
IGBT Temp	9	°C
PT100_1	10	°C
PT100_2	11	°C
PT100_3	12	°C
Energy	13	kWh
Run Time	14	h
Mains Time	15	h
AnIn1	16	%
AnIn2	17	%
AnIn3	18	%
AnIn4	19	%
Process Ref	20	Set by Process settings [321] and [322]
Process Err	21	

Communication information

Modbus Instance no/DeviceNet no:	43401
Profibus slot/index	170/50
EtherCAT and CANopen index (hex)	4d49
Profinet IO index	19758
Fieldbus format	UInt
Modbus format	UInt

Example

Create automatic RUN/STOP signal via the analogue reference signal. Analogue current reference signal, 4-20 mA, is connected to Analogue Input 1. "AnIn1 Setup", menu [512] = 4-20 mA and the threshold is 4 mA. Full scale (100%) input signal on "AnIn 1" = 20 mA. When the reference signal on "AnIn1" increases 80% of the threshold (4 mA x 0.8 = 3.2 mA), the AC drive will be set in RUN mode. When the signal on "AnIn1" goes below 60% of the threshold (4 mA x 0.6 = 2.4 mA) the AC drive is set to STOP mode. The output of CA1 is used as a virtual connection source that controls the virtual connection destination RUN.

Menu	Function	Setting
511	AnIn1 Function	Process reference
512	AnIn1 Set-up	4-20 mA, threshold is 4 mA
341	Min Speed	0
343	Max Speed	1500
6111	CA1 Value	AnIn1
6112	CA1 Level HI	16% (3.2mA/20mA x 100%)
6113	CA1 Level LO	12% (2.4mA/20mA x 100%)
6114	CA1 Type	Hysteresis
561	VIO 1 Dest	RunR
562	VIO 1 Source	CA1
215	Run/Stp Ctrl	Remote

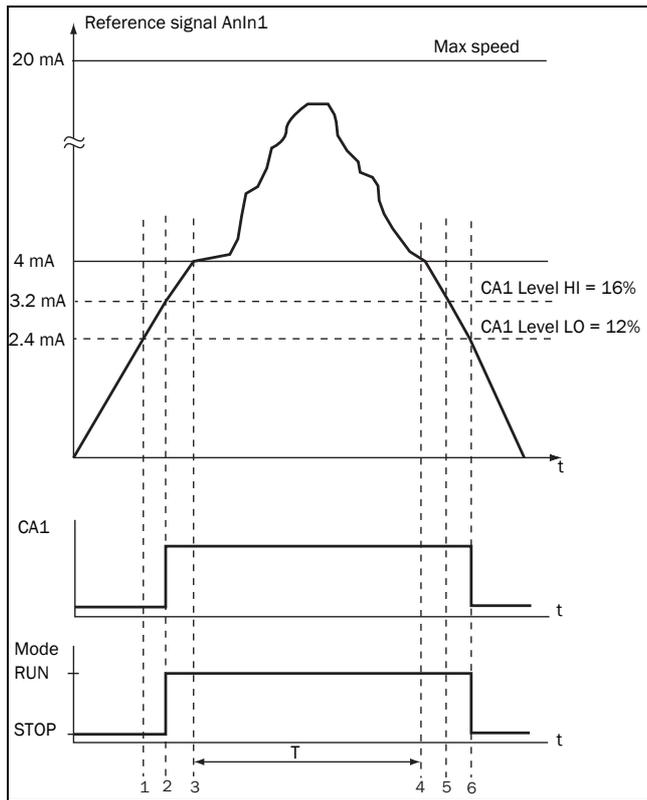


Fig. 134

No.	Description
1	The reference signal passes the Level LO value from below (positive edge), the comparator CA1 output stays low, mode=RUN.
2	The reference signal passes the Level HI value from below (positive edge), the comparator CA1 output is set high, mode=RUN.
3	The reference signal passes the threshold level of 4 mA, the motor speed will now follow the reference signal.
T	During this period the motor speed will follow the reference signal.
4	The reference signal reaches the threshold level, motor speed is 0 rpm, mode = RUN.
5	The reference signal passes the Level HI value from above (negative edge), the comparator CA1 output stays high, mode = RUN.
6	The reference signal passes the Level LO value from above (negative edge), the comparator CA1 output=STOP.

Analogue Comparator 1, Level High [6112]

Sets the analogue comparator high level, with range according to the selected value in menu [6111].

6112 CA1 Level HI	
Default:	300 rpm
Range:	See min/max in table below.

Min/Max setting range for menu [6112]

Mode	Min	Max	Decimals
Process Val	Set by Process settings [321] and [322]		3
Speed, rpm	0	Max speed	0
Torque, %	0	Max torque	0
Shaft Power, kW	0	Motor $P_n \times 4$	0
El Power, kW	0	Motor $P_n \times 4$	0
Current, A	0	Motor $I_n \times 4$	1
Output volt, V	0	1000	1
Frequency, Hz	0	400	1
DC voltage, V	0	1250	1
Heatsink temp, °C	0	100	1
PT 100_1_2_3, °C	-100	300	1
Energy, kWh	0	1000000	0
Run time, h	0	65535	0
Mains time, h	0	65535	0
AnIn 1-4%	0	100	0
Process Ref	Set by Process settings [321] and [322]		3
Process Err	Set by Process settings [321] and [322]		3

NOTE: If Bipolar selected [6115] then Min value is equal to -Max in the table.

Communication information

Modbus Instance no/DeviceNet no:	43402
Profibus slot/index	170/51
EtherCAT and CANopen index (hex)	4d4a
Profinet IO index	19786
Fieldbus format	Long, 1=1 W, 0.1 A, 0.1 V, 0.1 Hz, 0.1°C, 1 kWh, 1H, 1%, 1 rpm or 0.001 via process value
Modbus format	Elnt

Example

This example describes, both for hysteresis and window type comparator, the normal use of the constant level high and low.

Menu	Function	Setting
343	Max Speed	1500
6111	CA1 Value	Speed
6112	CA1 Level HI	300 rpm
6113	CA1 Level LO	200 rpm
6114	CA1 Type	Hysteresis
561	VC1 Dest	Timer 1
562	VC1 Source	CA1

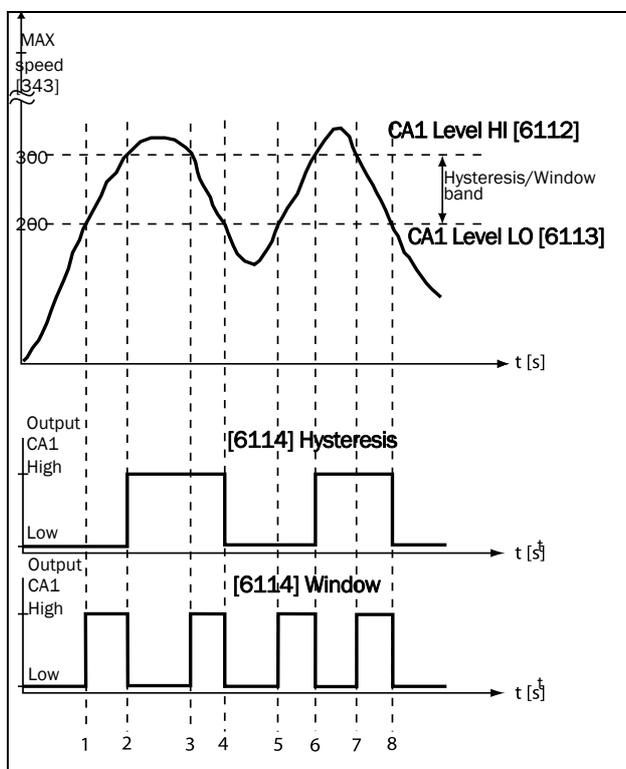


Fig. 135

Table 39 Comments to Fig. 135 regarding Hysteresis selection.

No.	Description	Hysteresis
1	The reference signal passes the Level LO value from below (positive edge), the comparator CA1 does not change, output stays low.	—
2	The reference signal passes the Level HI value from below (positive edge), the comparator CA1 output is set high.	↑
3	The reference signal passes the Level HI value from above (negative edge), the comparator CA1 does not change, output stays high.	—
4	The reference signal passes the Level LO value from above (negative edge), the comparator CA1 is reset, output is set low.	↓
5	The reference signal passes the Level LO value from below (positive edge), the comparator CA1 does not change, output stays low.	—
6	The reference signal passes the Level HI value from below (positive edge), the comparator CA1 output is set high.	↑
7	The reference signal passes the Level HI value from above (negative edge), the comparator CA1 does not change, output stays high.	—
8	The reference signal passes the Level LO value from above (negative edge), the comparator CA1 is reset, output is set low.	↓

Table 40 Comments to Fig. 135 regarding Window selection.

No.	Description	Window
1	The reference signal passes the Level LO value from below (signal inside Window band), the comparator CA1 output is set high.	↑
2	The reference signal passes the Level LO value from above (signal outside Window band), the comparator CA1 is reset, output is set low.	↓
3	The reference signal passes the Level HI value from above (signal inside Window band), the comparator CA1 output is set high.	↑
4	The reference signal passes the Level LO value from above (signal outside Window band), the comparator CA1 is reset, output is set low.	↓
5	The reference signal passes the Level LO value from below (signal inside Window band), the comparator CA1 output is set high.	↑
6	The reference signal passes the Level HI value from below (signal outside Window band), the comparator CA1 is reset, output is set low.	↓
7	The reference signal passes the Level HI value from above (signal inside Window band), the comparator CA1 output is set high.	↑
8	The reference signal passes the Level LO value from above (signal outside Window band), the comparator CA1 is reset, output is set low.	↓

Analogue Comparator 1, Level Low [6113]

Sets the analogue comparator low level, with unit and range according to the selected value in menu [6111].

6113 CA1 Level LO	
Default:	200 rpm
Range:	Range as [6112].

Communication information

Modbus Instance no/DeviceNet no:	43403
Profibus slot/index	170/52
EtherCAT and CANopen index (hex)	4d4b
Profinet IO index	19787
Fieldbus format	Long, 1=1 W, 0.1 A, 0.1 V, 0.1 Hz, 0.1°C, 1 kWh, 1H, 1%, 1 rpm or 0.001 via process value
Modbus format	Elnt

Analogue Comparator 1, Type [6114]

Selects the analogue comparator type, i.e. Hysteresis or Window type. See Fig. 136 and Fig. 137.

6114 CA1 Type		
Default:		Hysteresis
Hysteresis	0	Hysteresis type comparator
Window	1	Window type comparator

Communication information

Modbus Instance no/DeviceNet no:	43481
Profibus slot/index	170/130
EtherCAT and CANopen index (hex)	4d99
Profinet IO index	19865
Fieldbus format	UInt
Modbus format	UInt

Analogue Comparator 1, Polarity[6115]

Selects how the selected value in [6111] should be handled prior to the analogue comparator, i.e. as absolute value or handled with sign. See Fig. 136

6115 CA1 Polar		
Default:		Unipolar
Unipolar	0	Absolute value of [6111] used
Bipolar	1	Signed value of [6111] used

Communication information

Modbus Instance no/DeviceNet no:	43486
Profibus slot/index	170/135
EtherCAT and CANopen index (hex)	4d9e
Profinet IO index	19870
Fieldbus format	UInt
Modbus format	UInt

Example

See Fig. 136 and Fig. 137 for different principle functionality of comparator features 6114 and 6115.

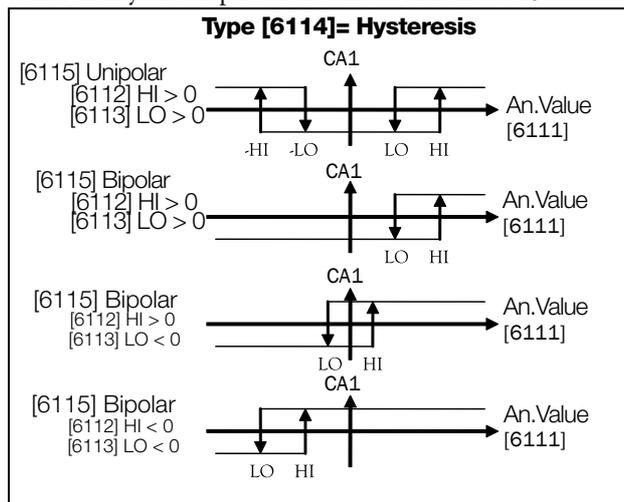


Fig. 136 Principle functionality of comparator features for "Type [6114] = Hysteresis" and "Polar [6115]".

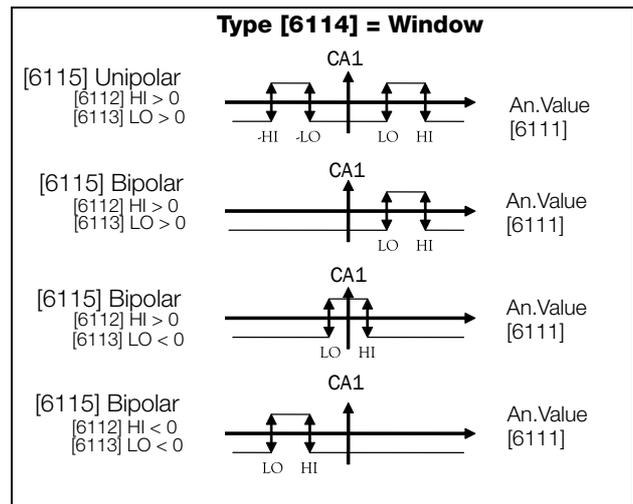


Fig. 137 Principle functionality of comparator features for "Type [6114] = Window" and "Polar [6115]".

NOTE: When "Unipolar" is selected, absolute value of signal is used.

NOTE: When "Bipolar" is selected in [6115] then:
1. Functionality is not symmetrical.
2. Ranges for high/low are bipolar

CA2 Setup [612]

Analogue comparator 2, parameter group.

Analogue Comparator 2, Value [6121]

Function is identical to analogue comparator 1, value [6111].

6121 CA2 Value	
Default:	Torque
Selections:	Same as in menu [6111]

Communication information

Modbus Instance no/DeviceNet no:	43404
Profibus slot/index	170/53
EtherCAT and CANopen index (hex)	4d4c
Profinet IO index	19788
Fieldbus format	UInt
Modbus format	UInt

Analogue Comparator 2, Level High [6122]

Function is identical to analogue comparator 1,
level high [6112].

6122 CA2 Level HI	
Default:	20%
Range:	Enter a value for the high level.

Communication information

Modbus Instance no/DeviceNet no:	43405
Profibus slot/index	170/54
EtherCAT and CANopen index (hex)	4d4d
Profinet IO index	19789
Fieldbus format	Long 1=1 W, 0.1 A, 0.1 V, 0.1 Hz, 0.1°C, 1 kWh, 1H, 1%, 1 rpm or 0.001 via process value
Modbus format	EInt

Analogue Comparator 2, Level Low [6123]

Function is identical to analogue comparator 1,
level low [6113].

6123 CA2 Level LO	
Default:	10%
Range:	Enter a value for the low level.

Communication information

Modbus Instance no/DeviceNet no:	43406
Profibus slot/index	170/55
EtherCAT and CANopen index (hex)	4d4e
Profinet IO index	19790
Fieldbus format	Long, 1=1 W, 0.1 A, 0.1 V, 0.1 Hz, 0.1°C, 1 kWh, 1H, 1%, 1 rpm or 0.001 via process value
Modbus format	EInt

Analogue Comparator 2, Type [6124]

Function is identical to analogue comparator 1,
Type [6114].

6124 CA2 Type		
Default:		Hysteresis
Hysteresis	0	Hysteresis type comparator
Window	1	Window type comparator

Communication information

Modbus Instance no/DeviceNet no:	43482
Profibus slot/index	170/131
EtherCAT and CANopen index (hex)	4d9a
Profinet IO index	19866
Fieldbus format	UInt
Modbus format	UInt

Analogue Comparator 2, Polar [6125]

Function is identical to analogue comparator 1,
Polar [6115].

6125 CA2 Polar		
Default:		Unipolar
Unipolar	0	Absolute value of [6111] used
Bipolar	1	Signed value of [6111] used

Communication information

Modbus Instance no/DeviceNet no:	43487
Profibus slot/index	170/136
EtherCAT and CANopen index (hex)	4d9f
Profinet IO index	19871
Fieldbus format	UInt
Modbus format	UInt

CA3 Setup [613]

Analogue comparators 3, parameter group.

Analogue Comparator 3, Value [6131]

Function is identical to analogue comparator 1, value [6111].

6131 CA3 Value	
Default:	Process Value
Selections:	Same as in menu [6111]

Communication information

Modbus Instance no/DeviceNet no:	43471
Profibus slot/index	170/120
EtherCAT and CANopen index (hex)	4d8f
Profinet IO index	19855
Fieldbus format	UInt
Modbus format	UInt

Analogue Comparator 3, Level High [6132]

Function is identical to analogue comparator 1, level high [6112].

6132 CA3 Level HI	
Default:	300rpm
Range:	Enter a value for the high level.

Communication information

Modbus Instance no/DeviceNet no:	43472
Profibus slot/index	170/121
EtherCAT and CANopen index (hex)	4d90
Profinet IO index	19856
Fieldbus format	Long 1=1 W, 0.1 A, 0.1 V, 0.1 Hz, 0.1°C, 1 kWh, 1H, 1%, 1 rpm or 0.001 via process value
Modbus format	EInt

Analogue Comparator 3, Level Low [6133]

Function is identical to analogue comparator 1, level low [6113].

6133 CA3 Level LO	
Default:	200 rpm
Range:	Enter a value for the low level.

Communication information

Modbus Instance no/DeviceNet no:	43473
Profibus slot/index	170/122
EtherCAT and CANopen index (hex)	4d91
Profinet IO index	19857
Fieldbus format	Long, 1=1 W, 0.1 A, 0.1 V, 0.1 Hz, 0.1°C, 1 kWh, 1H, 1%, 1 rpm or 0.001 via process value
Modbus format	EInt

Analogue Comparator, 3 Type [6134]

Function is identical to analogue comparator 1, level Type [6114].

6134 CA3 Type		
Default:		Hysteresis
Hysteresis	0	Hysteresis type comparator
Window	1	Window type comparator

Communication information

Modbus Instance no/DeviceNet no:	43483
Profibus slot/index	170/132
EtherCAT and CANopen index (hex)	4d9b
Profinet IO index	19867
Fieldbus format	UInt
Modbus format	UInt

Analogue Comparator 3, Polar [6135]

Function is identical to analogue comparator 1, Polar [6115].

6135 CA3 Polar		
Default:		Unipolar
Unipolar	0	Absolute value of [6111] used
Bipolar	1	Signed value of [6111] used

Communication information

Modbus Instance no/DeviceNet no:	43488
Profibus slot/index	170/137
EtherCAT and CANopen index (hex)	4da0
Profinet IO index	19872
Fieldbus format	UInt
Modbus format	UInt

CA4 Setup [614]

Analogue comparators 4, parameter group.

Analogue Comparator 4, Value [6141]

Function is identical to analogue comparator 1, value [6111].

6141 CA4 Value	
Default:	Process Error
Selections:	Same as in menu [6111]

Communication information

Modbus Instance no/DeviceNet no:	43474
Profibus slot/index	170/123
EtherCAT and CANopen index (hex)	4d92
Profinet IO index	19858
Fieldbus format	UInt
Modbus format	UInt

Analogue Comparator 4, Level High [6142]

Function is identical to analogue comparator 1 level high [6112].

6142 CA4 Level HI	
Default:	100rpm
Range:	Enter a value for the high level.

Communication information

Modbus Instance no/DeviceNet no:	43475
Profibus slot/index	170/124
EtherCAT and CANopen index (hex)	4d93
Profinet IO index	19859
Fieldbus format	Long 1=1 W, 0.1 A, 0.1 V, 0.1 Hz, 0.1°C, 1 kWh, 1H, 1%, 1 rpm or 0.001 via process value
Modbus format	Elnt

Analogue Comparator 4, Level Low [6143]

Function is identical to analogue comparator 1, level low [6113].

6143 CA4 Level LO	
Default:	-100 rpm
Range:	Enter a value for the low level.

Communication information

Modbus Instance no/DeviceNet no:	43476
Profibus slot/index	170/125
EtherCAT and CANopen index (hex)	4d94
Profinet IO index	19860
Fieldbus format	Long, 1=1 W, 0.1 A, 0.1 V, 0.1 Hz, 0.1°C, 1 kWh, 1H, 1%, 1 rpm or 0.001 via process value
Modbus format	Elnt

Analogue Comparator 4, Type [6144]

Function is identical to analogue comparator 1, level Type [6114]

6144 CA4 Type		
Default:		Window
Hysteresis	0	Hysteresis type comparator
Window	1	Window type comparator

Communication information

Modbus Instance no/DeviceNet no:	43484
Profibus slot/index	170/133
EtherCAT and CANopen index (hex)	4d9c
Profinet IO index	19868
Fieldbus format	UInt
Modbus format	UInt

Analogue Comparator 4, Polar [6145]

Function is identical to analogue comparator 1, Polar [6115]

6145 CA4 Polar		
Default:		Bipolar
Unipolar	0	Absolute value of [6111] used
Bipolar	1	Signed value of [6111] used

Communication information

Modbus Instance no/DeviceNet no:	43489
Profibus slot/index	170/138
EtherCAT and CANopen index (hex)	4da1
Profinet IO index	19873
Fieldbus format	UInt
Modbus format	UInt

Digital comparator Setup [615]

Digital comparators, parameter group.

Digital Comparator 1 [6151]

Selection of the input signal for digital comparator 1 (CD1).

The output signal CD1 is set high if the selected input signal is active. See Fig. 138.

The output signal can be programmed to the digital or relay outputs or used as a source for the virtual connections [560].

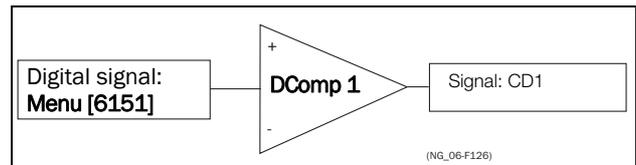


Fig. 138 Digital comparator

6151 CD1	
Default:	Run
Selection:	Same selections as for "DigOut 1 [541]".

Communication information

Modbus Instance no/DeviceNet no:	43407
Profibus slot/index	170/56
EtherCAT and CANopen index (hex)	4d4f
Profinet IO index	19791
Fieldbus format	UInt
Modbus format	UInt

Digital Comparator 2 [6152]

Function is identical to digital comparator 1 [6151].

6152 CD 2	
Default:	DigIn 1
Selection:	Same selections as for "DigOut 1 [541]".

Communication information

Modbus Instance no/DeviceNet no:	43408
Profibus slot/index	170/57
EtherCAT and CANopen index (hex)	4d50
Profinet IO index	19792
Fieldbus format	UInt
Modbus format	UInt

Digital Comparator 3 [6153]

Function is identical to digital comparator 1 [6151].

6153	CD 3
Default:	Trip
Selection:	Same selections as for "DigOut 1 [541]".

Communication information

Modbus Instance no/DeviceNet no:	43477
Profibus slot/index	170/126
EtherCAT and CANopen index (hex)	4d95
Profinet IO index	19861
Fieldbus format	UInt
Modbus format	UInt

Digital Comparator 4 [6154]

Function is identical to digital comparator 1 [6151].

6154	CD 4
Default:	Ready
Selection:	Same selections as for "DigOut 1 [541]".

Communication information

Modbus Instance no/DeviceNet no:	43478
Profibus slot/index	170/127
EtherCAT and CANopen index (hex)	4d96
Profinet IO index	19862
Fieldbus format	UInt
Modbus format	UInt

11.8.2 Logic Output Y [620]

By means of an expression editor, the comparator signals can be logically combined into the Logic Y function.

The expression editor has the following features:

- The following signals can be used:
CA1, CA2, CD1, CD2 or LZ (or LY)
- The following signals can be inverted:
!A1, !A2, !D1, !D2, or !LZ (or !LY)
- The following logical operators are available:
" + " : OR operator
" & " : AND operator
" ^ " : EXOR operator

Expressions according to the following truth table can be made:

Input		Result		
A	B	& (AND)	+ (OR)	^(EXOR)
0	0	0	0	0
0	1	0	1	1
1	0	0	1	1
1	1	1	1	0

The output signal can be programmed to the digital or relay outputs or used as a Virtual Connection Source [560].

```
620 LOGIC Y  
Stp CA1&!A2&CD1
```

The expression must be programmed by means of the menus [621] to [625].

Example:

Broken belt detection for Logic Y

This example describes the programming for a so-called "broken belt detection" for fan applications.

The comparator CA1 is set for frequency > 10Hz.

The comparator !A2 is set for load < 20%.

The comparator CD1 is set for Run.

The 3 comparators are all AND-ed, given the "broken belt detection".

In menus [621]-[625] expression entered for Logic Y is visible.

Set menu [621] to CA1

Set menu [622] to &

Set menu [623] to !A2

Set menu [624] to &

Set menu [625] to CD1

Menu [620] now holds the expression for Logic Y:

CA1&!A2&CD1

which is to be read as:

(CA1&!A2)&CD1

NOTE: Set menu [624] to "." to finish the expression when only two comparators are required for Logic Y.

Y Comp 1 [621]

Selects the first comparator for the logic Y function.

621		Y Comp 1
Default:		CA1
CA1	0	
IA1	1	
CA2	2	
IA2	3	
CD1	4	
!D1	5	
CD2	6	
!D2	7	
LZ/LY	8	
!LZ/!LY	9	
T1	10	
!T1	11	
T2	12	
!T2	13	
CA3	14	
IA3	15	
CA4	16	
IA4	17	
CD3	18	
ID3	19	
CD4	20	
ID4	21	
C1	22	
!C1	23	
C2	24	
!C2	25	

Communication information

Modbus Instance no/DeviceNet no:	43411
Profibus slot/index	170/60
EtherCAT and CANopen index (hex)	4d53
Profinet IO index	19795
Fieldbus format	UInt
Modbus format	UInt

Y Operator 1 [622]

Selects the first operator for the logic Y function.

622			Y Operator 1
Default:			&
&	1		&=AND
+	2		+=OR
^	3		^=EXOR

Communication information

Modbus Instance no/DeviceNet no:	43412
Profibus slot/index	170/61
EtherCAT and CANopen index (hex)	4d54
Profinet IO index	19796
Fieldbus format	UInt
Modbus format	UInt

Y Comp 2 [623]

Selects the second comparator for the logic Y function.

623		Y Comp 2
Default:		!A2
Selection:		Same as menu [621]

Communication information

Modbus Instance no/DeviceNet no:	43413
Profibus slot/index	170/62
EtherCAT and CANopen index (hex)	4d55
Profinet IO index	19797
Fieldbus format	UInt
Modbus format	UInt

Y Operator 2 [624]

Selects the second operator for the logic Y function.

624 Y Operator 2		
Default:		&
.	0	When · (dot) is selected, the Logic Y expression is finished (when only two expressions are tied together).
&	1	&=AND
+	2	+=OR
^	3	^=EXOR

Communication information

Modbus Instance no/DeviceNet no:	43414
Profibus slot/index	170/63
EtherCAT and CANopen index (hex)	4d56
Profinet IO index	19798
Fieldbus format	UInt
Modbus format	UInt

Y Comp 3 [625]

Selects the third comparator for the logic Y function.

625 Y Comp 3	
Default:	CD1
Selection:	Same as menu [621]

Communication information

Modbus Instance no/DeviceNet no:	43415
Profibus slot/index	170/64
EtherCAT and CANopen index (hex)	4d57
Profinet IO index	19799
Fieldbus format	UInt
Modbus format	UInt

11.8.3 Logic Output Z [630]

630 LOGIC Z
Stp **A** CA1 & !A2 & CD1

The expression must be programmed by means of the menus [631] to [635].

Z Comp 1 [631]

Selects the first comparator for the logic Z function.

631 Z Comp 1	
Default:	CA1
Selection:	Same as menu [621]

Communication information

Modbus Instance no/DeviceNet no:	43421
Profibus slot/index	170/70
EtherCAT and CANopen index (hex)	4d5d
Profinet IO index	19805
Fieldbus format	UInt
Modbus format	UInt

Z Operator 1 [632]

Selects the first operator for the logic Z function.

632 Z Operator 1	
Default:	&
Selection:	Same as menu [622]

Communication information

Modbus Instance no/DeviceNet no:	43422
Profibus slot/index	170/71
EtherCAT and CANopen index (hex)	4d5e
Profinet IO index	19806
Fieldbus format	UInt
Modbus format	UInt

Z Comp 2 [633]

Selects the second comparator for the logic Z function.

633 Z Comp 2	
Default:	!A2
Selection:	Same as menu [621]

Communication information

Modbus Instance no/DeviceNet no:	43423
Profibus slot/index	170/72
EtherCAT and CANopen index (hex)	4d5f
Profinet IO index	19807
Fieldbus format	UInt
Modbus format	UInt

Z Operator 2 [634]

Selects the second operator for the logic Z function.

634 Z Operator 2	
Default:	&
Selection:	Same as menu [624]

Communication information

Modbus Instance no/DeviceNet no:	43424
Profibus slot/index	170/73
EtherCAT and CANopen index (hex)	4d60
Profinet IO index	19808
Fieldbus format	UInt
Modbus format	UInt

Z Comp 3 [635]

Selects the third comparator for the logic Z function.

635 Z Comp 3	
Default:	CD1
Selection:	Same as menu [621]

Communication information

Modbus Instance no/DeviceNet no:	43425
Profibus slot/index	170/74
EtherCAT and CANopen index (hex)	4d61
Profinet IO index	19809
Fieldbus format	UInt
Modbus format	UInt

11.8.4 Timer1 [640]

The Timer functions can be used as a delay timer or as an interval with separate On and Off times (alternate mode). In delay mode, the output signal T1Q becomes high if the set delay time is expired. See Fig. 139.

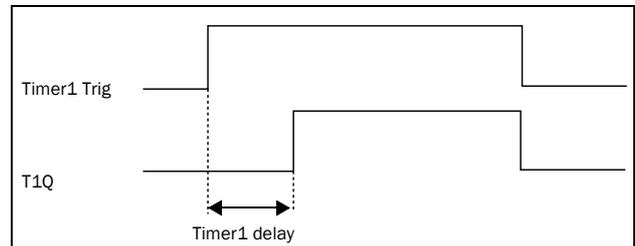


Fig. 139

In alternate mode, the output signal T1Q will switch automatically from high to low etc. according to the set interval times “Timer1 T1” and “Timer 1 T2”. See Fig. 140.

The output signal can be programmed to the digital or relay outputs used in logic functions [620] and [630], or as a virtual connection source [560].

NOTE: The actual timers are common for all parameter sets. If the actual set is changed, the timer functionality [641] to [645] will change according set settings but the timer value will stay unchanged. So initialization of the timer might differ for a set change compared to normal triggering of a timer.

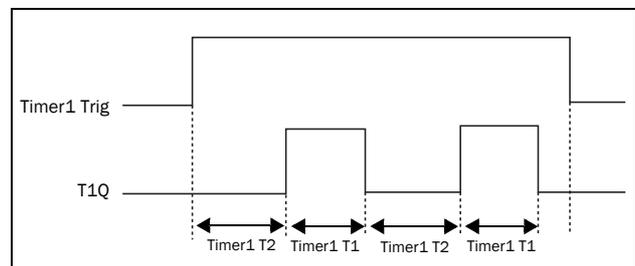


Fig. 140

Timer 1 Trig [641]

Selection of the Timer input trigger signal.

641 Timer1 Trig	
Default:	Off
Selection:	Same selections as Digital Output 1 menu [541].

Communication information

Modbus Instance no/DeviceNet no:	43431
Profibus slot/index	170/80
EtherCAT and CANopen index (hex)	4d67
Profinet IO index	19815
Fieldbus format	UInt
Modbus format	UInt

Timer 1 Mode [642]

Selection of mode of operation for Timer.

642 Timer1 Mode	
Default:	Off
Off	0
Delay	1
Alternate	2

Communication information

Modbus Instance no/DeviceNet no:	43432
Profibus slot/index	170/81
EtherCAT and CANopen index (hex)	4d68
Profinet IO index	19816
Fieldbus format	UInt
Modbus format	UInt

Timer 1 Delay [643]

This menu is only visible when timer mode is set to delay.

This menu can only be edited as in alternative 2, see section Chapter 10.6 page 84.

Timer 1 delay sets the time that will be used by the first timer after it is activated. Timer 1 can be activated by a high signal on a DigIn that is set to Timer 1 or via a virtual destination [560].

643 Timer1Delay	
Default:	0:00:00 (hr:min:sec)
Range:	0:00:00–9:59:59

Communication information

Modbus Instance no/DeviceNet no:	43433 hours 43434 minutes 43435 seconds
Profibus slot/index	170/82, 170/83, 170/84
EtherCAT and CANopen index (hex)	4d69, 4d6a, 4d6b
Profinet IO index	19817, 19818, 19819
Fieldbus format	UInt, 1=1 h/m/s
Modbus format	UInt, 1=1 h/m/s

Timer 1 T1 [644]

When timer mode is set to Alternate and Timer 1 is enabled, this timer will automatically keep on switching according to the independently programmable on and off times. The Timer 1 in Alternate mode can be enabled by a digital input or via a virtual connection. See Fig. 140. Timer 1 T1 sets the on time in the alternate mode.

644 Timer 1 T1	
Default:	0:00:00 (hr:min:sec)
Range:	0:00:00–9:59:59

Communication information

Modbus Instance no/DeviceNet no:	43436 hours 43437 minutes 43438 seconds
Profibus slot/index	170/85, 170/86, 170/87
EtherCAT and CANopen index (hex)	4d6c, 4d6d, 4d6e
Profinet IO index	19820, 19821, 19822
Fieldbus format	UInt, 1=1 h/m/s
Modbus format	UInt, 1=1 h/m/s

Timer 1 T2 [645]

Timer 1 T2 sets the off time in the alternate mode.

645 Timer1 T2	
Default:	0:00:00, hr:min:sec
Range:	0:00:00–9:59:59

Communication information

Modbus Instance no/DeviceNet no:	43439 hours 43440 minutes 43441 seconds
Profibus slot/index	170/88, 170/89, 170/90
EtherCAT and CANopen index (hex)	4d6f, 4d70, 4d71
Profinet IO index	19823, 19824, 19825
Fieldbus format	UInt, 1=1 h/m/s
Modbus format	UInt, 1=1 h/m/s

NOTE: “Timer 1 T1 [644]” and “Timer 1 T2 [645]” are only visible when Timer Mode is set to Alternate.

Timer 1 Value [649]

Timer 1 Value shows actual value of the timer.

649 Timer1 Value	
Default:	0:00:00, hr:min:sec
Range:	0:00:00–9:59:59

Communication information

Modbus Instance no/DeviceNet no:	42921 hours 42922 minutes 42923 seconds
Profibus slot/index	168/80, 168/81, 168/82
EtherCAT and CANopen index (hex)	4b69, 4b6a, 4b6b
Profinet IO index	19305, 19306, 19307
Fieldbus format	UInt, 1=1 h/m/s
Modbus format	UInt, 1=1 h/m/s

11.8.5 Timer2 [650]

Refer to the descriptions for Timer1.

Timer 2 Trig [651]

651 Timer2 Trig	
Default:	Off
Selection:	Same selections as Digital Output 1 menu [541].

Communication information

Modbus Instance no/DeviceNet no:	43451
Profibus slot/index	170/100
EtherCAT and CANopen index (hex)	4d7b
Profinet IO index	19835
Fieldbus format	UInt
Modbus format	UInt

Timer 2 Mode [652]

652 Timer2 Mode	
Default:	Off
Selection:	Same as in menu [642]

Communication information

Modbus Instance no/DeviceNet no:	43452
Profibus slot/index	170/101
EtherCAT and CANopen index (hex)	4d7c
Profinet IO index	19836
Fieldbus format	UInt
Modbus format	UInt

Timer 2 Delay [653]

653 Timer2Delay	
Default:	0:00:00, hr:min:sec
Range:	0:00:00–9:59:59

Communication information

Modbus Instance no/DeviceNet no:	43453 hours 43454 minutes 43455 seconds
Profibus slot/index	170/102, 170/103, 170/104
EtherCAT and CANopen index (hex)	4d7d, 4d7e, 4d7f
Profinet IO index	19837, 19838, 19839
Fieldbus format	UInt, 1=1 h/m/s
Modbus format	UInt, 1=1 h/m/s

Timer 2 T1 [654]

654 Timer 2 T1	
Default:	0:00:00, hr:min:sec
Range:	0:00:00–9:59:59

Communication information

Modbus Instance no/DeviceNet no:	43456 hours 43457 minutes 43458 seconds
Profibus slot/index	170/105, 170/106, 170/107
EtherCAT and CANopen index (hex)	4d80, 4d81, 4d82
Profinet IO index	19840, 19841, 19842
Fieldbus format	UInt, 1=1 h/m/s
Modbus format	UInt, 1=1 h/m/s

Timer 2 T2 [655]

655 Timer 2 T2	
Default:	0:00:00, hr:min:sec
Range:	0:00:00–9:59:59

Communication information

Modbus Instance no/DeviceNet no:	43459 hours 43460 minutes 43461 seconds
Profibus slot/index	170/108, 170/109, 170/110
EtherCAT and CANopen index (hex)	4d83, 4d84, 4d85
Profinet IO index	19843, 19844, 19845
Fieldbus format	UInt, 1=1 h/m/s
Modbus format	UInt, 1=1 h/m/s

Timer 2 Value [659]

Timer 2 Value shows actual value of the timer.

659 Timer2 Value	
Default:	0:00:00, hr:min:sec
Range:	0:00:00–9:59:59

Communication information

Modbus Instance no/DeviceNet no:	42924 hours 42925 minutes 42926 seconds
Profibus slot/index	168/83, 168/84, 168/84
EtherCAT and CANopen index (hex)	4b6c, 4b6d, 4b6f
Profinet IO index	19308, 19309, 19310
Fieldbus format	UInt, 1=1 h/m/s
Modbus format	UInt, 1=1 h/m/s

11.8.6 Counters [660]

Counter functions for counting pulses and signalling on digital output when counter reaches specified high and low limit levels.

The counter is counting up on positive flanks on the triggered signal, the counter is cleared as long as the Reset signal is active.

The counter can be automatically decremented with specified decrement time, if no new trigger signal has occurred within the decrement time.

The counter value is clamped to the high limit value and the digital output function (C1Q or C2Q) is active when counter value equals high limit value.

See Fig. 141 for more information of the counters.

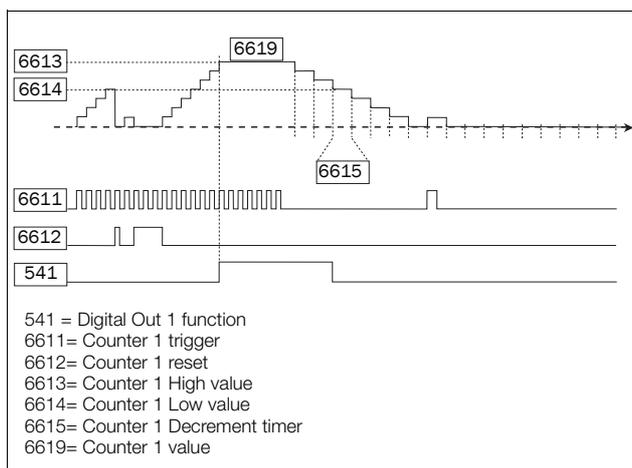


Fig. 141 Counters, operating principle.

Counter 1 [661]

Counter 1 parameter group.

Counter 1 Trigger [6611]

Selection of the digital output signal used as trigger signal for counter 1. Counter 1 is incremented by 1 on every positive flank on the trigger signal.

NOTE: Maximum counting frequency is 8 Hz.

6611 C1 Trig	
Default:	Off
Selection:	Same selections as "Digital Out 1 [541]".

Communication information

Modbus Instance no/DeviceNet no:	43571
Profibus slot/index	170/220
EtherCAT and CANopen index (hex)	4df3
Profinet IO index	19955
Fieldbus format	UInt
Modbus format	UInt

Counter 1 Reset [6612]

Selection of the digital signal used as reset signal for counter 1. Counter 1 is cleared to 0 and held to 0 as long as reset input is active (high).

NOTE: Reset input has top priority.

6612 C1 Reset	
Default:	Off
Selection:	Same selections as "Digital Out 1 [541]".

Communication information

Modbus Instance no/DeviceNet no:	43572
Profibus slot/index	170/221
EtherCAT and CANopen index (hex)	4df4
Profinet IO index	19956
Fieldbus format	UInt
Modbus format	UInt

Counter 1 High value [6613]

Sets counter 1 high limit value. Counter 1 value is clamped to selected high limit value and the counter 1 output (C1Q) is active (high) when the counter value equals the high value.

NOTE: Value 0 means that counter output is always true (high).

6613 C1 High Val	
Default:	0
Range:	0 - 10000

Communication information

Modbus Instance no/DeviceNet no:	43573
Profibus slot/index	170/222
EtherCAT and CANopen index (hex)	4df5
Profinet IO index	19957
Fieldbus format	Long, 1=1
Modbus format	Elnt

Counter 1 Low value [6614]

Sets counter 1 low limit value. Counter 1 output (C1Q) is de-activated (low) when the counter value is equal or smaller than the low value.

NOTE: Counter high value has priority so if high and low values are equal then the counter output is de-activated when the value is smaller than the low value.

6614 C1 Low Val	
Default:	0
Range:	0 - 10000

Communication information

Modbus Instance no/DeviceNet no:	43574
Profibus slot/index	170/223
EtherCAT and CANopen index (hex)	4df6
Profinet IO index	19958
Fieldbus format	Long, 1=1
Modbus format	Elnt

Counter 1 Decrement timer [6615]

Sets counter 1 automatic decrement timer value. The counter 1 is decremented by 1 after elapsed decrement time and if no new trigger has happened within the decrement time. The decrement timer is reset to 0 at every counter 1 trig pulse

6615 C1 DecTimer		
Default:		Off
Off	0	Off
1 - 3600	1 - 3600	1 - 3600 s

Communication information

Modbus Instance no/DeviceNet no:	43575
Profibus slot/index	170/224
EtherCAT and CANopen index (hex)	4df7
Profinet IO index	19959
Fieldbus format	Long, 1=1 s
Modbus format	Elnt

Counter 1 Value [6619]

Parameter shows the actual value of counter 1.

NOTE: Counter 1 value is common for all parameter sets.

NOTE: The value is volatile and lost at power down.

6619 C1 Value	
Default:	0
Range:	0 - 10000

Communication information

Modbus Instance no/DeviceNet no:	42927
Profibus slot/index	168/86
EtherCAT and CANopen index (hex)	4b6f
Profinet IO index	19311
Fieldbus format	UInt, 1=1
Modbus format	UInt

Counter 2 [662]

Refer to description for Counter 1 [661].

Counter 2 Trigger [6621]

Function is identical to Counter 1 Trigger [6611].

6621 C2 Trig	
Default:	Off
Selection:	Same selections as Digital Out 1 [541].

Communication information

Modbus Instance no/DeviceNet no:	43581
Profibus slot/index	170/230
EtherCAT and CANopen index (hex)	4dfd
Profinet IO index	19965
Fieldbus format	UInt
Modbus format	UInt

Counter 2 Reset [6622]

Function is identical to Counter 1 Reset [6612].

6622 C2 Reset	
Default:	Off
Selection:	Same selections as Digital Out 1 [541].

Communication information

Modbus Instance no/DeviceNet no:	43582
Profibus slot/index	170/231
EtherCAT and CANopen index (hex)	4dfe
Profinet IO index	19966
Fieldbus format	UInt
Modbus format	UInt

Counter 2 High value [6623]

Function is identical to Counter 1 High value [6613].

6623 C2 High Val	
Default:	0
Range:	0 - 10000

Communication information

Modbus Instance no/DeviceNet no:	43583
Profibus slot/index	170/232
EtherCAT and CANopen index (hex)	4dff
Profinet IO index	19967
Fieldbus format	Long, 1=1
Modbus format	Elnt

Counter 2 Low value [6624]

Function is identical to Counter 1 Low value [6614].

6624 C2 Low Val	
Default:	0
Range:	0 - 10000

Communication information

Modbus Instance no/DeviceNet no:	43584
Profibus slot/index	170/233
EtherCAT and CANopen index (hex)	4e00
Profinet IO index	19968
Fieldbus format	Long, 1=1
Modbus format	Elnt

Counter 2 Decrement timer [6625]

Function is identical to Counter 1 Decrement timer [6615].

6625 C2 DecTimer		
Default:		Off
Off	0	Off
1 - 3600	1 - 3600	1 - 3600 s

Communication information

Modbus Instance no/DeviceNet no:	43585
Profibus slot/index	170/234
EtherCAT and CANopen index (hex)	4e01
Profinet IO index	19969
Fieldbus format	Long, 1=1 s
Modbus format	Elnt

Counter 2 Value [6629]

Parameter shows the actual value of counter 2.

NOTE: Counter 2 value is common for all parameter sets.

NOTE: The value is volatile and lost at power down.

6629 C2 Value	
Default:	0
Range:	0 - 10000

Communication information

Modbus Instance no/DeviceNet no:	42928
Profibus slot/index	168/87
EtherCAT and CANopen index (hex)	4b70
Profinet IO index	19312
Fieldbus format	UInt, 1=1
Modbus format	UInt

11.8.7 Clock Logic [670]

Group 670 if only available if the drive is equipped with a 4-line type Control panel (incl. RTC).

There are two Clock functions, Clock 1 and Clock 2. Each clock with separate settings for Time on, Time Off, Date on, Date Off and Weekday. These clocks can be used for activating/deactivating desired functions via Relay, digital output or Virtual I/O (For example creating start and stop commands).

Clock 1 [671]

The time, date and weekday for clock 1 are set in these submenus.

671	Clock 1
------------	----------------

Clock 1 Time On [6711]

Time when the clock 1 output signal (CLK1) is activated.

6711	Clk1TimeOn
Default:	0:00:00 (hours:minutes:seconds)
Range:	0:00:00–23:59:59

Communication information

Modbus Instance no/DeviceNet no:	43600
Profibus slot/index	
EtherCAT and CANopen index (hex)	
Profinet IO index	
Fieldbus format	
Modbus format	

Clock 1 Time Off [6712]

Time when the clock 1 output signal (CLK1) is deactivated.

6712	Clk1TimeOff
Default:	0:00:00 (hours:minutes:seconds)
Range:	0:00:00–23:59:59

Communication information

Modbus Instance no/DeviceNet no:	43603
Profibus slot/index	
EtherCAT and CANopen index (hex)	
Profinet IO index	
Fieldbus format	
Modbus format	

Clock 1 Date On [6713]

Date when the clock 1 output signal (CLK1) is activated.

6713	Clk1DateOn
Default:	2017-01-01
Range:	YYYY-MM-DD (year-month-day)

Communication information

Modbus Instance no/DeviceNet no:	43606
Profibus slot/index	
EtherCAT and CANopen index (hex)	
Profinet IO index	
Fieldbus format	
Modbus format	

Clock 1 Date Off [6714]

Date when the clock output signal (CLK1) is deactivated. Note that if “Clk1DateOff” is set to an earlier date than “Clk1DateOn”, the result will be that the clock is not deactivated at the set date.

6714	Clk1DateOff
Default:	2017-01-01
Range:	YYYY-MM-DD

Communication information

Modbus Instance no/DeviceNet no:	43609
Profibus slot/index	
EtherCAT and CANopen index (hex)	
Profinet IO index	
Fieldbus format	
Modbus format	

Clock 1 Weekday [6715]

Weekdays when the clock function is active. Having entered the editing mode, select or unselect the desired weekdays with the cursor using the PREV and NEXT keys on the control panel. Confirm by pressing ENTER. Exit the editing mode and the activated weekdays will be viewed in the menu display. The deactivated weekdays are replaced by a dash mark “-” (e.g. “MTWTF--”).

6715	Clk1Weekday
Default:	MTWTFSS (all activated)
Range:	Monday, Tuesday, Wednesday, Thursday, Friday, Saturday, Sunday.

Communication information

Modbus Instance no/DeviceNet no:	43612
Profibus slot/index	
EtherCAT and CANopen index (hex)	
Profinet IO index	
Fieldbus format	
Modbus format	

NOTE: Please make sure that the correct time and date settings are done for the real time clock, menu group [930] "Clock".

Example 1:

The output CLK1 shall be active Mondays to Fridays on working hours, e.g. 08:00-17:00. This signal is used to start e.g. a fan with virtual I/O.

Menu	Text	Setting
6711	Clk1TimeOn	08:00
6712	Clk1TimeOff	17:00
6713	Clk1DateOn	2017-02-01 (date in the past)
6714	Clk1DateOff	2099-12-31 (Date in the future)
6715	Clk1Weekday	MTWTF--
561	VIO 1 Dest	Run FWD
562	VIO 1 Source	Clk1

Example 2:

The output CLK1 shall be active on weekends, all day.

Menu	Text	Setting
6711	Clk1TimeOn	0:00:00
6712	Clk1TimeOff	23:59:59
6713	Clk1DateOn	2017-02-01 (date in the past)
6714	Clk1DateOff	2099-12-31 (Date in the future)
6715	Clk1Weekday	-----SS
561	VIO 1 Dest	Run FWD
562	VIO 1 Source	Clk1

Clock 2 [672]

Refer to the description for Clock 1 [671].

Communication information

Modbus Instance no/DeviceNet no:	43615, 43618, 43621, 43624, 43627
Profibus slot/index	
EtherCAT and CANopen index (hex)	
Profinet IO index	
Fieldbus format	
Modbus format	

11.9 View Operation/Status [700]

Menu with parameters for viewing all actual operational data, such as speed, torque, power, etc.

11.9.1 Operation [710]

Process Value [711]

The process value is showing the process actual value, depending on selection done in chapter, Process Source [321].

711 Process Val	
Unit	Depends on selected Process source [321] and Process Unit [322].
Resolution	Speed: 1 rpm, 4 digits Other units: 3 digits

Communication information

Modbus Instance no/DeviceNet no:	31001
Profibus slot/index	121/145
EtherCAT and CANopen index (hex)	23e9
Profinet IO index	1001
Fieldbus format	Long, 1=1rpm, 1%, 1°C or 0.001 if Process Value/Process Ref using a [322] unit
Modbus format	Elnt

Speed [712]

Displays the actual shaft speed.

712 Speed	
Unit:	rpm
Resolution:	1 rpm, 4 digits

Communication information

Modbus Instance no/DeviceNet no:	31002
Profibus slot/index	121/146
EtherCAT and CANopen index (hex)	23ea
Profinet IO index	1002
Fieldbus format	Int, 1=1 rpm
Modbus format	Int, 1=1 rpm

Torque [713]

Displays the actual shaft torque.

713 Torque	
Unit:	%, Nm
Resolution:	1 %, 0.1 Nm

Communication information

Modbus Instance no/DeviceNet no:	31003 Nm 31004 %
Profibus slot/index	121/147 121/148
EtherCAT and CANopen index (hex)	23eb Nm 23ec %
Profinet IO index	1003 Nm 1004 %
Fieldbus format	Long, 1=0.1 Nm Long, 1=1 %
Modbus format	Elnt

Shaft power [714]

Displays the actual shaft power. Negative sign is used when the shaft is generating mechanical power to the motor.

714 Shaft Power	
Unit:	W
Resolution:	1W

Communication information

Modbus Instance no/DeviceNet no:	31005
Profibus slot/index	121/149
EtherCAT and CANopen index (hex)	23ed
Profinet IO index	1005
Fieldbus format	Long, 1=1W
Modbus format	Elnt

Electrical Power [715]

Displays the actual electrical output power. Negative sign is used when the motor is generating electrical power to the drive unit.

715 El Power	
Unit:	kW
Resolution:	1 W

Communication information

Modbus Instance no/DeviceNet no:	31006
Profibus slot/index	121/150
EtherCAT and CANopen index (hex)	23ee
Profinet IO index	1006
Fieldbus format	Long, 1=1W
Modbus format	Elnt

Current [716]

Displays the actual output current.

716 Current	
Unit:	A
Resolution:	0.1 A

Communication information

Modbus Instance no/DeviceNet no:	31007
Profibus slot/index	121/151
EtherCAT and CANopen index (hex)	23ef
Profinet IO index	1007
Fieldbus format	Long, 1=0.1 A
Modbus format	Elnt

Output Voltage [717]

Displays the actual output voltage.

717 Output Volt	
Unit:	V
Resolution:	0.1 V

Communication information

Modbus Instance no/DeviceNet no:	31008
Profibus slot/index	121/152
EtherCAT and CANopen index (hex)	23f0
Profinet IO index	1008
Fieldbus format	Long, 1=0.1 V
Modbus format	Elnt

Frequency [718]

Displays the actual output frequency.

718 Frequency	
Unit:	Hz
Resolution:	0.1 Hz

Communication information

Modbus Instance no/DeviceNet no:	31009
Profibus slot/index	121/153
EtherCAT and CANopen index (hex)	23f1
Profinet IO index	1009
Fieldbus format	Long, 1=0.1 Hz
Modbus format	Elnt

DC Link Voltage [719]

Displays the actual DC link voltage.

719 DC Voltage	
Unit:	V
Resolution:	0.1 V

Communication information

Modbus Instance no/DeviceNet no:	31010
Profibus slot/index	121/154
EtherCAT and CANopen index (hex)	23f2
Profinet IO index	1010
Fieldbus format	Long, 1=0.1 V
Modbus format	Elnt

Heatsink Temperature [71A]

Displays the actual heatsink temperature, measured. The signal is generated by a sensor in the IGBT module.

71A Heatsink Tmp	
Unit:	°C
Resolution:	0.1°C

Communication information

Modbus Instance no/DeviceNet no:	31011
Profibus slot/index	121/155
EtherCAT and CANopen index (hex)	23f3
Profinet IO index	1011
Fieldbus format	Long, 1=0.1 °C
Modbus format	Elnt

PT100_1_2_3 Temp [71B]

Displays the actual PT100 temperature, for PT100 board 1.

71B PT100 1,2,3	
Unit:	°C
Resolution:	1°C

Communication information

Modbus Instance no/DeviceNet no:	31012, 31013, 31014
Profibus slot/index	121/156 121/157 121/158
EtherCAT and CANopen index (hex)	23f4, 23f5, 23f6
Profinet IO index	1012, 1013, 1014
Fieldbus format	Long, 1=1 °C
Modbus format	Elnt

PT100_4_5_6 Temp[71C]

Displays the actual PT100 temperature, for PT100 board 2.

71C PT100 4,5,6	
Unit:	°C
Resolution:	1°C

Communication information

Modbus Instance no/DeviceNet no:	31097, 31098, 31099
Profibus slot/index	121/241 121/242 121/243
EtherCAT and CANopen index (hex)	2449, 244a, 244b
Profinet IO index	1097, 1098, 1099
Fieldbus format	Long, 1=1 °C
Modbus format	Elnt

11.9.2 Status [720]

VSD Status [721]

Indicates the overall status of the AC drive.

721 VSD Status Stp 1/222/333/44

Fig. 142 AC drive status

Display position	Function	Status value
1	Parameter Set	A,B,C,D
222	Source of reference value	-Rem (remote) -Key (keyboard) -Com (Serial comm.) -Opt (option)
333	Source of Run/ Stop command	-Rem (remote) -Key (keyboard) -Com (Serial comm.) -Opt (option)
44	Limit functions	- - - -No limit active -VL (Voltage Limit) -SL (Speed Limit) -CL (Current Limit) -TL (Torque Limit)

Example: "A/Key/Rem/TL"

This means:

- A: Parameter Set A is active.
 Key: Reference value comes from the keyboard (CP).
 Rem: Run/Stop commands come from terminals 1-22.
 TL: Torque Limit active.

Communication information

Modbus Instance no/DeviceNet no:	31015
Profibus slot/index	121/159
EtherCAT and CANopen index (hex)	23f7
Profinet IO index	1015
Fieldbus format	UInt
Modbus format	UInt

Description of communication format

Integer values and bits used

Bit	Integer representation
1 - 0	Active Parameter set, where 0=A, 1=B, 2=C, 3=D
4 - 2	Source of Reference control value, where 0=Rem, 1=Key, 2=Com, 3=Option
7 - 5	Source of Run/Stop/Reset command, where 0=Rem, 1=Key, 2=Com, 3=Option
13 - 8	Active limit functions, where 0=No limit, 1=VL, 2=SL, 3=CL, 4=TL
14	Inverter is in warning (A warning condition is active)
15	Inverter is tripped (A Trip condition is active)

Example:

Previous example "A/Key/Rem/TL"
is interpreted "0/1/0/4"

In bit format this is presented as

Bit	Interpretation	Integer representation	
0 LSB	0	A(0)	Parameter set
1	0		
2	1	Key (1)	Source of control
3	0		
4	0		
5	0		
6	0	Rem (0)	Source of command
7	0		
8	0		
9	0	TL (4)	Limit functions
10	1		
11	0		
12	0		
13	0		
14	0		Warning condition
15 MSB	0		Trip condition

In the example above it is assumed that we have no trip or warning condition (the alarm LED on the control panel is off).

Warning [722]

Display the actual or last warning condition. A warning occurs if the AC drive is close to a trip condition but still in operation. During a warning condition the red trip LED will start to blink as long as the warning is active.

722	Warnings
Stp	warn.msg

The active warning message is displayed in menu [722]. If no warning is active the message “No Error” is displayed.

The following warnings are possible:

Communication integer value	Warning message
0	No Error
1	Motor l ² t
2	PTC
3	Motor lost
4	Locked rotor
5	Ext trip
6	Mon MaxAlarm
7	Mon MinAlarm
8	Comm error
9	PT100
10	Crane Derivat
11	Pump
12	Ext Mot Temp
13	LC Level
14	Brake
15	Option
16	Over temp
17	Over curr F
18	Over volt D
19	Over volt G
20	Over volt
21	Over speed
22	Under voltage
23	Power fault
24	Desat
25	DClintk error
26	Int error
27	Ovolt m cut
28	Over voltage

Communication integer value	Warning message
29	Not used
30	Crane Comm
31	Encoder

Communication information

Modbus Instance no/DeviceNet no:	31016
Profibus slot/index	121/160
EtherCAT and CANopen index (hex)	23f8
Profinet IO index	1016
Fieldbus format	UInt
Modbus format	UInt

See also the Chapter 12, page 217.

Digital Input Status [723]

Indicates the status of the digital inputs. See Fig. 143.

- 1 DigIn 1
- 2 DigIn 2
- 3 DigIn 3
- 4 DigIn 4
- 5 DigIn 5
- 6 DigIn 6
- 7 DigIn 7
- 8 DigIn 8

The positions one to eight (read from left to right) indicate the status of the associated input:

- 1 High
- 0 Low

The example in Fig. 143 indicates that DigIn 1, DigIn 3 and DigIn 6 are active at this moment.

723 DigIn Status
Stp 1010 0100

Fig. 143 Digital input status example

Communication information

Modbus Instance no/DeviceNet no:	31017
Profibus slot/index	121/161
EtherCAT and CANopen index (hex)	23f9
Profinet IO index	1017
Fieldbus format	UInt,
Modbus format	bit 0=DigIn1, bit 7=DigIn8

Digital Output Status [724]

Indicates the status of the digital outputs and relays. See Fig. 144.

RE indicate the status of the relays on position:

- 1 Relay1
- 2 Relay2
- 3 Relay3

DO indicate the status of the digital outputs on position:

- 1 DigOut1
- 2 DigOut2

The status of the associated output is shown.

- 1 High
- 0 Low

The example in Fig. 144 indicates that DigOut1 is active and Digital Out 2 is not active. Relay 1 is active, relay 2 and 3 are not active.

724 DigOutStatus
Stp RE 100 DO 10

Fig. 144 Digital output status example

Communication information

Modbus Instance no/DeviceNet no:	31018
Profibus slot/index	121/162
EtherCAT and CANopen index (hex)	23fa
Profinet IO index	1018
Fieldbus format	UInt,
Modbus format	bit 0=DigOut1, bit 1=DigOut2 bit 8=Relay1 bit 9=Relay2 bit 10=Relay3

Analogue Input Status [725]

Indicates the status of the analogue inputs 1 and 2.

725 AnIn 1 2
Stp -100% 65%

Fig. 145 Analogue input status

Communication information

Modbus Instance no/DeviceNet no:	31019, 31020
Profibus slot/index	121/163, 121/164
EtherCAT and CANopen index (hex)	23fb, 23fc
Profinet IO index	1019, 1020
Fieldbus format	Long, 1=1%
Modbus format	EInt

The first row indicates the analogue inputs.

- 1 AnIn 1
- 2 AnIn 2

Reading downwards from the first row to the second row the status of the belonging input is shown in %:

- 100% AnIn1 has a negative 100% input value
- 65% AnIn2 has a 65% input value

So the example in Fig. 145 indicates that both the Analogue inputs are active.

NOTE: The shown percentages are absolute values based on the full range/scale of the in- or output; so related to either 0–10 V or 0–20 mA.

Analogue Input Status [726]

Indicates the status of the analogue inputs 3 and 4.

726 AnIn 3 4
Stp -100% 65%

Fig. 146 Analogue input status

Communication information

Modbus Instance no/DeviceNet no:	31021, 31022
Profibus slot/index	121/165, 121/166
EtherCAT and CANopen index (hex)	23fd, 23fe
Profinet IO index	1021, 1022
Fieldbus format	Long, 1=1%
Modbus format	EInt

Analogue Output Status [727]

Indicates the status of the analogue outputs. Fig. 147. E.g. if 4-20 mA output is used, the value 20% equals to 4 mA.

727 AnOut 1	2
Stp	-100% 65%

Fig. 147 Analogue output status

Communication information

Modbus Instance no/DeviceNet no:	31023, 31024
Profibus slot/index	121/167, 121/168
EtherCAT and CANopen index (hex)	23ff, 2400
Profinet IO index	1023, 1024
Fieldbus format	Long, 1=1%
Modbus format	Elnt

The first row indicates the Analogue outputs.

- 1 AnOut 1
- 2 AnOut 2

Reading downwards from the first row to the second row the status of the belonging output is shown in %:

-100%AnOut1 has a negative 100% output value
65%AnOut2 has a 65% output value

The example in Fig. 147 indicates that both the Analogue outputs are active.

NOTE: The shown percentages are absolute values based on the full range/scale of the in- or output; so related to either 0–10 V or 0–20 mA.

I/O board Status [728] - [72A]

Indicates the status for the additional I/O on option boards 1 (B1), 2 (B2) and 3 (B3).

728 IO B1
Stp RE 000 DI100

Communication information

Modbus Instance no/DeviceNet no:	31025 - 31027
Profibus slot/index	121/170 - 172
EtherCAT and CANopen index (hex)	2401 - 2403
Profinet IO index	1025 - 1027
Fieldbus format	UInt,
Modbus format	bit 0=DigIn1 bit 1=DigIn2 bit 2=DigIn3 bit 8=Relay1 bit 9=Relay2 bit 10=Relay3

Area D Stat[72B]

These menus are not visible in the control panel display. Only used in EmoSoftCom PC-tool (optional) and can be read via fieldbus or serial communication.

Area D LSB [72B1]

Status bits 0 to 15.

see Chapter 10.2.1 page 75

Communication information

Modbus Instance no/DeviceNet no:	30180
Profibus slot/index	118/89
EtherCAT and CANopen index (hex)	20b4
Profinet IO index	180
Fieldbus format	UInt
Modbus format	UInt

Area D MSB [72B2]

Status bits 16 and up.

see Chapter 10.2.1 page 75

Communication information

Modbus Instance no/DeviceNet no:	30182
Profibus slot/index	118/91
EtherCAT and CANopen index (hex)	20b6
Profinet IO index	182
Fieldbus format	UInt
Modbus format	UInt

VIO Status[72C]

Shows the values of the 8 Virtual IO's in menu[560]

72C VIO Status
Stp 00000000

Communication information

Modbus Instance no/DeviceNet no:	30181
Profibus slot/index	118/90
EtherCAT and CANopen index (hex)	20b5
Profinet IO index	181
Fieldbus format	UInt
Modbus format	UInt

11.9.3 Stored values [730]

The shown values are the actual values built up over time. Values are stored at power down and updated again at power up.

Run Time [731]

Displays the total time that the AC drive has been in the Run Mode.

731 Run Time	
Unit:	h: mm:ss (hours: minutes: seconds)
Range:	00: 00: 00–262143: 59: 59

Communication information

Modbus Instance no/DeviceNet no:	31028:31029:31030 (hr:min:sec)
Profibus slot/index	121/172:121/173: 121/174
EtherCAT and CANopen index (hex)	2404:2405:2406
Profinet IO index	1028:1029:1030
Fieldbus format	Long, 1=1h:m:s
Modbus format	Eint

Reset Run Time [7311]

Reset the run time counter. The stored information will be erased and a new registration period will start.

7311 Reset RunTm		
Default:	No	
No	0	
Yes	1	

Communication information

Modbus Instance no/DeviceNet no:	7
Profibus slot/index	0/6
EtherCAT and CANopen index (hex)	2007
Profinet IO index	7
Fieldbus format	UInt
Modbus format	UInt

NOTE: After reset the setting automatically reverts to "No".

Mains time [732]

Displays the total time that the AC drive has been connected to the mains supply. This timer cannot be reset.

732 Mains Time	
Unit:	h: mm:ss (hours: minutes: seconds)
Range:	00: 00: 00–262143: 59: 59

Communication information

Modbus Instance no/DeviceNet no:	31031:31032:31033 (hr:min:sec)
Profibus slot/index	121/175:121/176: 121/177
EtherCAT and CANopen index (hex)	2407 : 2408 : 2409
Profinet IO index	1031:1032:1033
Fieldbus format	Long, 1=1h:m:s
Modbus format	Eint

Energy [733]

Displays the total energy consumption since the last energy reset [7331] took place.

733 Energy	
Unit:	Wh (shows Wh, kWh, MWh or GWh)
Range:	0.0–1GWh, Counter will restart at 0 after 1GWh

Communication information

Modbus Instance no/DeviceNet no:	31034
Profibus slot/index	121/178
EtherCAT and CANopen index (hex)	240a
Profinet IO index	1034
Fieldbus format	Long, 1=1 Wh
Modbus format	Eint

Reset Energy [7331]

Resets the energy counter. The stored information will be erased and a new registration period will start.

7331 Rst Energy	
Default:	No
Selection:	No, Yes

Communication information

Modbus Instance no/DeviceNet no:	6
Profibus slot/index	0/5
EtherCAT and CANopen index (hex)	2006
Profinet IO index	6
Fieldbus format	UInt
Modbus format	UInt

NOTE: After reset the setting automatically goes back to "No".

11.10 View Trip Log [800]

Main menu with parameters for viewing all the logged trip data. In total the AC drive saves the last 9 trips in the trip memory. The trip memory refreshes on the FIFO principle (First In, First Out). Every trip in the memory is logged on the time of the “Run Time [731]” counter. At every trip, the actual values of several parameter are stored and available for troubleshooting.

11.10.1 With four line PPU and real time clock

Every trip in the memory is logged on actual time and date. At every trip, the actual values of several parameter are stored and available for troubleshooting.

11.10.2 Trip Message log [810]

Display the cause of the trip and what time that it occurred. When a trip occurs the status menus are copied to the trip message log. There are nine trip message logs [810]–[890]. When the tenth trip occurs the oldest trip will disappear.

After reset of occurred trip, the trip message will be removed and menu [100] will be indicated.

8x0 Trip message	
Unit:	h: m (hours: minutes)
Range:	0h: 0m–65355h: 59m

810 Ext Trip	
--------------	--

For fieldbus integer value of trip message, see message table for warnings, [722].

NOTE: Bits 0–5 used for trip message value. Bits 6–15 for internal use.

Communication information

Modbus Instance no/DeviceNet no:	31101
Profibus slot/index	121/245
EtherCAT and CANopen index (hex)	244d
Profinet IO index	1101
Fieldbus format	UInt, 1=1
Modbus format	UInt

Trip message [811]-[81Q]

The information from the status menus are copied to the trip message log when a trip occurs.

Trip menu	Copied from	Description
811	711	Process Value
812	712	Speed
813	712	Torque
814	714	Shaft Power
815	715	Electrical Power
816	716	Current
817	717	Output voltage
818	718	Frequency
819	719	DC Link voltage
81A	71A	Heatsink Temperature
81B	71B	PT100_1, 2, 3
81C	721	AC drive Status
81D	723	Digital input status
81E	724	Digital output status
81F	725	Analogue input status 1-2
81G	726	Analogue input status 3-4
81H	727	Analogue output status 1-2
81I	728	I/O status option board 1
81J	729	I/O status option board 2
81K	72A	I/O status option board 3
81L	731	Run Time
81M	732	Mains Time
81N	733	Energy
81O	310	Process reference
81P	72C	VIO Status
81Q	71C	PT100_4, 5, 6

Communication information

Modbus Instance no/DeviceNet no:	31102 - 31135
Profibus slot/index	121/246 - 254, 122/0 - 24
EtherCAT and CANopen index (hex)	244e - 246f
Profinet IO index	1102 - 1135
Fieldbus format	Depends on parameter, see respective parameter.
Modbus format	Depends on parameter, see respective parameter.

Example:

Fig. 148 shows the third trip memory menu [830]: Over temperature trip occurred after 1396 hours and 13 minutes in Run time.

830 Over temp
Stp 1396h : 13m

Fig. 148 Trip 3

11.10.3 Trip Messages [82P] - [89P]

Same information as for menu [810].

Communication information

Modbus Instance no/ DeviceNet no:	31151-31185	Trip log list
	31201-31235	2
	31251-31285	3
	31301-31335	4
	31351-31385	5
	31401-31435	6
	31451-31485	7
	31501-31535	8
	31551-31585	9
Profibus slot/index	122/40-122/74	Trip log list
	122/90-122/124	2
	122/140-122/174	3
	122/190-122/224	4
	122/240-123/18	5
	123/35 - 123/68	6
	123/85-123/118	7
	123/135-123/168	8
	123/195-123/228	9
EtherCAT and CANopen index (hex)	247e - 24b0	Trip log list
	24b1 - 24e2	2
	24e3 - 2514	3
	2515 - 2546	4
	2547 - 2578	5
	2579 - 25aa	6
	25ab - 25dc	7
	25dd - 260e	8
	260f - 2640	9
Profinet IO index	1151 - 1185	Trip log list
	1201 - 1235	2
	1251 - 1285	3
	1301 - 1335	4
	1351 - 1385	5
	1401 - 1435	6
	1451 - 1485	7
	1501 - 1535	8
	1551 - 1585	9
Fieldbus format	See Trip 811 - 810	
Modbus format		

All nine alarm lists contain the same type of data. For example DeviceNet parameter 31101 in alarm list 1 contains the same data information as 31151 in alarm list 2.

11.10.4 Reset Trip Log [8A0]

Resets the content of the 9 trip memories.

8A0 Reset Trip	
Default:	No
No	0
Yes	1

Communication information

Modbus Instance no/DeviceNet no:	8
Profibus slot/index	0/7
EtherCAT and CANopen index (hex)	2008
Profinet IO index	8
Fieldbus format	UInt
Modbus format	UInt

NOTE: After the reset the setting goes automatically back to "NO". The message "OK" is displayed for 2 sec.

11.11 System Data [900]

Main menu for viewing all the AC drive system data.

11.11.1 VSD Data [920]

VSD Type [921]

Shows the AC drive type according to the type number.

The options are indicated on the type plate of the AC drive.

NOTE: If the control board is not configured, then type shown is VFX48-###-##.

921	VFX2.0
Stp	VFX48-046-5X

Example of type

Communication information

Modbus Instance no/DeviceNet no:	31037
Profibus slot/index	121/181
EtherCAT and CANopen index (hex)	240d
Profinet IO index	1037
Fieldbus format	UInt, 1=1
Modbus format	UInt

Examples:

VFX48-046-5XAC drive-series

- suited for 380-480 volt mains supply, and a
- rated output current of 46 A.
- IP Class = IP54 and IP55 (2X = IP20/21)

Software [922]

Shows the software version number of the AC drive.

Fig. 149 gives an example of the version number.

922 Software
Stp V 4.32 -

Fig. 149 Example of software version

V 4.32 = Software version

- 03.07 = option version, is only visible and valid for special software, type OEM adapted software.
- 03 = (major) special software variant number
- 07 = (minor) revision of this special software

Communication information

Modbus Instance no/DeviceNet no:	31038 software version 31039 option version
Profibus slot/index	121/182-183
EtherCAT and CANopen index (hex)	240e, 240f
Profinet IO index	1038, 1039
Fieldbus format	UInt
Modbus format	UInt

Table 41 Information for Modbus and Profibus number, software version

Bit	Example	Description
7-0	32	minor
13-8	4	major
15-14		release 00: V, release version 01: P, pre-release version 10: β, Beta version 11: α, Alpha version

Table 42 Information for Modbus and Profibus number, option version

Bit	Example	Description
7-0	07	Minor option version
15-8	03	Major option version

NOTE: It is important that the software version displayed in menu [922] is the same software version number as the software version number written on the title page of this instruction manual. If not, the functionality as described in this manual may differ from the functionality of the AC drive.

Build Info [921]

Software version created, Date and time.

	9221 Build Info
	Stp
Default:	YY:MM:DD:HH:MM:SS

Build ID [922]

Software identification code.

	9222 Build ID
	Stp 0E1B7F9E
Example:	0E1B7F9E

Unit name [923]

Option to enter a name of the unit for service use or customer identity. The function enables the user to define a name with max 12 characters. Use the Prev and Next key to move the cursor to the required position. Then use the + and - keys to scroll in the character list. Confirm the character by moving the cursor to the next position by pressing the Next key. See section User-defined Unit [323].

Example

Create user name USER 15.

1. When in the menu [923] press Next to move the cursor to the right most position.
2. Press the + key until the character U is displayed.
3. Press Next.
4. Then press the + key until S is displayed and confirm with Next.
5. Repeat until you have entered USER15.

923	USER 15
Default:	No characters shown

Communication information

Modbus Instance no/DeviceNet no:	42301-42312
Profibus slot/index	165/225-236
EtherCAT and CANopen index (hex)	48fd - 4908
Profinet IO index	18685 - 18696
Fieldbus format	UInt
Modbus format	UInt

When sending a unit name you send one character at a time starting at the right most position.

11.12 Bluetooth (Optional) device ID number

To connect to the mobile App “EmoPPU” (Android & IOS Appstores) you need a 4 line PPU unit with Bluetooth communication (optional, see chapter Option). For establishing communication between PPU and App please use the unique Bluetooth ID number in AC drive menu “[924] Bluetooth ID”.

Bluetooth ID [924]

Unique ID number for connecting to “EmoPPU” app. .

924	Bluetooth ID
Default:	NA

Communication information

Modbus Instance no/DeviceNet no:	42620
Profibus slot/index	167/34
EtherCAT and CANopen index (hex)	4a3c
Profinet IO index	19004
Fieldbus format	UInt. 1=1
Modbus format	UInt

11.12.1 Real Time clock

In the 4 line Control panel (PPU) there is a built-in Real time clock. This means that actual date and time will be shown at e.g. a trip condition. There is a built-in capacitor to be able to keep the clock running if the power disappear. In case of loss of power, the backup time for the Real time clock function is at least 60 days.

Actual date and time will be set from factory. Date and time is shown and can be set in following menus.

Clock [930]

This menu group displays actual time and date, read only. Time and date are factory set to CET (Central European mean time). Adjust if required in following sub-menus.

930	1240rpm
Clock	
2017-01-23	12:34.40
Run	Key/Key

Time [931]

Actual time, displayed as HH:MM:SS. Adjustable setting.

931	Time
Default:	00:00:00

Communication information

Modbus Instance no/DeviceNet no:	42601, 42602, 42603 (h,m,s)
Profibus slot/index	167/15, 167/16, 167/17
EtherCAT and CANopen index (hex)	4a29, 4a2a, 4a2b
Profinet IO index	18985, 18986, 18987
Fieldbus format	Long, 1=1 h/m/s
Modbus format	Elnt

Date [932]

Actual date, displayed as YYYY-MM-DD. Adjustable setting.

932 Date	
Default:	2013-01-01

Communication information

Modbus Instance no/DeviceNet no:	42604, 42605, 42606 (Y,M,D)
Profibus slot/index	167/18,167/19, 167/20
EtherCAT and CANopen index (hex)	4a2c, 4a2d, 4a2e
Profinet IO index	18988, 18989, 18990
Fieldbus format	Long, 1=1 Y/M/D
Modbus format	EInt

Weekday [933]

Display of actual weekday, read only.

933 Weekday		
Default:		Monday
Monday	0	
Tuesday	1	
Wednesday	2	
Thursday	3	
Friday	4	
Saturday	5	
Sunday	6	

Communication information

Modbus Instance no/DeviceNet no:	42607
Profibus slot/index	167/21
EtherCAT and CANopen index (hex)	4a2f
Profinet IO index	18991
Fieldbus format	Long
Modbus format	EInt

12. Troubleshooting, Diagnoses and Maintenance

12.1 Trips, warnings and limits

In order to protect the AC drive the principal operating variables are continuously monitored by the system. If one of these variables exceeds the safety limit an error/warning message is displayed. In order to avoid any possibly dangerous situations, the inverter sets itself into a stop Mode called Trip and the cause of the trip is shown in the display.

Trips will always stop the AC drive. Trips can be divided into normal and soft trips, depending on the setup Trip Type, see menu “[250] Autoreset”. Normal trips are default. For normal trips the AC drive stops immediately, i.e. the motor coasts naturally to a standstill. For soft trips the AC drive stops by ramping down the speed, i.e. the motor decelerates to a standstill.

“Normal Trip”

- The AC drive stops immediately, the motor coasts to a standstill.
- The Trip relay or output is active (if selected).
- The Trip LED is on.
- The accompanying trip message is displayed.
- The “TRP” status indication is displayed (area D of the display).
- After reset command, the trip message will disappear and menu [100] will be indicated.

“Soft Trip”

- the AC drive stops by decelerating to a standstill.

During the deceleration.

- The accompanying trip message is displayed, including an additional soft trip indicator “S” before the trip time.
- The Trip LED is flashing.
- The Warning relay or output is active (if selected).

After standstill is reached.

- The Trip LED is on.
- The Trip relay or output is active (if selected).
- The “TRP” status indication is displayed (area D of the display).
- After reset command, the trip message will disappear and menu [100] will be indicated.

Apart from the TRIP indicators there are two more indicators to show that the inverter is in an “abnormal” situation.

“Warning”

- The inverter is close to a trip limit.
- The Warning relay or output is active (if selected).
- The Trip LED is flashing.
- The accompanying warning message is displayed in window “[722] Warning”.
- One of the warning indications is displayed (area F of the display).

“Limits”

- The inverter is limiting torque and/or frequency to avoid a trip.
- The Limit relay or output is active (if selected).
- The Trip LED is flashing.
- One of the Limit status indications is displayed (area D of the display).

Table 43 List of trips and warnings

Trip/Warning messages	Selections	Trip (Normal/Soft)	Warning indicators (Area D)
Motor I ² t	Trip/Off/Limit	Normal/Soft	I ² t
PTC	Trip/Off	Normal/Soft	
Motor PTC	On	Normal	
PT100	Trip/Off	Normal/Soft	
Motor lost	Trip/Off	Normal	
Locked rotor	Trip/Off	Normal	
Ext trip	Via DigIn	Normal/Soft	
Ext Mot Temp	Via DigIn	Normal/Soft	
Mon MaxAlarm	Trip/Off/Warn	Normal/Soft	
Mon MinAlarm	Trip/Off/Warn	Normal/Soft	
Comm error	Trip/Off/Warn	Normal/Soft	
CRIO Dev	Via Option	Normal	
CRIO Comm	Via Option	Normal	
Encoder	Trip/Off	Normal	
Pump	Via Option	Normal	
Over temp	On	Normal	OT
Over curr F	On	Normal	
Over volt D	On	Normal	
Over volt G	On	Normal	
Over volt	On	Normal	
Over speed	On	Normal	
Under voltage	On	Normal	LV
LC Level	Trip/Off/Warn Via DigIn	Normal/Soft	LCL
Desat ### *	On	Normal	
DClint error	On	Normal	
Power Fault PF #### *	On	Normal	
Ovoltage cut	On	Normal	
Over voltage	Warning		VL
Safe stop	Warning		SST
Brake	Trip/Off/Warn	Normal	
OPTION	On	Normal	
Internal error		Normal	

*) Refer to table Table 44 regarding which Desat or Power Fault is triggered.

12.2 Trip conditions, causes and remedial action

The table later on in this section must be seen as a basic aid to find the cause of a system failure and to how to solve any problems that arise. An AC drive is mostly just a small part of a complete AC drive system. Sometimes it is difficult to determine the cause of the failure, although the AC drive gives a certain trip message it is not always easy to find the right cause of the failure. Good knowledge of the complete drive system is therefore necessary. Contact your supplier if you have any questions.

The AC drive is designed in such a way that it tries to avoid trips by limiting torque, overvolt etc.

Failures occurring during commissioning or shortly after commissioning are most likely to be caused by incorrect settings or even bad connections.

Failures or problems occurring after a reasonable period of failure-free operation can be caused by changes in the system or in its environment (e.g. wear).

Failures that occur regularly for no obvious reasons are generally caused by Electro Magnetic Interference. Be sure that the installation fulfils the demands for installation stipulated in the EMC directives. See chapter, EMC and standards.

Sometimes the so-called “Trial and error” method is a quicker way to determine the cause of the failure. This can be done at any level, from changing settings and functions to disconnecting single control cables or replacing entire drives.

The Trip Log can be useful for determining whether certain trips occur at certain moments. The Trip Log also records the time of the trip in relation to the run time counter.



WARNING!

If it is necessary to open the AC drive or any part of the system (motor cable housing, conduits, electrical panels, cabinets, etc.) to inspect or take measurements as suggested in this instruction manual, it is absolutely necessary to read and follow the safety instructions in the manual.

12.2.1 Technically qualified personnel

Installation, commissioning, demounting, making measurements, etc., of or at the AC drive may only be carried out by personnel technically qualified for the task.

12.2.2 Opening the AC drive



WARNING!
Always switch the mains voltage off if it is necessary to open the AC drive and wait at least 7 minutes to allow the capacitors to discharge.



WARNING!
In case of malfunctioning always check the DC-link voltage, or wait one hour after the mains voltage has been switched off, before dismantling the AC drive for repair.

The connections for the control signals and the switches are isolated from the mains voltage. Always take adequate precautions before opening the AC drive.

12.2.3 Precautions to take with a connected motor

If work must be carried out on a connected motor or on the driven machine, the mains voltage must always first be disconnected from the AC drive. Wait at least 7 minutes before continuing.

12.2.4 Autoreset Trip

If the maximum number of Trips during Autoreset has been reached, the trip message hour counter is marked with an "A".

```
830 OVERVOLT G
Trp A 345:45:12
```

Fig. 150 Autoreset trip

Fig. 150 shows the 3rd trip memory menu [830]: Overvoltage G trip after the maximum Autoreset attempts took place after 345 hours, 45 minutes and 12 seconds of run time.

Table 44 Trip condition, their possible causes and remedial action

Trip condition	Possible Cause	Remedy	Size**
Motor I ² t "I ² t"	I ² t value is exceeded. - Overload on the motor according to the programmed I ² t settings.	- Check on mechanical overload on the motor or the machinery (bearings, gearboxes, chains, belts, etc.) - Change the Motor I ² t Current setting in menu group [230]	
PTC	Motor thermistor (PTC) exceeds maximum level. NOTE: Only valid if option board PTC/PT100 is used.	- Check on mechanical overload on the motor or the machinery (bearings, gearboxes, chains, belts, etc.) - Check the motor cooling system. - Self-cooled motor at low speed, too high load. - Set PTC, menu [234] to OFF	
Motor PTC	Motor thermistor (PTC) exceeds maximum level. NOTE: Only valid if [237] is enabled.	- Check on mechanical overload on the motor or the machinery (bearings, gearboxes, chains, belts, etc.) - Check the motor cooling system. - Self-cooled motor at low speed, too high load. - Set PTC, menu [237] to OFF	002 - 105
PT100	Motor PT100 elements exceeds maximum level. NOTE: Only valid if option board PTC/PT100 is used.	- Check on mechanical overload on the motor or the machinery (bearings, gearboxes, chains, belts, etc.) - Check the motor cooling system. - Self-cooled motor at low speed, too high load. - Set PT100 to OFF, menu [234]	
Motor lost	Phase loss or too great imbalance on the motor phases	- Check the motor voltage on all phases. - Check for loose or poor motor cable connections - If all connections are OK, contact your supplier - Set motor lost alarm to OFF.	
Locked rotor	Torque limit at motor standstill: - Mechanical blocking of the rotor.	- Check for mechanical problems at the motor or the machinery connected to the motor - Set locked rotor alarm to OFF.	
Ext trip	External input (DigIn 1-8) active: - active low function on the input.	- Check the equipment that initiates the external input - Check the programming of the digital inputs DigIn 1-8	
Ext Mot Temp	External input (DigIn 1-8) active: - active low function on the input.	- Check the equipment that initiates the external input - Check the programming of the digital inputs DigIn 1-8	
Internal error	Internal alarm	Contact service	
Mon MaxAlarm	Max alarm level (overload) has been reached.	-Check the load condition of the machine -Check the monitor setting in section 11.6.1, page 159.	
Mon MinAlarm	Min alarm level (underload) has been reached.	-Check the load condition of the machine -Check the monitor setting in section 11.6.1, page 159.	

Table 44 Trip condition, their possible causes and remedial action

Trip condition	Possible Cause	Remedy	Size**
Comm error	Error on serial communication (option)	<ul style="list-style-type: none"> - Check cables and connection of the serial communication. - Check all settings with regard to the serial communication - Restart the equipment including the AC drive 	
Crane Deviat	<p>CRANE board detecting deviation in motor operation.</p> <p>NOTE: Only used in Crane Control.</p>	<ul style="list-style-type: none"> - Check encoder signals - Check Deviation jumper on Crane option board. - Check the settings in menus [3AB] & [3AC] 	
CraneComm	<p>Lost communication with CRANE board.</p> <p>NOTE: Only used in Crane Control.</p>	<ul style="list-style-type: none"> - Check CRIO board - Check CRIO cable and signals. 	
Encoder	<p>Lost encoder board, encoder cable or encoder pulses.</p> <p>Motor speed deviation in between reference and measured speed detected.</p> <p>NOTE: Only valid if option board Encoder is used.</p>	<ul style="list-style-type: none"> - Check encoder board. - Check encoder cable and signals. - Check motor operation. - Check speed deviation settings [22G#]. - Check speed PI controller settings [37#]. - Check torque limit setting [351] - Disable encoder, set menu [22B] to OFF. 	
Pump	<p>No master pump can be selected due to error in feedback signalling.</p> <p>NOTE: Only used in Pump Control.</p>	<ul style="list-style-type: none"> - Check cables and wiring for Pump feedback signals - Check settings with regard to the pump feedback digital inputs 	
Over temp	<p>Heatsink temperature too high:</p> <ul style="list-style-type: none"> - Too high ambient temperature of the AC drive - Insufficient cooling - Too high current - Blocked or stuffed fans 	<ul style="list-style-type: none"> - Check the cooling of the AC drive cabinet. - Check the functionality of the built-in fans. The fans must switch on automatically if the heatsink temperature gets too high. At power up the fans are briefly switched on. - Check AC drive and motor rating - Clean fans 	
Over curr F	<p>Motor current exceeds the peak AC drive current:</p> <ul style="list-style-type: none"> - Too short acceleration time. - Too high motor load - Excessive load change - Soft short-circuit between phases or phase to earth - Poor or loose motor cable connections - Too high IxR Compensation level 	<ul style="list-style-type: none"> - Check the acceleration time settings and make them longer if necessary. - Check the motor load. - Check on bad motor cable connections - Check on bad earth cable connection - Check on water or moisture in the motor housing and cable connections. - Lower the level of IxR Compensation [352] 	
Over volt D(eceleration)	<p>Too high DC Link voltage:</p> <ul style="list-style-type: none"> - Too short deceleration time with respect to motor/machine inertia. 	<ul style="list-style-type: none"> - Check the deceleration time settings and make them longer if necessary. 	
Over volt G(eneration)	<ul style="list-style-type: none"> - Too small brake resistor malfunctioning Brake chopper 	<ul style="list-style-type: none"> - Check the dimensions of the brake resistor and the functionality of the Brake chopper (if used) 	
Over volt (Mains)	Too high DC Link voltage, due to too high mains voltage	<ul style="list-style-type: none"> - Check the main supply voltage 	
O(ver) volt M(ains) cut		<ul style="list-style-type: none"> - Try to take away the interference cause or use other main supply lines. 	
Over speed	<p>Motor speed measurement exceeds maximum level. 110% of max speed (all parameter sets).</p>	<ul style="list-style-type: none"> - Check encoder cables, wiring and setup - Check motor data setup [22x] - Perform short ID-run 	
Under voltage	<p>Too low DC Link voltage:</p> <ul style="list-style-type: none"> - Too low or no supply voltage - Mains voltage dip due to starting other major power consuming machines on the same line. 	<ul style="list-style-type: none"> - Make sure all three phases are properly connected and that the terminal screws are tightened. - Check that the mains supply voltage is within the limits of the AC drive. - Try to use other mains supply lines if dip is caused by other machinery - Use the function low voltage override [421] 	

Table 44 Trip condition, their possible causes and remedial action

Trip condition	Possible Cause	Remedy	Size**
LC Level	Low liquid cooling level in external reservoir. External input (DigIn 1-8) active: - active low function on the input. NOTE: Only valid for AC drive types with Liquid Cooling option.	- Check liquid cooling - Check the equipment and wiring that initiates the external input - Check the programming of the digital inputs DigIn 1-8	
OPTION	If an Option specific trip occurs	Check the description of the specific option	
Desat	Failure in output stage, - desaturation of IGBTs - Hard short circuit between phases or phase to earth - Earth fault - For size B - D also the Brake IGBT	- Check on bad motor cable connections	002 -105
Desat U+ *		- Check on bad earth cable connections	090 & Up
Desat U- *		- Check on water and moisture in the motor housing and cable connections	
Desat V+ *		- Check that the rating plate data of the motor is correctly entered.	
Desat V- *		- Check the brake resistor, brake IGBT and wiring.	
Desat W+ *		- For size G and up, check the cables from the PEBBs to the motor, that all are in correct order in parallel connection	
Desat W- *			
Desat BCC *			
DC link error	DC link voltage ripple exceeds maximum level	- Make sure all three phases are properly connected and that the terminal screws are tightened. - Check that the mains supply voltage is within the limits of the AC drive. - Try to use other mains supply lines if dip is caused by other machinery.	
Power Fault	One of the PF (Power Fault) trips below has occurred, but could not be determined.	- Check the PF errors and try to determine the cause. The trip history can be helpful.	
PF Fan Err *	Error in fan module	- Check for clogged air inlet filters in panel door and blocking material in fan module.	090 & Up
PF HCB Err*	Error in controlled rectifier module (HCB)	- Check mains supply voltage	060 & Up
PF Curr Err *	Error in current balancing: - between different modules. - between two phases within one module.	- Check motor. - Check fuses and line connections - Check the individual motor current leads with an clamp on amp meter.	300 & Up
PF Overvolt *	Error in voltage balancing, overvoltage detected in one of the power modules (PEBB)	- Check motor. - Check fuses and line connections.	300 & Up
PF Comm Err *	Internal communication error	Contact service	
PF Int Temp *	Internal temperature too high	Check internal fans	
PF Temp Err *	Malfunction in temperature sensor	Contact service	
PF DC Err *	DC-link error and mains supply fault	- Check mains supply voltage - Check fuses and line connections.	060 & Up
PF Sup Err *	Mains supply fault	- Check mains supply voltage - Check fuses and line connections.	
PF PBUc*	Powerboard micro controller reset by watchdog.		
Brake	Brake tripped on brake fault (not released) or Brake not engaged during stop.	- Check Brake acknowledge signal wiring to selected digital input. - Check programming of digital input DigIn 1-8, [520]. - Check circuit breaker feeding mechanical brake circuit. - Check mechanical brake if acknowledge signal is wired from brake limit switch. - Check brake contactor. - Check settings [33C], [33D], [33E], [33F].	

* = 2...6 Module number if parallel power units (size 300–3000 A)

** = If no size is mentioned in this column, the information is valid for all sizes.

12.3 Maintenance

The AC drive is designed to require minimum of servicing and maintenance. There are however some things which must be checked regularly in order to optimise product life time.

- Keep the AC drive unit clean and cooling efficient (clean air inlets, heatsink profile, parts, components, etc)
- There is an internal fan that should be inspected and cleaned from dust if necessary.
- If AC drives are built into cabinets, also check and clean the dust filters of the cabinets regularly.
- Check external wiring, connections and control signals.
- Check tightening of all terminal screws regularly, especially important are power and motor cable connections

Preventive maintenance can optimise the product life time and secure trouble free operation without interruptions.

For more information on maintenance, please contact your CG Drives & Automation service partner.

Precautions to take with a connected motor

NOTE: Refer to motor manufacturers instruction manual for motor maintenance requirements.

If work must be carried out on a connected motor or on the driven machine, the mains voltage must always first be disconnected from the drive unit.

If your drive is connected to a PMSM (Permanent magnet motor) it is most important that you also disconnect the motor before performing any maintenance on the drive unit.



WARNING!

Do not work on a drive when a rotating PMSM- permanent magnet motor is connected to it.

A rotating PMSM motor energizes the drive including its power terminals.

13. Options

The standard options available are described here briefly. Some of the options have their own instruction or installation manual. For more information please contact your supplier. See also in “Technical catalogue AC drives” for more info.

13.1 Control panel

Control panel with a 4-line display.

Part number		Description
IP54	IP20/21	
01-6520-00	01-6521-00	4-line PPU (standard)
01-6520-10	01-6521-10	4-line PPU with Bluetooth (optional)

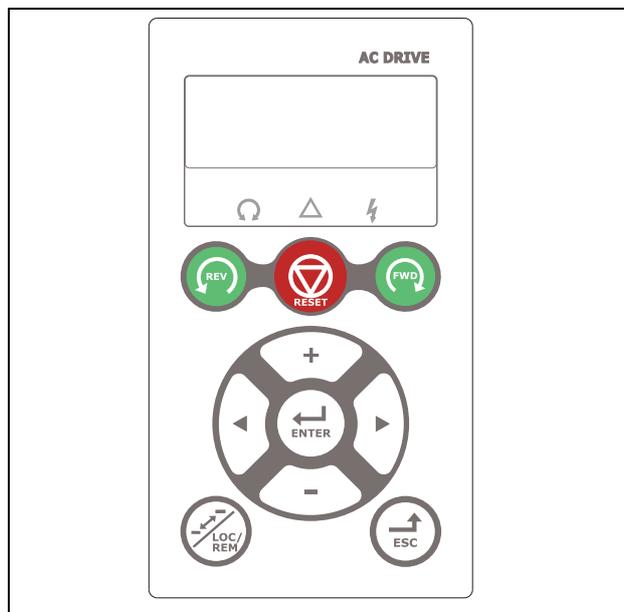


Fig. 151 Control panel with 4-line display.

The display is back lit and consists of 4 rows, each with space for 20 characters. The Control panel is equipped with real time clock function. This means that actual date and time will be shown at e.g. a trip condition. There is also an optional Control panel with Bluetooth communication available for connection with cellphone or tablet.

13.2 External control panel kits (4-line)

13.2.1 Control panel kit, including blank panel

Part number	Description
01-6878-40	Control panel kit (size B)
01-6879-40	Control panel kit (size C)
01-6880-40	Control panel kit (size D and up)



Fig. 152 Control panel kit, including blank panel.

External control panel IP54 suitable for mounting on a cabinet door. This option is to be used in combination with an AC drive module ordered with a built-in control panel.

13.2.2 Control panel kit, including control panel

Part number	Description
01-6878-00	Standard PPU (size B)
01-6878-10	PPU with Bluetooth (size B)
01-6879-00	Standard PPU (size C)
01-6879-10	PPU with Bluetooth (size C)
01-6880-00	Standard PPU (size D and up)
01-6880-10	PPU with Bluetooth (size D and up)



Fig. 153 Control panel kit, including control panel.

External control panel IP54 suitable for mounting on a panel door. This option is to be used in combination with an AC drive module ordered with a blank control panel.

13.3 External control panel options (2-line)

Part number	Description
01-3957-00	Panel kit complete including panel (2-line PPU)
01-3957-01	Panel kit complete including blank panel

Mounting cassette, blank panel and straight RS232-cable are available as options for the control panel. These options may be useful, for example for mounting a control panel in a cabinet door.

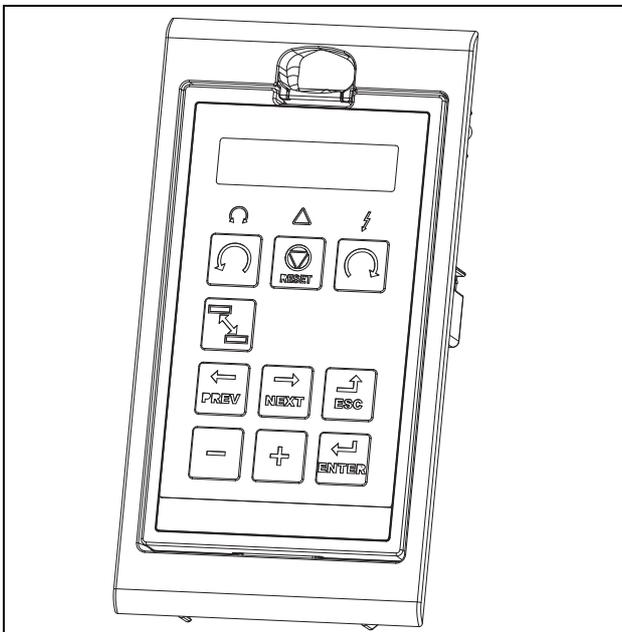


Fig. 154 Control panel in mounting cassette

13.4 Handheld Control Panel 2.0

Part number	Description
01-5039-00	Handheld Control Panel 2.0 complete for FDU/VFX2.0 or CDU/CDX 2.0 2-line PPU
01-5039-30	Handheld Control Panel 2.0 complete for FDU/VFX2.0 or CDU/CDX 2.0 4-line PPU



Fig. 155 Handheld Control Panel 2.0 (2-line PPU).

The Handheld Control Panel - HCP 2.0 is a complete control panel, easy to connect to the AC drive, for temporary use when e.g. commissioning, servicing and so on.

The HCP has full functionality including memory. It is possible to set parameters, view signals, actual values, fault logger information and so on. It is also possible to use the memory to copy all data (such as parameter set data and motor data) from one AC drive to the HCP and then load this data to other AC drives.



Fig. 156 Handheld Control Panel 2.0 (4-line PPU).

13.5 Gland kits

Gland kits are available for frame sizes B, C and D.

Optional gland kits are available for IP54 frame sizes B, C, D, C69 and D69.

Metal EMC glands are used for motor and brake resistor cables.

Part Number	Current (dimension)	Frame size
01-4601-21	3 - 6 A (M16 - M20)	B
01-4601-22	8 - 10 A (M16 - M25)	
01-4601-23	13 - 18 A (M16 - M32)	
01-4399-01	26 - 31 A (M12 - M32)	C
01-4399-00	37 - 46 A (M12 - M40)	
01-4833-00	61 - 74 A (M20 - M50)	D
01-7248-00	2 - 10 A (M20 - M25)	C69
01-7248-10	13 - 25 A (M20 - M32)	C69
01-7247-00	33 - 58 A (M20 - M40)	D69

13.6 EmoSoftCom

EmoSoftCom is an optional software that runs on a personal computer. It can also be used to load parameter settings from the AC drive to the PC for backup and printing. Recording can be made in oscilloscope mode. Please contact CG Drives & Automation sales for further information.

13.7 Brake chopper

All AC drive sizes AC drives with cable inlet on short side can be fitted with an optional built-in brake chopper. The brake resistor must be mounted outside the AC drive. The choice of the resistor depends on the application switch-on duration and duty-cycle. This option can not be after mounted.



WARNING!

The table gives the minimum values of the brake resistors. Do not use resistors lower than this value. The AC drive can trip or even be damaged due to high braking currents.

The following formula can be used to define the power of the connected brake resistor:

$$P_{\text{resistor}} = \frac{(\text{Brake level } V_{\text{DC}})^2}{R_{\text{min}}} \times \text{ED}$$

Where:

- P_{resistor} required power of brake resistor
- Brake level V_{DC} brake voltage level (see Table 45)
- R_{min} minimum allowable brake resistor (see Table 46, Table 47 and Table 48)
- ED effective braking period. Defined as:

$$\text{ED} = \frac{t_{\text{br}}}{120 \text{ [s]}}$$

- t_{br} Active braking time at nominal braking power during a 2 minute operation cycle.

Maximum value of ED = 1, meaning continuous braking.

Table 45

Supply voltage (V_{AC}) (set in menu [21B])	Brake level (V_{DC})
220-240	380
380-415	660
440-480	780
500-525	860
550-600	1000
660-690	1150

Table 46 Brake resistor VFX48 V types

Type	Rmin [ohm] if supply 380–415 V _{AC}	Rmin [ohm] if supply 440–480 V _{AC}
VFX48-003	43	50
-004	43	50
-006	43	50
-008	43	50
-010	43	50
-013	43	50
-018	43	50
-025	26	30
-026	26	30
-030	26	30
-031	26	30
-036	17	20
-037	17	20
-045	17	20
-046	17	20
-058	15.5	19
-060	10	12
-061	10	12
-072	10	12
-074	10	12
-088	7.5	9
-090	3.8	4.4
-105	6.5	8
-106	3.8	4.4
-109	3.8	4.4
-142	3.8	4.4
-146	3.8	4.4
-171	3.8	4.4
-175	3.8	4.4
-205	2.7	3.1
-210	2.7	3.1
-244	2.7	3.1
-250	2.7	3.1
-293	2.3	2.8
-295	2.3	2.8
-300	2 x 3.8	2 x 4.4
-365	1.8	2.2
-375	2 x 3.8	2 x 4.4
-430	2 x 2.7	2 x 3.1
-500	2 x 2.7	2 x 3.1
-600	3 x 2.7	3 x 3.1
-650	3 x 2.7	3 x 3.1
-750	3 x 2.7	3 x 3.1
-860	4 x 2.7	4 x 3.1
-1K0	4 x 2.7	4 x 3.1
-1K15	5 x 2.7	5 x 3.1
-1K25	5 x 2.7	5 x 3.1
-1K35	6 x 2.7	6 x 3.1
-1K5	6 x 2.7	6 x 3.1
-1K75	7 x 2.7	7 x 3.1
-2K0	8 x 2.7	8 x 3.1
-2K25	9 x 2.7	9 x 3.1
-2K5	10 x 2.7	10 x 3.1

Table 47 Brake resistor VFX52 V types

Type	Rmin [ohm] if supply 440–480 V _{AC}	Rmin [ohm] if supply 500–525 V _{AC}
VFX52-003	50	55
-004	50	55
-006	50	55
-008	50	55
-010	50	55
-013	50	55
-018	50	55
-026	30	32
-031	30	32
-037	20	22
-046	20	22
-061	12	14
-074	12	14

Table 48 Brake resistor VFX69 V types

Type	Rmin [ohm] if supply 500–525 V _{AC}	Rmin [ohm] if supply 550–600 V _{AC}	Rmin [ohm] if supply 660–690 V _{AC}
VFX69-002	30.4	34.8	40.0
-003	30.4	34.8	40.0
-004	30.4	34.8	40.0
-005	30.4	34.8	40.0
-008	30.4	34.8	40.0
-010	30.4	34.8	40.0
-013	30.4	34.8	40.0
-018	30.4	34.8	40.0
-021	30.4	34.8	40.0
-025	30.4	34.8	40.0
-033	12.9	14.8	17.0
-042	12.9	14.8	17.0
-050	12.9	14.8	17.0
-058	12.9	14.8	17.0
-082	4.9	5.7	6.5
-090	4.9	5.7	6.5
-109	4.9	5.7	6.5
-146	4.9	5.7	6.5
-175	4.9	5.7	6.5
-200	4.9	5.7	6.5
-250	2 x 4.9	2 x 5.7	2 x 6.5
-300	2 x 4.9	2 x 5.7	2 x 6.5
-375	2 x 4.9	2 x 5.7	2 x 6.5
-400	2 x 4.9	2 x 5.7	2 x 6.5
-430	3 x 4.9	3 x 5.7	3 x 6.5
-500	3 x 4.9	3 x 5.7	3 x 6.5
-595	3 x 4.9	3 x 5.7	3 x 6.5
-650	4 x 4.9	4 x 5.7	4 x 6.5
-720	4 x 4.9	4 x 5.7	4 x 6.5
-800	4 x 4.9	4 x 5.7	4 x 6.5
-905	5 x 4.9	5 x 5.7	5 x 6.5
-995	5 x 4.9	5 x 5.7	5 x 6.5
-1K2	6 x 4.9	6 x 5.7	6 x 6.5
-1K4	7 x 4.9	7 x 5.7	7 x 6.5

Table 48 Brake resistor VFX69 V types

-1K6	8 x 4.9	8 x 5.7	8 x 6.5
-1K8	9 x 4.9	9 x 5.7	9 x 6.5
-2K0	10 x 4.9	10 x 5.7	10 x 6.5
-2K2	11 x 4.9	11 x 5.7	11 x 6.5
-2K4	12 x 4.9	12 x 5.7	12 x 6.5
-2K6	13 x 4.9	13 x 5.7	13 x 6.5
-2K8	14 x 4.9	14 x 5.7	14 x 6.5
-3K0	15 x 4.9	15 x 5.7	15 x 6.5

NOTE: Although the AC drive will detect a failure in the brake electronics, the use of resistors with a thermal overload which will cut off the power at overload is strongly recommended.

The brake chopper option is built-in by the manufacturer and must be specified when the AC drive is ordered.

13.8 I/O Board

Part number	Description
01-3876-01	I/O option board 2.0

Each I/O option board 2.0 provides three extra relay outputs and three extra isolated digital inputs (24V). The I/O Board works in combination with the Pump/Fan Control, but can also be used as a separate option. Maximum 3 I/O boards possible. This option is described in a separate manual.

13.9 Encoder

Part number	Description
01-3876-03	Encoder 2.0 option board

The Encoder 2.0 option board, used for connection of feedback signal of the actual motor speed via an incremental encoder is described in a separate manual. For Emotron FDU this function is for speed read-out only or for spin start function. No speed control.

13.10 PTC/PT100

Part number	Description
01-3876-08	PTC/PT100 2.0 option board

The PTC/PT100 2.0 option board for connecting motor thermistors and max 3 PT100 elements to the AC drive is described in a separate manual.

13.11 Crane option board

Part number	Description
590059	Crane interface board, 230 V _{AC}
590060	Crane interface board, 24 V _{DC}

This option is used in crane applications. The crane option board 2.0 is described in a separate manual.

13.12 Serial communication and fieldbus

Part number	Description	From VFX software version (see menu [922])
01-3876-04	RS232/485	4.0
01-3876-05	Profibus DP	4.0
01-3876-06	DeviceNet	4.0
01-3876-09	Modbus/TCP, Industrial Ethernet	4.11
01-3876-10	EtherCAT, Industrial Ethernet	4.32
01-3876-11	Profinet IO, one port Industrial Ethernet	4.32
01-3876-12	Profinet IO, two port Industrial Ethernet	4.32
01-3876-13	EtherNet/IP, two port industrial EtherNet	4.36
01-3876-16	CANopen	4.42

For communication with the AC drive there are several option boards for communication. There are different options for Fieldbus communication and one serial communication option with RS232 or RS485 interface which has galvanic isolation.

13.13 Standby supply board option

Part number	Description
01-3954-00	Standby power supply kit for after mounting. Not for frame sizes D, D2, FA, FA2, C69, D69, C2(69) and D2(69).

The standby supply board option provides the possibility of keeping the communication system up and running without having the 3-phase mains connected. One advantage is that the system can be set up without mains power. The option will also give backup for communication failure if main power is lost.

The standby supply board option is supplied with external $\pm 10\%$ 24 V_{DC} protected by a 2 A slow acting fuse, from a double isolated transformer. The terminals X1:1, X1:2 (on size B, C and E to F) are voltage polarity independent. The terminals A- and B+ (on sizes D/D2...) are voltage polarity dependent.

Cable length limited to 30 m. If the cable is longer than 30 m, a shielded cable must be used.

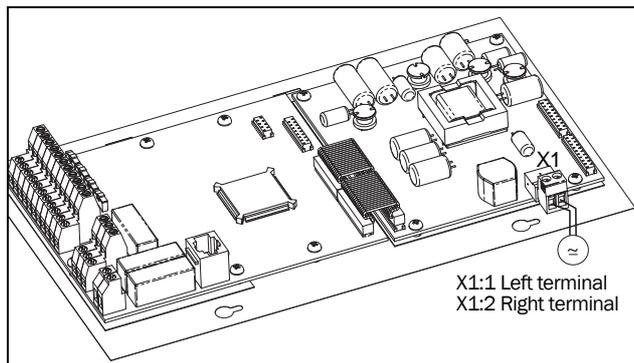


Fig. 157 Connection of standby supply option on frame sizes B, C, C2, E, E2, F and F2.

X1 terminal	Name	Function	Specification
1	Ext. supply 1	External, AC drive main power independent, supply voltage for control and communication circuits	24 V _{DC} or V _{AC} $\pm 10\%$ Double isolated
2	Ext. supply 2		

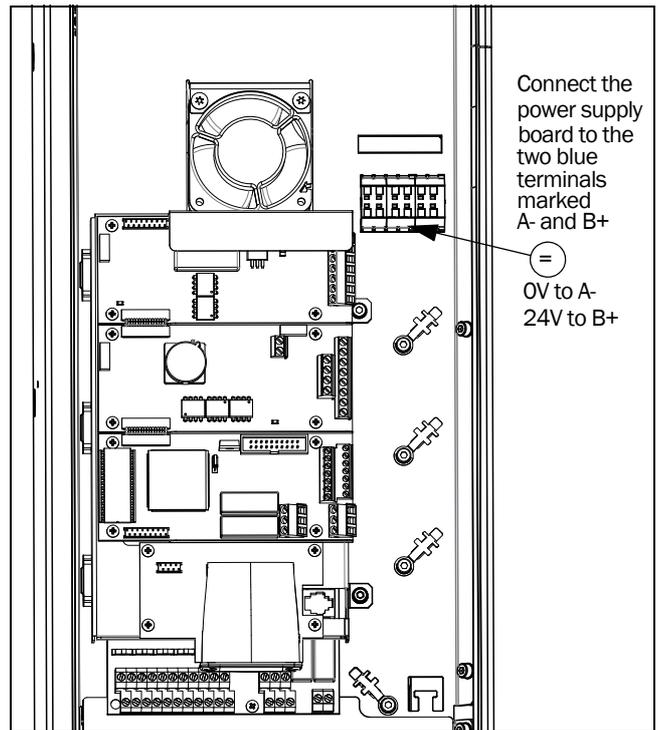


Fig. 158 Connection of standby supply option on frame sizes D, D2, FA, FA2, C69, D69, C2(69) and D2(69).

Terminal	Name	Function	Specification
A -	0V	External, AC drive main power independent, supply voltage for control and communication circuits	24 V _{DC} $\pm 10\%$ Double isolated
B +	+24V		

13.14 Safe Stop option

To realize a Safe Stop configuration in accordance with Safe Torque Off (STO) EN-IEC 62061:2005 SIL 3 & EN-ISO 13849-1:2006, the following three parts need to be attended to:

1. Inhibit trigger signals with safety relay K1 (via Safe Stop option board).
2. Enable input and control of AC drive (via normal I/O control signals of AC drive).
3. Power conductor stage (checking status and feedback of driver circuits and IGBT's).

To enable the AC drive to operate and run the motor, the following signals should be active:

- "Inhibit" input, terminals 1 (DC+) and 2 (DC-) on the Safe Stop option board should be made active by connecting $24 V_{DC}$ to secure the supply voltage for the driver circuits of the power conductors via safety relay K1. See also Fig. 161.
- High signal on the digital input, e.g. terminal 10 in Fig. , which is set to "Enable". For setting the digital input please refer to "11.7.2 Digital Inputs [520]" on page 172.

These two signals need to be combined and used to enable the output of the AC drive and make it possible to activate a Safe Stop condition.

NOTE: The "Safe Stop" condition according to EN-IEC 62061:2005 SIL 3 & EN-ISO 13849-1:2006, can only be realized by de-activating both the "Inhibit" and "Enable" inputs.

When the "Safe Stop" condition is achieved by using these two different methods, which are independently controlled, this safety circuit ensures that the motor will not start running because:

- The 24VDC signal is disconnected from the "Inhibit" input, terminals 1 and 2, the safety relay K1 is switched off.
The supply voltage to the driver circuits of the power conductors is switched off. This will inhibit the trigger pulses to the power conductors.
- The trigger pulses from the control board are shut down.
The Enable signal is monitored by the controller circuit which will forward the information to the PWM part on the Control board.

To make sure that the safety relay K1 has been switched off, this should be guarded externally to ensure that this relay did not refuse to act. The Safe Stop option board offers a feedback signal for this via a second forced switched safety relay K2 which is switched on when a detection circuit has confirmed that the supply voltage to the driver circuits is shut down. See Table 49 for the contacts connections.

To monitor the "Enable" function, the selection "RUN" on a digital output can be used. For setting a digital output, e.g.

terminal 20 in the example Table , please refer to "11.7.4 Digital Outputs [540]" on page 178.

When the "Inhibit" input is de-activated, the AC drive display will show a flashing "SST" indication in section D (bottom left corner) and the red Trip LED on the Control panel will be flashing.

To resume normal operation, the following steps have to be taken:

- Release "Inhibit" input; $24V_{DC}$ (High) to terminal 1 and 2.
- Give a STOP signal to the AC drive, according to the set Run/Stop Control in menu [215].
- Give a new Run command, according to the set Run/Stop Control in menu [215].

NOTE: The method of generating a STOP command is dependent on the selections made in Start Signal Level/Edge [21A] and the use of a separate Stop input via digital input.



WARNING!

The safe stop function can never be used for electrical maintenance. For electrical maintenance the AC drive should always be disconnected from the supply voltage.

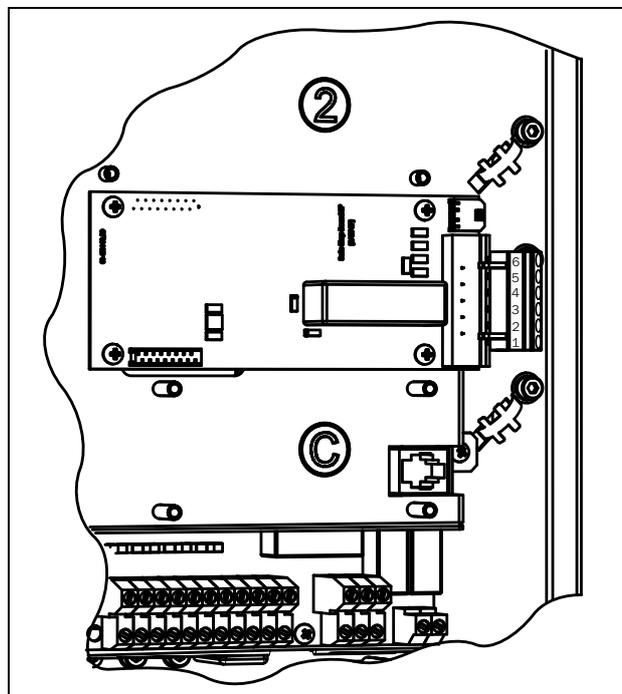


Fig. 159 Connection of safe stop option in size B - D.

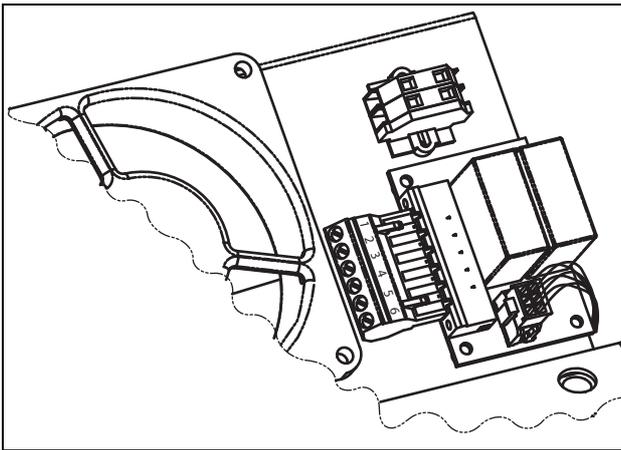


Fig. 160 Connection of safe stop option in size E and up.

Table 49 Specification of Safe Stop option board

X1 pin	Name	Function	Specification
1	Inhibit +	Inhibit driver circuits of power conductors.	DC 24 V (20–30 V)
2	Inhibit -		
3	NO contact relay K2	Feedback; confirmation of activated inhibit.	48 V _{DC} / 30 V _{AC} /2 A
4	P contact relay K2		
5	GND	Supply ground.	
6	+24 VDC	Supply Voltage for operating Inhibit input only.	+24 V _{DC} , 50 mA

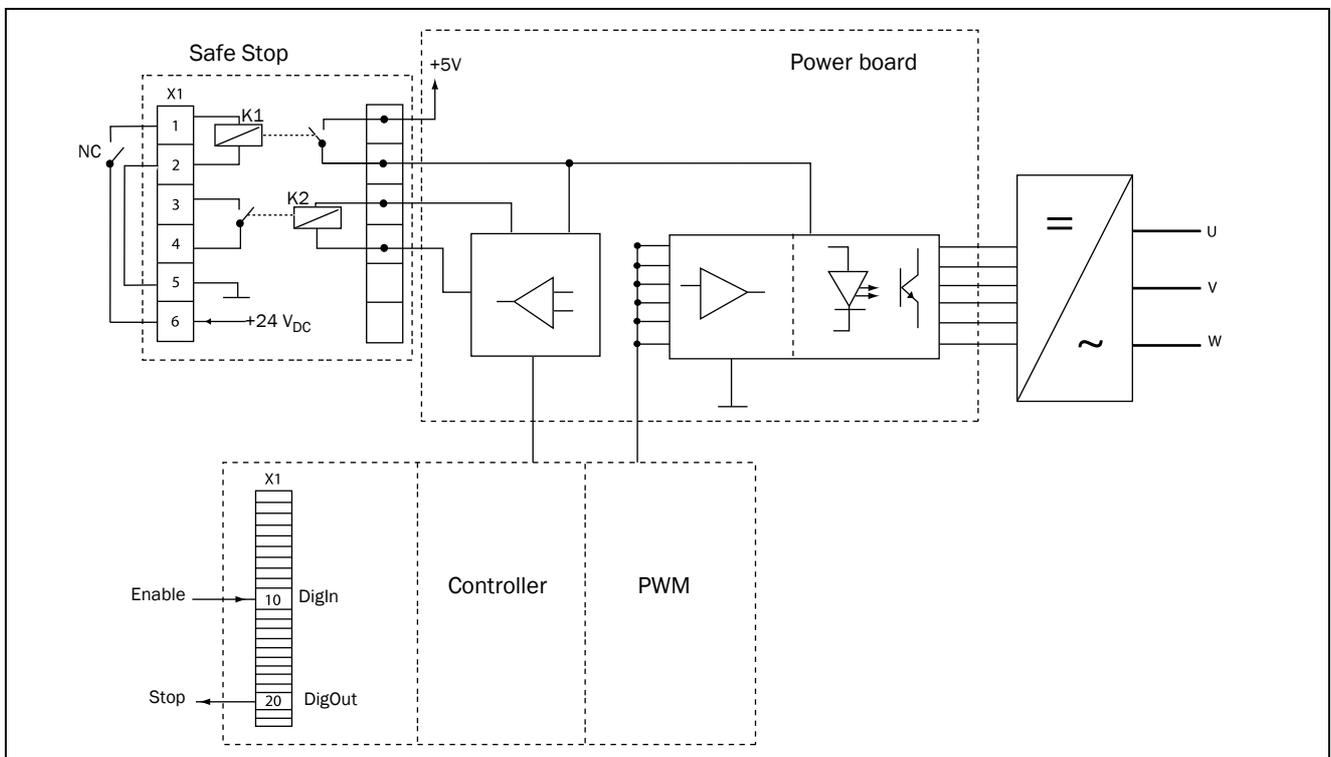


Fig. 161 Safe Stop connection

13.15 EMC filter class C1/C2

EMC filter according to EN61800-3:2004 class C1 (for frame size C types) and C2 - 1st environment restricted distribution.

For sizes B,C, C2, D and D2, the filter is mounted inside the drive module.

For sizes E and up, external EMC filters are available.

For more information refer to “Technical catalogue for AC drives”.

Note: EMC filter according to class C3 - 2nd environment included as standard in all drive units.

13.16 Output chokes

Output chokes, which are supplied separately, are recommended for lengths of screened motor cable longer than 100 m. Because of the fast switching of the motor voltage and the capacitance of the motor cable (both line to line and line to earth screen), large switching currents can be generated with long lengths of motor cable. Output chokes prevent the AC drive from tripping and should be installed as closely as possible to the AC drive.

See also in “Technical catalogue AC drives” for filter selection guide.

13.17 Liquid cooling

AC drive modules in frame sizes E - O and F69 - T69 are available in a liquid cooled version. These units are designed for connection to a liquid cooling system, normally a heat exchanger of liquid-liquid or liquid-air type. Heat exchanger is not part of the liquid cooling option.

Drive units with parallel power modules (frame size G - T69) are delivered with a dividing unit for connection of the cooling liquid. The drive units are equipped with rubber hoses with leak-proof quick couplings.

The Liquid cooling option is described in a separate manual.

13.18 Top cover for IP20/21 version

Part number	Description
01-5356-00	Top cover for frame size C2
01-5355-00	Top cover for frame sizes D2, E2 and F2

This Top cover can be mounted on IP20 versions of frame sizes C2, D2, E2 and F2.

By mounting the top cover, the protection class will change to IP21 in accordance with EN 60529 standard.

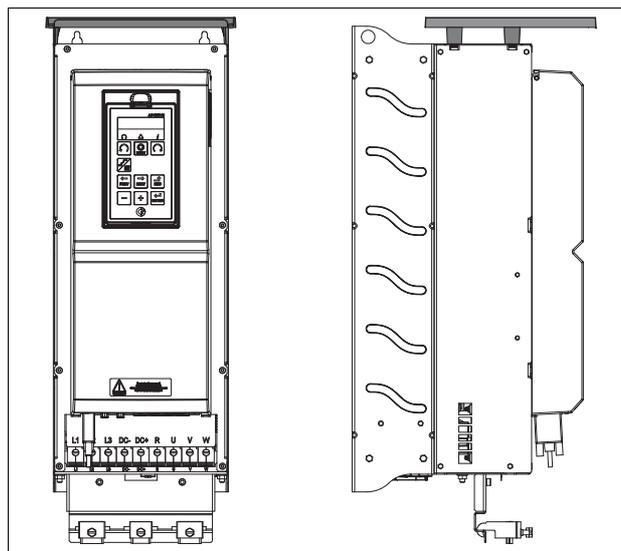


Fig. 162 Optional top cover mounted on frame size D2

13.19 Other options

Following options are also available, for more information regarding these options, see in “Technical catalogue AC drives”.

Overshoot clamp

Sine wave filter

Common mode filter

Brake resistors

13.20 AFE - Active Front End

Emotron AC Drives from CG Drives & Automation are also available as Low harmonic drives and Regenerative drives. You will find more information on www.emotron.com / www.cgglobal.com.

14. Technical Data

14.1 Electrical specifications related to model

Note: Use motor rated current for drive sizing.

Emotron VFX 2.0 - IP20/21 version

Table 50 Typical motor power at mains voltage 230 V. AC drive main voltage range 230 - 480 V.

Model VFX	Max. output current [A]*	Normal duty (120%, 1 min every 10 min)			Heavy duty (150%, 1 min every 10 min)			Frame size
		Power @230V [kW]	Power @230V [HP]	Rated current [A]	Power @230V [kW]	Power @230V [HP]	Rated current [A]	
48-025-20	38	5.5	7.5	25	4	5	20	C2
48-030-20	45	7.5	10	30	5.5	7.5	24	
48-036-20	54	7.5	10	36	7.5	10	29	
48-045-20	68	11	15	45	7.5	10	36	
48-058-20	68	15	20	58	11	15	46	
48-060-20	90	15	20	60	11	15	48	D2
48-072-20	108	18.5	25	72	15	20	58	
48-088-20	132	22	30	88	18.5	25	70	
48-105-20	132	30	40	105	22	30	84	
48-142-20	170	37	50	142	30	40	114	E2
48-171-20	205	45	60	171	37	50	137	
48-205-20	246	55	75	205	45	60	164	F2
48-244-20	293	75	100	244	55	75	195	
48-293-20	352	90	125	293	75	100	235	
48-365-20	438	110	150	365	90	125	292	FA2

* Available during limited time and as long as allowed by drive temperature.

Table 51 Typical motor power at mains voltage 400 and 460 V. AC drive main voltage range 230 - 480 V.

Model VFX	Max. output current [A]*	Normal duty (120%, 1 min every 10 min)			Heavy duty (150%, 1 min every 10 min)			Frame size
		Power @400V [kW]	Power @460V [hp]	Rated current [A]	Power @400V [kW]	Power @460V [hp]	Rated current [A]	
48-025-20	38	11	15	25	7.5	10	20	C2
48-030-20	45	15	20	30	11	15	24	
48-036-20	54	18.5	25	36	15	20	29	
48-045-20	68	22	30	45	18.5	25	36	
48-058-20	68	30	40	58	22	30	46	
48-060-20	90	30	40	60	22	30	48	D2
48-072-20	108	37	50	72	30	40	58	
48-088-20	132	45	60	88	37	50	70	
48-105-20	132	55	75	105	45	60	84	
48-142-20	170	75	100	142	55	75	114	E2
48-171-20	205	90	125	171	75	100	137	
48-205-20	246	110	150	205	90	125	164	F2
48-244-20	293	132	200	244	110	150	195	
48-293-20	352	160	250	293	132	200	235	
48-365-20	438	200	300	365	160	250	292	FA2

* Available during limited time and as long as allowed by drive temperature.

Table 52 Typical motor power at mains voltage 575 and 690 V. AC drive main voltage range 500 - 690 V.

Model VFX	Max. output current [A]*	Normal duty (120%, 1 min every 10 min)			Heavy duty (150%, 1 min every 10 min)			Frame size
		Power @575V [hp]	Power @690V [kW]	Rated current [A]	Power @575V [hp]	Power @690V [kW]	Rated current [A]	
69-002-20	3.2	1.5	1.5	2	1	0.75	1.6	C2(69)
69-003-20	4.8	2	2.2	3	1.5	1.5	2.4	
69-004-20	6.4	3	3	4	2	2.2	3.2	
69-006-20	9.6	4	4	6	3	3	4.8	
69-008-20	12.8	5	5.5	8	4	4	6.4	
69-010-20	16	7.5	7.5	10	5	5.5	8	
69-013-20	20.8	10	11	13	7.5	7.5	10.4	
69-018-20	29	15	15	18	10	11	14.4	
69-021-20	34	20	18.5	21	15	15	16.8	
69-025-20	40	25	22	25	20	18.5	20	
69-033-20	53	30	30	33	25	22	26	D2(69)
69-042-20	67	40	37	42	30	30	34	
69-050-20	80	50	45	50	40	37	40	
69-058-20	93	60	55	58	40	45	46	

* Available during limited time and as long as allowed by drive temperature.

Emotron VFX 2.0 - IP54 version (Model 48-300 and up also available as IP20)

Table 53 Typical motor power at mains voltage 230 V. AC drive main voltage range 230 - 480 V.

Model VFX	Max. output current [A]*	Normal duty (120%, 1 min every 10 min)			Heavy duty (150%, 1 min every 10 min)			Frame size (Number of PEBB's **)	IP class	
		Power @230V [kW]	Power @230V [HP]	Rated current [A]	Power @230V [kW]	Power @230V [HP]	Rated current [A]			
48-003-54	3.8	0.37	0.5	2.5	0.37	0.5	2.0	B	IP 54 wall mounted	
48-004-54	6.0	0.75	1	4.0	0.55	0.75	3.2			
48-006-54	9.0	1.1	1.5	6.0	0.75	1	4.8			
48-008-54	11.3	1.5	2	7.5	1.1	1.5	6.0			
48-010-54	14.3	2.2	3	9.5	1.5	2	7.6			
48-013-54	19.5	2.2	3	13.0	2.2	3	10.4			
48-018-54	27.0	4	5	18.0	3	3	14.4			
48-026-54	39	5.5	7.5	26	4	5	21			C
48-031-54	46	7.5	10	31	5.5	7.5	25			
48-037-54	55	7.5	10	37	7.5	10	29.6			
48-046-54	69	11	15	46	7.5	10	37			
48-061-54	92	15	20	61	11	15	49			D
48-074-54	111	18.5	25	74	15	20	59			E
48-090-54	108	22	30	90	18.5	25	72			
48-109-54	131	30	40	109	22	30	87			
48-146-54	175	37	50	146	30	40	117			
48-175-54	210	45	60	175	37	50	140	F		
48-210-54	252	55	75	210	45	60	168			
48-228-54	300	55	75	228	55	60	182			
48-250-54	300	75	100	250	55	75	200			
48-295-54	354	90	125	295	75	100	236	FA		
48-365-54	438	110	150	365	90	125	292			
48-300-IP	360	90	125	300	75	100	240	G(2)		IP 20 module or IP54 cabinet
48-375-IP	450	110	150	375	90	125	300	H(2)		
48-430-IP	516	110	150	430	110	125	344			
48-500-IP	600	160	200	500	110	150	400	I(3)		
48-600-IP	720	200	250	600	132	200	480			
48-650-IP	780	200	250	650	160	200	520			
48-750-IP	900	220	300	750	200	250	600	J(4)		
48-860-IP	1032	250	350	860	220	300	688			
48-1K0-IP	1200	300	400	1000	250	350	800	KA(5)		
48-1K15-IP	1380	355	450	1150	250	400	920			
48-1K25-IP	1500	400	500	1250	315	400	1000	K(6)		
48-1K35-IP	1620	400	550	1350	355	450	1080			
48-1K5-IP	1800	450	600	1500	400	500	1200	L(7)		
48-1K75-IP	2100	560	750	1750	450	600	1400			
48-2K0-IP	2400	630	800	2000	500	650	1600	M(8)		
48-2K25-IP	2700	710	900	2250	560	750	1800	N(9)		
48-2K5-IP	3000	800	1000	2500	630	800	2000	O(10)		
Larger sizes available on request										

* Available during limited time and as long as allowed by drive temperature.

** PEBB= Power Electronic Building Block (power module).

Table 54 Typical motor power at mains voltage 400 V. AC drive main voltage range 230 - 480 V.

Model VFX	Max. output current [A]*	Normal duty (120%, 1 min every 10 min)		Heavy duty (150%, 1 min every 10 min)		Frame size (Number of PEBB's)**	IP class
		Power @400V [kW]	Rated current [A]	Power @400V [kW]	Rated current [A]		
48-003-54	3.8	0.75	2.5	0.55	2.0	B	IP 54 wall mounted
48-004-54	6.0	1.5	4.0	1.1	3.2		
48-006-54	9.0	2.2	6.0	1.5	4.8		
48-008-54	11.3	3	7.5	2.2	6.0		
48-010-54	14.3	4	9.5	3	7.6		
48-013-54	19.5	5.5	13.0	4	10.4		
48-018-54	27.0	7.5	18.0	5.5	14.4		
48-026-54	39	11	26	7.5	21	C	
48-031-54	46	15	31	11	25		
48-037-54	55	18.5	37	15	29.6		
48-046-54	69	22	46	18.5	37	D	
48-061-54	92	30	61	22	49		
48-074-54	111	37	74	30	59	E	
48-090-54	108	45	90	37	72		
48-109-54	131	55	109	45	87		
48-146-54	175	75	146	55	117	F	
48-175-54	210	90	175	75	140		
48-210-54	252	110	210	90	168		
48-228-54	300	110	228	90	182	FA	
48-250-54	300	132	250	110	200		
48-295-54	354	160	295	132	236	G(2)	
48-365-54	438	200	365	160	292		
48-300-IP	360	160	300	132	240	H(2)	
48-375-IP	450	200	375	160	300		
48-430-IP	516	220	430	200	344	I(3)	
48-500-IP	600	250	500	220	400		
48-600-IP	720	315	600	250	480	J(4)	
48-650-IP	780	355	650	315	520		
48-750-IP	900	400	750	355	600	KA(5)	
48-860-IP	1032	450	860	400	688		
48-1K0-IP	1200	560	1000	450	800	K(6)	
48-1K15-IP	1380	630	1150	500	920		
48-1K25-IP	1500	710	1250	560	1000	L(7)	
48-1K35-IP	1620	710	1350	600	1080		
48-1K5-IP	1800	800	1500	630	1200	M(8)	
48-1K75-IP	2100	900	1750	800	1400		
48-2K0-IP	2400	1120	2000	900	1600	N(9)	
48-2K25-IP	2700	1250	2250	1000	1800		
48-2K5-IP	3000	1400	2500	1120	2000	O(10)	
Larger sizes available on request							

* Available during limited time and as long as allowed by drive temperature.

** PEBB= Power Electronic Building Block (power module).

Table 55 Typical motor power at mains voltage 460 V. AC drive main voltage range 230 - 480 V.

Model VFX	Max. output current [A]*	Normal duty (120%, 1 min every 10 min)		Heavy duty (150%, 1 min every 10 min)		Frame size (Number of PEBB's)**	IP class	
		Power @460V [HP]	Rated current [A]	Power @460V [HP]	Rated current [A]			
48-003-54	3.8	1	2.5	1	2.0	B	IP 54 wall mounted	
48-004-54	6.0	2	4.0	1.5	3.2			
48-006-54	9.0	3	6.0	2	4.8			
48-008-54	11.3	3	7.5	3	6.0			
48-010-54	14.3	5	9.5	3	7.6			
48-013-54	19.5	7.5	13.0	5	10.4			
48-018-54	27.0	10	18.0	7.5	14.4			
48-026-54	39	15	26	10	21			C
48-031-54	46	20	31	15	25			
48-037-54	55	25	37	20	29.6			
48-046-54	69	30	46	25	37	D		
48-061-54	92	40	61	30	49	E		
48-074-54	111	50	74	40	59			
48-090-54	108	60	90	50	72			
48-109-54	131	75	109	60	87			F
48-146-54	175	100	146	75	117			
48-175-54	210	125	175	100	140			
48-210-54	252	150	210	125	168	FA		
48-228-54	300	200	228	150	182			
48-250-54	300	200	250	150	200			
48-295-54	354	250	295	200	236			IP 20 module or IP54 cabinet
48-365-54	438	300	365	250	292			
48-300-IP	360	250	300	200	240	G(2)		
48-375-IP	450	300	375	250	300	H(2)		
48-430-IP	516	350	430	250	344			
48-500-IP	600	400	500	350	400	I(3)		
48-600-IP	720	500	600	400	480			
48-650-IP	780	550	650	400	520			
48-750-IP	900	600	750	500	600	J(4)		
48-860-IP	1032	700	860	550	688			
48-1K0-IP	1200	800	1000	650	800	KA(5)		
48-1K15-IP	1380	900	1150	750	920			
48-1K25-IP	1500	1000	1250	800	1000	K(6)		
48-1K35-IP	1620	1100	1350	900	1080			
48-1K5-IP	1800	1250	1500	1000	1200	L(7)		
48-1K75-IP	2100	1500	1750	1200	1400			
48-2K0-IP	2400	1700	2000	1300	1600	M(8)		
48-2K25-IP	2700	1900	2250	1500	1800	N(9)		
48-2K5-IP	3000	2100	2500	1700	2000	O(10)		
Larger sizes available on request								

* Available during limited time and as long as allowed by drive temperature.

** PEBB= Power Electronic Building Block (power module).

Emotron VFX 2.0 - IP54 version (Model 69-250 and up also available as IP20)

Table 56 Typical motor power at mains voltage 525 V.
AC drive main voltage range, for VFX52: 440 - 525 V and for VFX69: 500 - 690 V.

Model VFX	Max. output current [A]*	Normal duty (120%, 1 min every 10 min)		Heavy duty (150%, 1 min every 10 min)		Frame size (Number of PEBB's)**	IP class	
		Power @525V [kW]	Rated current [A]	Power @525V [kW]	Rated current [A]			
52-003-54	3.8	1.1	2.5	1.1	2.0	B	IP 54 wall mounted	
52-004-54	6.0	2.2	4.0	1.5	3.2			
52-006-54	9.0	3	6.0	2.2	4.8			
52-008-54	11.3	4	7.5	3	6.0			
52-010-54	14.3	5.5	9.5	4	7.6			
52-013-54	19.5	7.5	13.0	5.5	10.4			
52-018-54	27.0	11	18.0	7.5	14.4			
52-026-54	39	15	26	11	21	C		
52-031-54	46	18.5	31	15	25			
52-037-54	55	22	37	18.5	29.6			
52-046-54	69	30	46	22	37			
52-061-54	92	37	61	30	49	D		
52-074-54	111	45	74	37	59			
69-082-54	98	55	82	45	66	F69		
69-090-54	108	55	90	45	72			
69-109-54	131	75	109	55	87			
69-146-54	175	90	146	75	117			
69-175-54	210	110	175	90	140			
69-200-54	240	132	200	110	160			
69-250-IP	300	160	250	132	200	H69 (2)		
69-300-IP	360	200	300	160	240			
69-375-IP	450	250	375	200	300			
69-400-IP	480	250	400	220	320			
69-430-IP	516	300	430	250	344	I69 (3)		
69-500-IP	600	315	500	300	400			
69-595-IP	720	400	600	315	480			
69-650-IP	780	450	650	355	520	J69 (4)		
69-720-IP	864	500	720	400	576			
69-800-IP	960	560	800	450	640		IP 20 module or IP54 cabinet	
69-995-IP	1200	630	1000	500	800			
69-1K2-IP	1440	800	1200	630	960			
69-1K4-IP	1680	1000	1400	800	1120			
69-1K6-IP	1920	1100	1600	900	1280			
69-1K8-IP	2160	1300	1800	1000	1440			
69-2K0-IP	2400	1400	2000	1100	1600			
69-2K2-IP	2640	1600	2200	1200	1760			
69-2K4-IP	2880	1700	2400	1400	1920			
69-2K6-IP	3120	1900	2600	1500	2080			
69-2K8-IP	3360	2000	2800	1600	2240			
69-3K0-IP	3600	2200	3000	1700	2400			

* Available during limited time and as long as allowed by drive temperature.

** PEBB= Power Electronic Building Block (power module).

Table 57 Typical motor power at mains voltage 575 and 690 V. AC drive main voltage range 500 - 690 V.

Model VFX	Max. output current [A]*	Normal duty (120%, 1 min every 10 min)			Heavy duty (150%, 1 min every 10 min)			Frame size (Number of PEBB's)**	IP class	
		Power @575V [HP]	Power @690V [kW]	Rated current [A]	Power @575V [HP]	Power @690V [kW]	Rated current [A]			
69-002-54	3.2	1.5	1.5	2	1	0.75	1.6	C69	IP 54 wall mounted	
69-003-54	4.8	2	2.2	3	1.5	1.5	2.4			
69-004-54	6.4	3	3	4	2	2.2	3.2			
69-006-54	9.6	4	4	6	3	3	4.8			
69-008-54	12.8	5	5.5	8	4	4	6.4			
69-010-54	16	7.5	7.5	10	5	5.5	8			
69-013-54	20.8	10	11	13	7.5	7.5	10.4			
69-018-54	29	15	15	18	10	11	14.4			
69-021-54	34	20	18.5	21	15	15	16.8			
69-025-54	40	25	22	25	20	18.5	20			
69-033-54	53	30	30	33	25	22	26			D69
69-042-54	67	40	37	42	30	30	34			
69-050-54	80	50	45	50	40	37	40			
69-058-54	93	60	55	58	40	45	46			
69-082-54	98	75	75	82	60	55	66			F69
69-090-54	108	75	90	90	60	75	72			
69-109-54	131	100	110	109	75	90	87			
69-146-54	175	125	132	146	100	110	117			
69-175-54	210	150	160	175	125	132	140			
69-200-54	240	200	200	200	150	160	160			
69-250-IP	300	250	250	250	200	200	200	H69 (2)		
69-300-IP	360	300	315	300	250	250	240			
69-375-IP	450	350	355	375	300	315	300			
69-400-IP	480	400	400	400	300	315	320			
69-430-IP	516	400	450	430	350	315	344	I69 (3)		
69-500-IP	600	500	500	500	400	355	400			
69-595-IP	720	600	600	600	500	450	480			
69-650-IP	780	650	630	650	550	500	520	J69 (4)		
69-720-IP	864	750	710	720	600	560	576			
69-800-IP	960	850	800	800	650	630	640	KA69 (5)		
69-905-IP	1080	950	900	900	750	710	720			
69-995-IP	1200	1000	1000	1000	850	800	800			
69-1K2-IP	1440	1200	1200	1200	1000	900	960			
69-1K4-IP	1680	1500	1400	1400	1200	1120	1120			
69-1K6-IP	1920	1700	1600	1600	1300	1250	1280			
69-1K8-IP	2160	1900	1800	1800	1500	1400	1440			
69-2K0-IP	2400	2100	2000	2000	1700	1600	1600			
69-2K2-IP	2640	2300	2200	2200	1800	1700	1760			
69-2K4-IP	2880	2500	2400	2400	2000	1900	1920			
69-2K6-IP	3120	2700	2600	2600	2200	2000	2080			
69-2K8-IP	3360	3000	2800	2800	2400	2200	2240			
69-3K0-IP	3600	3200	3000	3000	2500	2400	2400	T69 (15)		

* Available during limited time and as long as allowed by drive temperature.

** PEBB= Power Electronic Building Block (power module).

14.2 General electrical specifications

Table 58 General electrical specifications

General	
Mains voltage: VFX48 VFX52 VFX69	230-480 V +10%/-15% (-10% at 230 V) 440-525 V +10 %/-15 % 500-690 V +10%/-15%
Mains frequency:	45 to 65 Hz
Mains voltage imbalance:	max. $\pm 3.0\%$ of nominal phase to phase input voltage.
Input power factor:	0.95
Output voltage:	0–Mains supply voltage:
Output frequency:	0–400 Hz
Output switching frequency:	3 kHz 2 kHz sizes 48-293/295/365
Efficiency at nominal load:	97% for models 002 to 021 98% for models 025 to 3K0
Control signal inputs: Analogue (differential)	
Analogue Voltage/current: Max. input voltage: Input impedance:	0- ± 10 V/0-20 mA via switch +30 V/30 mA 20 kohm (voltage) 250 kohm (current)
Resolution: Hardware accuracy: Non-linearity	11 bits + sign 1% type + 1 $\frac{1}{2}$ LSB fsd 1 $\frac{1}{2}$ LSB
Digital:	
Input voltage: Max. input voltage: Input impedance:	High: >9 VDC, Low: <4 VDC +30 VDC <3.3 VDC: 4.7 kohm ≥ 3.3 VDC: 3.6 kohm
Signal delay:	≤ 8 ms
Control signal outputs Analogue	
Output voltage/current: Max. output voltage: Short-circuit current (∞): Output impedance: Resolution: Maximum load impedance for current Hardware accuracy: Offset: Non-linearity:	0-10 V/0-20 mA via software setting +15 V @5 mA cont. +15 mA (voltage), +140 mA (current) 10 ohm (voltage) 10 bit 500 ohm 1.9% type fsd (voltage), 2.4% type fsd (current) 3 LSB 2 LSB
Digital	
Output voltage: Shortcircuit current(∞):	High: >20 VDC @50 mA, >23 VDC open Low: <1 VDC @50 mA 100 mA max (together with +24 VDC)
Relays	
Contacts	0.1 – 2 A/Umax 250 VAC or 42 VDC (30 VDC acc. to UL requirement) for general Purpose or Resistive use only .
References	
+10VDC -10VDC +24VDC	+10 V _{DC} @10 mA Short-circuit current +30 mA max - 10 V _{DC} @10 mA +24 V _{DC} Short-circuit current +100 mA max (together with Digital Outputs)

14.3 Operation at higher temperatures

Most Emotron AC drives are made for operation at maximum of 40 °C (104 °F) ambient temperature. Frame sizes C69/D69/C2(69)/D2(69) are rated at 45 °C (113 °F). However, it is possible to use the AC drive at higher temperatures with reduced output rating.

Possible derating

Derating of output current is possible with -1% / degree Celsius to max +15 °C * (= max temp 55 °C) or -0.55% / degree Fahrenheit to max +27 °F (= max temp. 131 °F).

* max +10 °C for sizes C69/D69/C2(69)/D2(69).

Example

In this example we have a motor with the following data that we want to run at the ambient temperature of 45 °C (113 °F):

Voltage 400 V
Current 72 A
Power 37 kW (50 hp)

Select AC drive

The ambient temperature is 5 °C (9 °F) higher than the maximum ambient temperature. The following calculation is made to select the correct AC drive model.

Derating is possible with loss in performance of 1%/°C (0.55% / degree F).

Derating will be: $5 \times 1\% = 5\%$

Calculation for model VFX48-074

$74 \text{ A} - (5\% \times 74) = 70.3 \text{ A}$; this is not enough.

Calculation for model VFX48-090

$90 \text{ A} - (5\% \times 90) = 85.5 \text{ A}$

In this example we select the VFX48-090.

14.4 Dimensions and Weights

The table below gives an overview of the dimensions and weights. The models 002 to 295 and 365 are available in IP54 as wall mounted modules.

The models 300 to 3K0 consist of 2, 3, 4 15 paralleled power electronic building block (PEBB) available in IP20 intended for cabinet mounting or mounted in IP54 standard cabinet.

Protection class IP54 is according to the EN 60529 standard.

Table 59 Mechanical specifications, VFX48, VFX52 for IP20 module and IP54

Models	Frame size	IP20 module Dim. H x W x D mm (in)	IP54 Dim. H x W x D mm (in)	IP20 Weight kg (lb)	IP54 Weight kg (lb)
003 to 018	B	-	350/416* x 203 x 200 (13.8/16.4* x 8.0 x 7.9)	-	12.5 (27.6)
026 to 046	C	-	440/512* x 178 x 292 (17.3/20.2* x 7.0 x 11.5)	-	24 (52.9)
061 to 074	D	-	545/590* x 220 x 295 (21.5/23.2* x 8.7 x 11.5)	-	32 (70.6)
90 to 109	E	-	950 x 285 x 314 (37.4 x 11.2 x 12.4)	-	56 (123.5)
146 to 175	E	-	950 x 285 x 314 (37.4 x 11.2 x 12.4)	-	60 (132.3)
210 to 295	F	-	950 x 345 x 314 (37.4 x 13.6 x 12.4)	-	75 (165.4)
365	FA	-	1395 x 345 x 365 (54.9 x 13.6 x 14.4)	-	95 (209)
300 to 375	G (2xE)	1036 x 500 x 390 (40.8 x 19.7x 15.4)	2250 x 600 x 600 (88.6 x 23.6 x 23.6)	140 (308.6)	350 (771.6)
430 to 500	H (2xF)	1036 x 500 x 450 (40.8 x 19.7x 17.7)	2250 x 600 x 600 (88.6 x 23.6 x 23.6)	170 (374.8)	380 (837.8)
600 to 750	I (3xF)	1036 x 730 x 450 (40.8 x 28.7x 17.7)	2250x 900 x 600 (88.6 x 35.4 x 23.6)	248 (546.7)	506 (1116)
860 to 1K0	J (2xH)	1036 x 1100 x 450 (40.8 x 43.3x 17.7)	2250 x 1200 x 600 (88.6 x 47.2 x 23.6)	340 (749.6)	697 (1537)
1K15 to 1K25	KA (H+I)	1036 x 1365 x 450 (40.8 x 53.7x 17.7)	2250 x 1500 x 600 (88.6 x 59.1 x 23.6)	418 (921.5)	838 (1847)
1K35 to 1K5	K (2xI)	1036 x 1630 x 450 (40.8 x 64.2x 17.7)	2250 x 1800 x 600 (88.6 x 70.9 x 23.6)	496 (1093)	987 (2176)
1K75	L (2xH+I)	1036 x 2000 x 450 (40.8 x 78.7x 17.7)	2250 x 2100 x 600 (88.6 x 82.7 x 23.6)	588 (1296)	1190 (2624)
2K0	M(H+2xI)	1036 x 2230 x 450 (40.8 x 87.8x 17.7)	2250 x 2400 x 600 (88.6 x 94.5 x 23.6)	666 (1468)	1323 (2917)
2K25	N (3xI)	1036 x 2530 x 450 (40.8 x 99.6x 17.7)	2250 x 2700 x 600 (88.6 x 106.3 x 23.6)	744 (1640)	1518 (3347)
2K5	O (2xH+2xI)	1036 x 2830 x 450 (40.8 x 111.4x 17.7)	2250 x 3000 x 600 (88.6 x 118.1 x 23.6)	836 (1834)	1772 (3907)

* Enclosure height/Total height

Table 60 Mechanical specifications, VFX69 for IP20 module and IP54

Models	Frame size	IP20 module Dim. H x W x D mm (in)	IP54 Dim. H x W x D mm (in)	Weight IP20 kg (lb)	Weight IP54 kg (lb)
002 to 025	C69	-	440/512* x 178 x 314 (17.3/20.2 x 7.0 x 12.4)	-	17 (37.5)
033 to 058	D69	-	545/590* x 220 x 282 (21.5/23.2 x 8.7 x 11.1)	-	32 (70.5)
082 to 200	F69	-	1090 x 345 x 312 (42.9 x 13.6 x 12.3)	-	77 (169.8)
250 to 375	H69 (2xF69)	1176 x 500 x 450 (46.3 x 19.7 x 17.7)	2250 x 600 x 600 (88.6 x 23.6 x 23.6)	176 (388)	399 (879.6)
430 to 595	I69 (3xF69)	1176 x 730 x 450 (46.3 x 28.7 x 17.7)	2250 x 900 x 600 (88.6 x 35.4 x 23.6)	257 (566.6)	563 (1241)
650 to 800	J69 (2xH69)	1176 x 1100 x 450 (46.3 x 43.3 x 17.7)	2250 x 1200 x 600 (88.6 x 47.2 x 23.6)	352 (776)	773 (1704)
905 to 995	KA69 (H69+I69)	1176 x 1365 x 450 (46.3 x 53.7 x 17.7)	2250 x 1500 x 600 (88.6 x 59.1 x 23.6)	433 (954.6)	937 (2066)
750 to 1K2	K69 (2xI69)	1176 x 1630 x 450 (46.3 x 64.2 x 17.7)	2250 x 1800 x 600 (88.6 x 70.9 x 23.6)	514 (1133)	1100 (2425)
1K4	L69 (2xH69+I69)	1176 x 2000 x 450 (46.3 x 78.7 x 17.7)	2250 x 2100 x 600 (88.6 x 82.7 x 23.6)	609 (1343)	1311 (2890)
1K6	M69 (H69+2xI69)	1176 x 2230 x 450 (46.3 x 87.8 x 17.7)	2250 x 2400 x 600 (88.6 x 94.5 x 23.6)	690 (1521)	1481 (3265)
1K8	N69 (3xI69)	1176 x 2530 x 450 (46.3 x 99.6 x 17.7)	2250 x 2700 x 600 (88.6 x 106.3 x 23.6)	771 (1700)	1651 (3640)
2K0	O69 (2xH69+2xI69)	1176 x 2830 x 450 (46.3 x 111.4 x 17.7)	2250 x 3000 x 600 (88.6 x 118.1 x 23.6)	866 (1909)	1849 (4076)
2K2	P69 (H69+3xI69)	1176 x 3130 x 450 (46.3 x 123.2 x 17.7)	2250 x 3300 x 600 (88.6 x 129.9 x 23.6)	947 (2088)	2050 (4519)
2K4	Q69 (4xI69)	1176 x 3430 x 450 (46.3 x 135 x 17.7)	2250 x 3600 x 600 (88.6 x 141.7 x 23.6)	1028 (2266)	2214 (4881)
2K6	R69 (2xH69+3xI69)	1176 x 3730 x 450 (46.3 x 146.9 x 17.7)	2250 x 3900 x 600 (88.6 x 153.5 x 23.6)	1123 (2476)	2423 (5342)
2K8	S69 (H69+4xI69)	1176 x 4030 x 450 (46.3 x 158.7 x 17.7)	2250 x 4200 x 600 (88.6 x 165.4 x 23.6)	1204 (2654)	2613 (5761)
3K0	T69 (5xI69)	1176 x 4330 x 450 (46.3 x 170.5 x 17.7)	2250 x 4500 x 600 (88.6 x 177.2 x 23.6)	1285 (2833)	2777 (6122)

* Enclosure height/Total height

Dimensions and weights for models Emotron VFX48 - IP20/21 version

The table below gives an overview of the dimensions and weights of the Emotron VFX IP20/21 version.

These AC drives are available as wall mounted modules;
The IP20 version is optimised for cabinet mounting.
With the optional top cover, protection class is in compliance with IP21, making it suitable for mounting directly on the electrical room wall.

The protection classes IP20 and IP21 are defined according to the EN 60529 standard.

Table 61 Mechanical specifications, VFX48 - IP20 and IP21 version

Models	Frame size	IP20 Dim. H1/H2 x W x D mm (in)	IP21* Dim. H1/H2 x W x D mm (in)	IP20/21 Weight kg (lb)
025 to 058	C2	438 / 536 x 176 x 267 (17.2 / 21.1 x 6.9 x 10.5)	438 / 559 x 196 x 282 (17.2 / 22 x 7.7 x 11.1)	17 (37.5)
060 to 105	D2	545 / 658 x 220 x 291 (21.5 / 25.9 x 8.7 x 11.5)	545 / 670 x 240 x 307 (21.5 / 26.4 x 9.5 x 12.1)	30 (66)
142 to 171	E2	956 / 956 x 275 x 294 (37.6 / 37.6 x 10.8 x 11.6)	956 / 956 x 275 x 323 (37.6 / 37.6 x 10.8 x 12.7)	53 (117)
205 to 293	F2	956 / 956 x 335 x 294 (37.6 / 37.6 x 13.2 x 11.6)	956 / 956 x 335 x 323 (37.6 / 37.6 x 13.2 x 12.7)	69 (152)
365	FA2	1090 / 1250 x 335 x 306 (42.9 / 49.5 x 13.2 x 12.1)	-	84 (185)

H1 = Enclosure height.

H2 = Total height including cable interface.

* with optional top cover

Table 62 Mechanical specifications, VFX69 - IP20 and IP21 version

Models	Frame size	IP20 Dim. H1/H2 x W x D mm (in)	IP20 Weight kg (lb)
002 to 025	C2(69)	438 / 536 x 176 x 267 (17.2 / 21.1 x 6.9 x 10.5)	17 (37.5)
033 to 058	D2(69)	545 / 658 x 220 x 291 (21.5 / 25.9 x 8.7 x 11.5)	30 (66)

H1 = Enclosure height.

H2 = Total height including cable interface.

* with optional top cover

14.5 Environmental conditions

Table 63 Operation

Parameter	Normal operation
Nominal ambient temperature	0 °C–40 °C (32 °F - 104 °F) See chapter 14.3 page 243 for different conditions 0 °C - 45 °C (32 °F - 113 °F) for sizes C69/D69/C2(69)/D2(69)
Atmospheric pressure	86–106 kPa (12.5 - 15.4 PSI)
Relative humidity according to IEC 60721-3-3	Class 3K4, 5...95% and non condensing
Contamination, according to IEC 60721-3-3	No electrically conductive dust allowed. Cooling air must be clean and free from corrosive materials. Chemical gases, class 3C2. Solid particles, class 3S2.
Vibrations	According to IEC 600068-2-6, Sinusoidal vibrations: 10<f<57 Hz, 0.075 mm (0.00295 ft) 57<f<150 Hz, 1g (0,035 oz)
Altitude	0–1000 m (0 - 3280 ft) 480V AC drives, with derating 1%/100 m (328 ft) of rated current up to 4000 m (13123 ft) 690V AC drives, with derating 1%/100 m (328 ft) of rated current up to 2000 m (6562) ft Coated boards required for 2000 - 4000 m(6562 - 13123 ft)

Table 64 Storage

Parameter	Storage condition
Temperature	-20 to +60 °C (-4 to + 140 °F)
Atmospheric pressure	86–106 kPa (12.5 - 15.4 PSI)
Relative humidity according to IEC 60721-3-1	Class 1K4, max. 95% and non condensing and no formation of ice.



WARNING!

If the device is stored for more than two years, the DC link capacitor of the devices must be reformed during commissioning.

The reforming procedure is described in manual "Capacitor reforming unit".

14.6 Fuses and glands

14.6.1 According to IEC ratings

Use mains fuses of the type gL/gG conforming to IEC 269 or breakers with similar characteristics. Check the equipment first before installing the glands.

Max. Fuse = maximum fuse value that still protects the AC drive and upholds warranty.

NOTE: The dimensions of fuse and cable cross-section are dependent on the application and must be determined in accordance with local regulations.

NOTE: The dimensions of the power terminals used in the cabinet drive models 300 to 3K0 can differ depending on customer specification.

Table 65 Fuses, cable cross-sections and glands for VFX48 and VFX52 models

Model VFX	Nominal input current [A]	Maximum value fuse [A]	Cable glands (clamping range) *	
			mains / motor	Brake
##-003-54	2.2	4	M32 opening M20 + reducer (6–12 mm(0.24 - 0.47 in))	M25 opening M20 + reducer (6–12 mm(0.24 - 0.47 in))
##-004-54	3.5	4		
##-006-54	5.2	6		
##-008-54	6.9	10	M32 (12–20)/M32 opening M25+reducer (10-14 mm(0.39 - 0.55 in))	M25 (10-14 mm(0.39 - 0.55 in))
##-010-54	8.7	10		
##-013-54	11.3	16		
##-018-54	15.6	20	M32 (16–25)/M32 (13–18)	
##-025-20	22	25	- (12 - 16 mm(0.55 - 0.63 in))	
##-026-54	22	25	M32 (15–21 mm(0.59 - 0.83 in))	M25
##-030-20	26	35	- (16 - 20 mm (0.63 - 0.79 in))	
##-031-54	26	35	M32 (15–21 mm(0.59 - 0.83 in))	M25
##-036-20	31	35	- (20 - 24 mm(0.79 - 0.94))	
##-037-54	31	35	M40 (19–28 mm (0.75 - 1.1 in))	M32
##-045-20	38	50	- (24 - 28 mm(0.94 - 1.1 in))	
##-046-54	38	50	M40 (19–28 mm (0.75 - 1.1 in))	M32
##-058-20	50	63	- (24 - 28 mm(0.94 - 1.1 in))	
##-060-20	52	63	- (28 - 32 mm(1.1 - 1.26 in))	
##-061-54	52	63	M50 (27 - 35 mm(1.06 - 1.38 in))	M40 (19–28 mm (0.75 - 1.1 in))
##-072-20	64	80	- (28 - 32 mm(1.1 - 1.26 in))	
##-074-54	65	80	M50 (27 - 35 mm(1.06 - 1.38 in))	M40 (19–28 mm(0.75 - 1.1 in))
##-088-20	78	100	- (32 - 36 mm(1.26 - 1.42 in))	
##-090-54	78	100	(Ø17-42 mm (0.67 - 1.65 in)) cable flexible leadthrough or M50 opening.	(Ø11-32 mm(0.43 - 1.26 in)) Cable flexible leadthrough or M40 opening.
##-105-20	91	100	(32 - 36 mm(1.26 - 1.42 in))	
##-109-54	94	100	(Ø17-42 mm (0.67 - 1.65 in)) cable flexible leadthrough or M50 opening	(Ø11-32 mm(0.43 - 1.26 in)) Cable flexible leadthrough or M40 opening
##-142-20	126	160	- (40 - 44 mm (1.57 - 1.73 in))	
##-146-54	126	160	(Ø17-42 mm (0.67 - 1.65 in)) cable flexible leadthrough or M50 opening.	(Ø11-32 mm(0.43 - 1.26 in)) Cable flexible leadthrough or M40 opening.
##-171-20	152	160	- (40 - 44 mm (1.57 - 1.73 in))	
##-175-54	152	160	(Ø17-42 mm (0.67 - 1.65 in)) cable flexible leadthrough or M50 opening.	(Ø11-32 mm(0.43 - 1.26 in)) Cable flexible leadthrough or M40 opening.

Table 65 Fuses, cable cross-sections and glands for VFX48 and VFX52 models

Model VFX	Nominal input current [A]	Maximum value fuse [A]	Cable glands (clamping range) *	
			mains / motor	Brake
##-205-20	178	200	- (48 - 52 mm(1.89 - 2.05 in)/ 52 - 56 mm (2.05 - 2.2 in))	- (44 - 48 mm (1.73 - 1.89 in))
##-210-54	182	200	(Ø23 - 55 mm (0.9 - 2.16 in)) cable flexible leadthrough or M63 opening.	(Ø17- 42 mm (0.67 - 1.65 in)) cable flexible leadthrough or M50 opening.
##-228-54	197	250		
##-244-20	211	250	- (48 - 52 mm (1.89 - 2.05 in)/ 52 - 56 mm (2.05 - 2.2 in))	- (44 - 48 mm (1.73 - 1.89 in))
##-250-54	216	250	(Ø 23 - 55 mm (0.9 - 2.16 in)) cable flexible leadthrough or M63 opening.	(Ø 23 - 55 mm (0.9 - 2.16 in)) cable flexible leadthrough or M63 opening.
##-295-54	256	300		
##-293-20	254	300	- (48 - 52 mm (1.89 - 2.05 in)/ 52 - 56 mm (2.05 - 2.2 in))	- (44 - 48 mm (1.73 - 1.89 in))
##-365-54	324	355	(Ø 23 - 55 mm (0.9 - 2.16 in)) cable flexible leadthrough or M63 opening.	(Ø 23 - 55 mm (0.9 - 2.16 in)) cable flexible leadthrough or M63 opening.
#-365-20	324	355	M10 bolt for cable lugs	M8 bolt for cable lugs
##-300-54	260	300	--	--
##-375-IP	324	355		
69-400-IP	346	400		
##-430-IP	372	400		
##-500-IP	432	500		
##-600-IP	520	630		
##-650-IP	562	630		
##- 720, 750- IP	648	710		
##-860-IP	744	800		
##-900-IP	795	900		
##-1K0-IP	864	1000		
##-1K15-IP	996	1250		
##-1K2-IP	1037	1250		
##-1K25-IP	1037	1250		
##-1K35-IP	1170	1250		
##-1K5-IP	1296	1500		
##-1K75-IP	1516	1600		
##-2K0-IP	1732	2 x 900		
##-2K25-IP	1949	2 x 1000		
##-2K5-IP	2165	2 x 1250		

Note: For IP54 models 48/52-003 to -074 and 69-002 to -058 cable glands are optional.

* IP20/21 models are equipped with cable clamps instead of glands.

For data on cable connection ranges, see section 3.4.3, page 39.

Table 66 Fuses, cable cross-sections and glands for 690V models

Model VFX	Nominal input current [A]	Maximum value fuse [A]	Cable glands (clamping range) *	
			mains / motor	Brake
69-002-54	1.6	4	M32 (8 - 17 / 9 - 17 mm)	M25 (9 - 17 mm)
69-002-20	1.6	4	8 - 12 mm (0.32 - 0.47 in) 12 - 16 mm (0.47 - 0.63 in)	
69-003-54	2.3	4	M32 (8 - 17 / 9 - 17 mm)	M25 (9 - 17 mm)
69-003-20	2.3	4	8 - 12 mm (0.32 - 0.47 in) 12 - 16 mm (0.47 - 0.63 in)	
69-004-54	3.1	4	M32 (8 - 17 / 9 - 17 mm)	M25 (9 - 17 mm)
69-004-20	3.1	4	8 - 12 mm (0.32-0.47 in) 12 - 16 mm (0.47-0.63 in)	
69-006-54	4.7	6	M32 (8 - 17 / 9 - 17 mm)	M25 (9 - 17 mm)
69-006-20	4.7	6	8 - 12 mm (0.32 - 0.47 in) 12 - 16 mm (0.47 - 0.63 in)	
69-008-54	6.3	10	M32 (8-17 / 9 - 17 mm)	M25 (9 - 17 mm)
69-008-20	6.3	10	8 - 12 mm (0.32 - 0.47 in) 12 - 16 mm (0.47 - 0.63 in)	
69-010-54	7.8	10	M32 (8-17 / 9 - 17 mm)	M25 (9 - 17 mm)
69-010-20	7.8	10	8 - 12 mm (0.32 - 0.47 in) 12 - 16 mm (0.47 - 0.63 in)	
69-013-54	10.4	16	M32 (9 - 21 / 11 - 21 mm)	M25 (9 - 17 mm)
69-013-20	10.4	16	12 - 16 mm (0.47 - 0.63 in) 16 - 22 mm (0.63 - 0.87 in)	
69-018-54	15.3	20	M32 (9 - 21 / 11 - 21 mm)	M25 (9 - 17 mm)
69-018-20	15.3	20	12 - 16 mm (0.47 - 0.63 in) 16 - 22 mm (0.63 - 0.87 in)	
69-021-54	17.8	25	M32 (9 - 21 / 11 - 21 mm)	M25 (9 - 17 mm)
69-021-20	17.8	25	12 - 16 mm (0.47 - 0.63 in) 16 - 22 mm (0.63 - 0.87 in)	
69-025-54	21.2	25	M32 (9-21 / 11-21 mm)	M25 (9 - 17 mm)
69-025-20	21.2	25	12 - 16 mm (0.47 - 0.63 in) 16 - 22 mm (0.63 - 0.87 in)	
69-033-54	28	35	M50 (19 - 28 / 16 - 28 mm)	M40 (16 - 28 mm)
69-033-20	28	35	16 - 22 mm (0.63 - 0.87 in) 22 - 28 mm (0.87 - 1.1 in)	
69-042-54	36	50	M50 (19 - 28 / 16-28 mm)	M40 (16 - 28 mm)
69-042-20	36	50	16 - 22 mm (0.63 - 0.87 in) 22 - 28 mm (0.87 - 1.1 in)	
69-050-54	43	63	M50 (19 - 28 / 16 - 28 mm)	M40 (16 - 28 mm)
69-050-20	43	63	16 - 22 mm (0.63 - 0.87 in) 22 - 28 mm (0.87 - 1.1 in)	
69-058-54	49	63	M50 (19 - 28 / 16 - 28 mm)	M40 (16 - 28 mm)
69-058-20	49	63	16 - 22 mm (0.63 - 0.87 in) 22 - 28 mm (0.87 - 1.1 in)	
69-082-54	72	100	(Ø23-55 mm (0.9 - 2.16 in)) Cable flexible leadthrough or M63 opening. (Ø17-42 mm (0.67 - 1.65 in)) Cable flexible leadthrough or M50 opening.	
69-090-54	78	100		
69-109-54	94	100		
69-146-54	126	160		
69-175-54	152	160		
69-200-54	173	200		

Table 66 Fuses, cable cross-sections and glands for 690V models

Model VFX	Nominal input current [A]	Maximum value fuse [A]	Cable glands (clamping range) *			
			mains / motor	Brake		
69-250-IP	216	250	--	--		
69-300-IP	260	300				
69-375-IP	324	355				
69-400-IP	346	400				
69-430-IP	372	400				
69-500-IP	432	500				
69-595-IP	516	630				
69-650-IP	562	630				
69-720-IP	648	710				
69-800-IP	692	800				
69-905-IP	795	900				
69-995-IP	864	1000				
69-1K2-IP	1037	1250			--	--
69-1K4-IP	1213	1500				
69-1K6-IP	1382	1600				
69-1K8-IP	1555	2 x 900				
69-2K0-IP	1732	2 x 900				
69-2K2-IP	1900	2 x 1000				
69-2K4-IP	2074	2 x 1250				
69-2K6-IP	2246	2 x 1250				
69-2K8-IP	2419	2 x 1500				
69-3K0-IP	2592	2 x 1500				

Note: For IP54 models 48/52-003 to -074 and 69-002 to -058 cable glands are optional.

* IP20/21 models are equipped with cable clamps instead of glands.

For data on cable connection ranges, see section 3.4.3, page 39

14.6.2 Fuses according to NEMA ratings

Table 67 Types and fuses

Model VFX	Input current [Arms]	Mains input fuses	
		UL Class J TD (A)	Ferraz-Shawmut type
48-003	2.2	6	AJT6
48-004	3.5	6	AJT6
48-006	5.2	6	AJT6
48-008	6.9	10	AJT10
48-010	8.7	10	AJT10
48-013	11.3	15	AJT15
48-018	15.6	20	AJT20
48-025	21.7	25	AJT25
48-026	22	25	AJT25
48-030	26	30	AJT30
48-031	26	30	AJT30
48-036	31	35	AJT35
48-037	31	35	AJT35
48-045	39	45	AJT45
48-046	40	45	AJT45
48-058	50	60	AJT60
48-060	52	60	AJT60
48-061	52	60	AJT60
48-072	64	80	AJT80
48-074	65	80	AJT80
48-088	78	100	AJT100
48-090	78	100	AJT100
48-105	91	110	AJT110
48-109	94	110	AJT110
48-142	126	125	AJT150
48-146	126	150	AJT150
48-171	152	175	AJT175
48-175	152	175	AJT175
48-205	178	200	AJT200
48-210	182	200	AJT200
48-228	197	250	AJT250
48-244	211	250	AJT250
48-250	216	250	AJT250
48-293	254	300	AJT300
48-295	256	300	AJT300
48-300	260	300	AJT300
48-365	324	350	AJT350
48-375	324	350	AJT350
48-430	372	400	AJT400
48-500	432	500	AJT500
48-600	520	600	AJT600
48-650	562	600	AJT600
48-720	648	700	A4BQ700
48-750	648	700	A4BQ700
48-860	744	800	A4BQ800
48-900	795	800	A4BQ800

Table 67 Types and fuses

Model VFX	Input current [Arms]	Mains input fuses	
		UL Class J TD (A)	Ferraz-Shawmut type
48-1K0	864	1000	A4BQ1000
48-1K15	996	1000	A4BQ1000
48-1K2	1037	1200	A4BQ1200
48-1K25	1037	1200	A4BQ1200
48-1K35	1170	1200	A4BQ1200
48-1K5	1296	1500	A4BQ1500
48-1K75	1516	1600	A4BQ1600
48-2K0	1732	1800	A4BQ1800
48-2K25	1949	2000	A4BQ2000
48-2K5	2165	2500	A4BQ2500

14.7 Control signals

Table 68

Terminal X1	Name:	Function (Default):	Signal:	Type:
1	+10 V	+10 VDC Supply voltage	+10 VDC, max 10 mA	output
2	AnIn1	Process reference	0 -10 VDC or 0/4-20 mA bipolar: -10 - +10 VDC or -20 - +20 mA	analogue input
3	AnIn2	Off	0 -10 VDC or 0/4-20 mA bipolar: -10 - +10 VDC or -20 - +20 mA	analogue input
4	AnIn3	Off	0 -10 VDC or 0/4-20 mA bipolar: -10 - +10 VDC or -20 - +20 mA	analogue input
5	AnIn4	Off	0 -10 VDC or 0/4-20 mA bipolar: -10 - +10 VDC or -20 - +20 mA	analogue input
6	-10 V	-10VDC Supply voltage	-10 VDC, max 10 mA	output
7	Common	Signal ground	0V	output
8	DigIn 1	RunL	0-8/24 VDC	digital input
9	DigIn 2	RunR	0-8/24 VDC	digital input
10	DigIn 3	Off	0-8/24 VDC	digital input
11	+24 V	+24VDC Supply voltage	+24 VDC, 100 mA	output
12	Common	Signal ground	0 V	output
13	AnOut 1	Min speed to max speed	0 ±10 VDC or 0/4- +20 mA	analogue output
14	AnOut 2	0 to max torque	0 ±10 VDC or 0/4- +20 mA	analogue output
15	Common	Signal ground	0 V	output
16	DigIn 4	Off	0-8/24 VDC	digital input
17	DigIn 5	Off	0-8/24 VDC	digital input
18	DigIn 6	Off	0-8/24 VDC	digital input
19	DigIn 7	Off	0-8/24 VDC	digital input
20	DigOut 1	Ready	24 VDC, 100 mA	digital output
21	DigOut 2	Brake	24 VDC, 100 mA	digital output
22	DigIn 8	RESET	0-8/24 VDC	digital input
Terminal X2				
31	N/C 1	Relay 1 output	potential free change over 0.1 – 2 A $U_{max} = 250 \text{ VAC or } 42 \text{ VDC}$	relay output
32	COM 1	Trip, active when the AC drive is in a TRIP condition		
33	N/O 1	N/C is opened when the relay is active (valid for all relays) N/O is closed when the relay is active (valid for all relays)		
41	N/C 2	Relay 2 Output	potential free change over 0.1 – 2 A $U_{max} = 250 \text{ VAC or } 42 \text{ VDC}$	relay output
42	COM 2	Run, active when the AC drive is started		
43	N/O 2			
Terminal X3				
51	COM 3	Relay 3 Output	potential free change over 0.1 – 2 A $U_{max} = 250 \text{ VAC or } 42 \text{ VDC}$	relay output
52	N/O 3	Off		

NOTE: Possible potentiometer value in range of 1 kΩ to 10 kΩ (¼ Watt) linear, where we advice to use a linear 1 kΩ / ¼ W type potentiometer for best control linearity.

15. Menu List

On our home page in the download area, you could find a "Communication information" list and a list to note Parameter set information .

		Factory setting	Customer	Page
100	Preferred View			88
110	1st Line	Process Val		
120	2nd Line	Torque		
130	3rd Line	Frequency		
140	4th Line	VSD Status		
150	5th Line	DC Voltage		
160	6th Line	IGBT Temp		
170	View mode	Normal 100		
200	Main Setup			
210	Operation			91
211	Language	English		
212	Select Motor	M1		
213	Drive Mode	Speed		
214	Ref Control	Remote		
215	Run/Stp Ctrl	Remote		
216	Reset Ctrl	Remote		
217	Local/Rem			
2171	LocRefCtrl	Standard		
2172	LocRunCtrl	Standard		
218	Lock Code?	0		
219	Rotation	R+L		
21A	Level/Edge	Level		
21B	Supply Volts	Not Defined		
21C	Supply Type	AC Supply		
220	Motor Data			97
221	Motor Volts	U_{NOM} V		
222	Motor Freq	50Hz		
223	Motor Power	(P_{NOM}) W		
224	Motor Curr	(I_{MOT}) A		
225	Motor Speed	(n_{MOT}) rpm		
226	Motor Poles	4		
227	Motor Cosφ	$cosφ_{NOM}$		
228	Motor Vent	Self		
229	Motor ID-Run	Off		
22B	Encoder	Off		
22C	Enc Pulses	1024		
22D	Enc Speed	0rpm		
22F	Enc Puls Ctr	0		
22G	Enc Fault			
22G1	Enc F Delay	Off		
22G2	Enc F Band	10%		
22G3	Max EncFCtr	0.000s		
22H	Phase order	Normal		
22I	Motor type	Async		
22J	PMSM Data			
22J1	BEMF	[Motor] V		
22J2	Rs (Ω/ph)	[Motor]		
22J3	Lsd (mH/ph)	[Motor]		
22J4	Lsq (mH/ph)	[Motor]		
230	Mot Protect			104
231	Mot I ² t Type	Trip		
232	Mot I ² t Curr	100%		
233	Mot I ² t Time	60s		

		Factory setting	Customer	Page
234	Thermal Prot	Off		
235	Motor Class	F 140°C		
236	PT100 Inputs	PT100 1+2+3		
237	Motor PTC	Off		
240	Set Handling			108
241	Select Set	A		
242	Copy Set	A>B		
243	Default>Set	A		
244	Copy to CP	No Copy		
245	Load from CP	No Copy		
250	Autoreset			110
251	No of Trips	0		
252	Overtemp	Off		
253	Overvolt D	Off		
254	Overvolt G	Off		
255	Overvolt	Off		
256	Motor Lost	Off		
257	Locked Rotor	Off		
258	Power Fault	Off		
259	Undervoltage	Off		
25A	Motor I ² t	Off		
25B	Motor I ² t TT	Trip		
25C	PT100	Off		
25D	PT100 TT	Trip		
25E	PTC	Off		
25F	PTC TT	Trip		
25G	Ext Trip	Off		
25H	Ext Trip TT	Trip		
25I	Com Error	Off		
25J	Com Error TT	Trip		
25K	Min Alarm	Off		
25L	Min Alarm TT	Trip		
25M	Max Alarm	Off		
25N	Max Alarm TT	Trip		
25O	Over curr F	Off		
25P	Pump	Off		
25Q	Over speed	Off		
25R	Ext Mot Temp	Off		
25S	Ext Mot TT	Trip		
25T	LC Level	Off		
25U	LC Level TT	Trip		
25V	Brk Fault	Off		
25W	Encoder	Off		
25X	Crane Deviat	Off		
25Y	Crane Comm	Off		
260	Serial Com			117
261	Com Type	RS232/485		
262	RS232/485			117
2621	Baudrate	9600		
2622	Address	1		
263	Fieldbus			118
2631	Address	62		
2632	PrData Mode	Basic		
2633	Read/Write	RW		
2634	AddPrValue	0		
2635	CANBaudrate	8		

		Factory setting	Customer	Page
264	Comm Fault			120
	2641 ComFit Mode	Off		
	2642 ComFit Time	0.5 s		
265	Ethernet			120
	2651 IP Address	0.0.0.0		
	2652 MAC Address	000000000000		
	2653 Subnet Mask	0.0.0.0		
	2654 Gateway	0.0.0.0		
	2655 DHCP	Off		
266	FB Signal			121
	2661 FB Signal 1	0		
	2662 FB Signal 2	0		
	2663 FB Signal 3	0		
	2664 FB Signal 4	0		
	2665 FB Signal 5	0		
	2666 FB Signal 6	0		
	2667 FB Signal 7	0		
	2668 FB Signal 8	0		
	2669 FB Signal 9	0		
	266A FB Signal 10	0		
	266B FB Signal 11	0		
	266C FB Signal 12	0		
	266D FB Signal 13	0		
	266E FB Signal 14	0		
	266F FB Signal 15	0		
	266G FB Signal 16	0		
269	FB Status			
300	Process			122
	310 Set/View ref	Orpm		
	320 Proc Setting			122
	321 Proc Source	Speed		
	322 Proc Unit	rpm		
	323 User Unit	0		
	324 Process Min	0		
	325 Process Max	0		
	326 Ratio	Linear		
	327 F(Val) PrMin	Min		
	328 F(Val) PrMax	Max		
330	Start/Stop			127
	331 Acc Time	10.00s		
	332 Dec Time	10.00s		
	333 Acc MotPot	16.00s		
	334 Dec MotPot	16.00s		
	335 Acc<Min Spd	10.00s		
	336 Dec<Min Spd	10.00s		
	337 Acc Rmp	Linear		
	338 Dec Rmp	Linear		
	339 Start Mode	Normal DC		
	33A Spinstart	Off		
	33B Stop Mode	Decel		
	33C Brk Release	0.00s		
	33D Release Spd	Orpm		
	33E Brk Engage	0.00s		
	33F Brk Wait	0.00s		
	33G Vector Brake	Off		
	33H Brk Fault	1.00s		
	33I Release Torque	0%		
	33J DC Hold			

		Factory setting	Customer	Page
	33J1 DC Hold	Off		
	33J2 DC Hold Spd	10rpm		
	33J3 DC Hold Cur	30%		
340	Speed			136
	341 Min Speed	Orpm		
	342 Stp<MinSpd	Off		
	343 Max Speed	Sync Speed		
	344 SkipSpd 1 Lo	Orpm		
	345 SkipSpd 1 Hi	Orpm		
	346 SkipSpd 2 Lo	Orpm		
	347 SkipSpd 2 Hi	Orpm		
	348 Jog Speed	50rpm		
350	Torques			139
	351 Max Torque	120%		
	352 IxR Comp	Off		
	353 IxR CompUsr	0%		
	354 Flux optim	Off		
	355 Max Power	Off		
360	Preset Ref			141
	361 Motor Pot	Non Volatile		
	362 Preset Ref 1	0 rpm		
	363 Preset Ref 2	250 rpm		
	364 Preset Ref 3	500 rpm		
	365 Preset Ref 4	750 rpm		
	366 Preset Ref 5	1000 rpm		
	367 Preset Ref 6	1250 rpm		
	368 Preset Ref 7	1500 rpm		
	369 Keyb Ref	Mot Pot		
370	Spd Ctrl Pl			142
	371 Spd Pl Auto	Off		
	372 Spd P Gain			
	373 Spd I Time			
380	ProcCtrlPID			143
	381 PID Control	Off		
	382 PID Autotune	Off		
	383 PID P Gain	1.0		
	384 PID I Time	1.00s		
	385 PID D Time	0.00s		
	386 PID<MinSpd	Off		
	387 PID Act Marg	0		
	388 PID Stdy Tst	Off		
	389 PID Stdy Mar	0		
390	Pump/Fan Ctrl			147
	391 Pump enable	Off		
	392 No of Drives	2		
	393 Select Drive	Sequence		
	394 Change Cond	Both		
	395 Change Timer	50h		
	396 Drives on Ch	0		
	397 Upper Band	10%		
	398 Lower Band	10%		
	399 Start Delay	0s		
	39A Stop Delay	0s		
	39B Upp Band Lim	0%		
	39C Low Band Lim	0%		
	39D Settle Start	0s		
	39E TransS Start	60%		
	39F Settle Stop	0s		

		Factory setting	Customer	Page			Factory setting	Customer	Page
39G	TransS Stop	60%				41C7	Load Curve 7	100%	
39H	Run Time 1	00:00:00				41C8	Load Curve 8	100%	
	39H1 Rst Run Tm1	No				41C9	Load Curve 9	100%	
39I	Run Time 2	00:00:00			41D	MinAbsMarg	3%		
	39I1 Rst Run Tm2	No			420	Process Prot			164
39J	Run Time 3	00:00:00			421	Low Volt OR	On		
	39J1 Rst Run Tm3	No			422	Rotor Locked	Off		
39K	Run Time 4	00:00:00			423	Motor lost	Off		
	39K1 Rst Run Tm4	No			424	Overvolt Ctrl	On		
39L	Run Time05	00:00:00			500	I/Os			166
	39L1 Rst Run Tm5	No			510	An Inputs			
39M	Run Time 6	00:00:00			511	AnIn1 Fc	Process Ref		
	39M1 Rst Run Tm6	No			512	AnIn1 Setup	4-20mA		
39N	Pump 123456				513	AnIn1 Advn			
39P	No of Backup	0			5131	AnIn1 Min	4mA		
3A0	Crane Option			154	5132	AnIn1 Max	10.00V/ 20.00mA		
3A1	Crane enable	Off			5133	AnIn1 Bipol	10.00V/ 20.00mA		
3A2	Control	4-Speed			5134	AnIn1 FcMin	Min		
3A3	Crane Relay 1	No trip			5135	AnIn1 ValMin	0		
3A4	Crane Relay 2	Brake			5136	AnIn1 FcMax	Max		
3A5	PreLimSwSpd				5137	AnIn1 ValMax	0		
3A6	CrawlSpd H/R				5138	AnIn1 Oper	Add+		
3A7	CrawlSpd L/L				5139	AnIn1 Filtr	0.1s		
3A8	Speed 2				513A	AnIn1 Enabl	On		
3A9	Speed 3				514	AnIn2 Fc	Off		170
3AA	Speed 4				515	AnIn2 Setup	4-20mA		
3AB	Dev Bandwid				516	AnIn2 Advan			171
3AC	Dev Time	ms			5161	AnIn2 Min	4mA		
3AD	LAFS Load	Off			5162	AnIn2 Max	20.00mA		
3AG	Crane N Function	Zero Pos			5163	AnIn2 Bipol	20.00mA		
400	Monitor/Prot			159	5164	AnIn2 FcMin	Min		
410	Load Monitor				5165	AnIn2 ValMin	0		
411	Alarm Select	Off			5166	AnIn2 FcMax	Max		
412	Alarm trip	Off			5167	AnIn2 ValMax	0		
413	Ramp Alarm	Off			5168	AnIn2 Oper	Add+		
414	Start Delay	2s			5169	AnIn2 Filtr	0.1s		
415	Load Type	Basic			516A	AnIn2 Enabl	On		
416	Max Alarm				517	AnIn3 Fc	Off		171
	4161 MaxAlarmMar	15%			518	AnIn3 Setup	4-20mA		
	4162 MaxAlarmDel	0.1s			519	AnIn3 Advan			
417	Max Pre alarm				5191	AnIn3 Min	4mA		
	4171 MaxPreAlMar	10%			5192	AnIn3 Max	20.00mA		
	4172 MaxPreAlDel	0.1s			5193	AnIn3 Bipol	20.00mA		
418	Min Pre Alarm				5194	AnIn3 FcMin	Min		
	4181 MinPreAlMar	10%			5195	AnIn3 ValMin	0		
	4182 MinPreAlDel	0.1s			5196	AnIn3 FcMax	Max		
419	Min Alarm				5197	AnIn3 ValMax	0		
	4191 MinAlarmMar	15%			5198	AnIn3 Oper	Add+		
	4192 MinAlarmDel	0.1s			5199	AnIn3 Filtr	0.1s		
41A	Autoset Alm	No			519A	AnIn3 Enabl	On		
41B	Normal Load	100%			51A	AnIn4 Fc	Off		171
41C	Load Curve				51B	AnIn4 Setup	4-20mA		
	41C1 Load Curve 1	100%			51C	AnIn4 Advan			
	41C2 Load Curve 2	100%			51C1	AnIn4 Min	4mA		
	41C3 Load Curve 3	100%			51C2	AnIn4 Max	20.00mA		
	41C4 Load Curve 4	100%			51C3	AnIn4 Bipol	20.00mA		
	41C5 Load Curve 5	100%			51C4	AnIn4 FcMin	Min		
	41C6 Load Curve 6	100%							

		Factory setting	Customer	Page			Factory setting	Customer	Page
	51C5	AnIn4 ValMin	0			55A	B3 Relay 1	Off	
	51C6	AnIn4 FcMax	Max			55B	B3 Relay 2	Off	
	51C7	AnIn4 ValMax	0			55C	B3 Relay 3	Off	
	51C8	AnIn4 Oper	Add+			55D	Relay Adv		
	51C9	AnIn4 Filt	0.1s			55D1	Relay 1 Mode	N.O	
	51CA	AnIn4 Enabl	On			55D2	Relay 2 Mode	N.O	
520	Dig Inputs			172		55D3	Relay 3 Mode	N.O	
	521	DigIn 1	RunL			55D4	B1R1 Mode	N.O	
	522	DigIn 2	RunR			55D5	B1R2 Mode	N.O	
	523	DigIn 3	Off			55D6	B1R3 Mode	N.O	
	524	DigIn 4	Off			55D7	B2R1 Mode	N.O	
	525	DigIn 5	Off			55D8	B2R2 Mode	N.O	
	526	DigIn 6	Off			55D9	B2R3 Mode	N.O	
	527	DigIn 7	Off			55DA	B3R1 Mode	N.O	
	528	DigIn 8	Reset			55DB	B3R2 Mode	N.O	
	529	B(oard)1 DigIn 1	Off			55DC	B3R3 Mode	N.O	
	52A	B(oard)1 DigIn 2	Off		560	Virtual I/Os			182
	52B	B(oard)1 DigIn 3	Off			561	VIO 1 Dest	Off	
	52C	B(oard)2 DigIn 1	Off			562	VIO 1 Source	Off	
	52D	B(oard)2 DigIn 2	Off			563	VIO 2 Dest	Off	
	52E	B(oard)2 DigIn 3	Off			564	VIO 2 Source	Off	
	52F	B(oard)3 DigIn 1	Off			565	VIO 3 Dest	Off	
	52G	B(oard)3 DigIn 2	Off			566	VIO 3 Source	Off	
	52H	B(oard)3 DigIn 3	Off			567	VIO 4 Dest	Off	
530	An Outputs			174		568	VIO 4 Source	Off	
	531	AnOut1 Fc	Speed			569	VIO 5 Dest	Off	
	532	AnOut1 Setup	4-20mA			56A	VIO 5 Source	Off	
	533	AnOut1 Adv				56B	VIO 6 Dest	Off	
	5331	AnOut 1 Min	4mA			56C	VIO 6 Source	Off	
	5332	AnOut 1 Max	20.0mA			56D	VIO 7 Dest	Off	
	5333	AnOut1Bipol	-10.00-10.00 V			56E	VIO 7 Source	Off	
	5334	AnOut1 FcMin	Min			56F	VIO 8 Dest	Off	
	5335	AnOut1 VaMin	0			56G	VIO 8 Source	Off	
	5336	AnOut1 FcMax	Max		600	Logical&Timers			183
	5337	AnOut1 VaMax	0		610	Comparators			
	534	AnOut2 FC	Torque			611	CA1 Setup		
	535	AnOut2 Setup	4-20mA			6111	CA1 Value	Speed	
	536	AnOut2 Advan				6112	CA1 Level HI	300rpm	
	5361	AnOut 2 Min	4mA			6113	CA1 Level LO	200rpm	
	5362	AnOut 2 Max	20.0mA			6114	CA1 Type	Hysteresis	
	5363	AnOut2Bipol	-10.00-10.00 V			6115	CA1 Polar	Unipolar	
	5364	AnOut2 FcMin	Min		612	CA2 Setup		188	
	5365	AnOut2 VaMin	0			6121	CA2 Value	Torque	
	5366	AnOut2 FcMax	Max			6122	CA2 Level HI	20%	
	5367	AnOut2 VaMax	0			6123	CA2 Level LO	10%	
540	Dig Outputs			178		6124	CA2 Type	Hysteresis	
	541	DigOut 1	Ready			6125	CA2 Polar	Unipolar	
	542	DigOut 2	Brake		613	CA3 Setup		190	
550	Relays			180		6131	CA3 Value	Process Val	
	551	Relay 1	Trip			6132	CA3 Level HI	300rpm	
	552	Relay 2	Run			6133	CA3 Level LO	200rpm	
	553	Relay 3	Off			6134	CA3 Type	Hysteresis	
	554	B(oard)1 Relay 1	Off			6135	CA3 Polar	Unipolar	
	555	B1 Relay 2	Off		614	CA4 Setup		191	
	556	B1 Relay 3	Off			6141	CA4 Value	Process Err	
	557	B2 Relay 1	Off			6142	CA4 Level HI	100 rpm	
	558	B2 Relay 2	Off			6143	CA4 Level LO	- 100 rpm	
	559	B2 Relay 3	Off			6144	CA4 Type	Window	

			Factory setting	Customer	Page			Factory setting	Customer	Page
	6145	CA4 Polar	Bipolar				71A	Heatsink Tmp		
615	CD Setup				192		71B	PT100_1_2_3		
	6151	CD1	Run				71C	PT100_4_5_6		
	6152	CD2	DigIn 1			720	Status			206
	6153	CD3	Trip				721	AC drive Status		
	6154	CD4	Ready				722	Warning		
620	Logic Y				193		723	DigIn Status		
	621	Y Comp 1	CA1				724	DigOut Status		
	622	Y Operator 1	&				725	AnIn 1 2		
	623	Y Comp 2	!A2				726	AnIn 3 4		
	624	Y Operator 2	&				727	AnOut 1 2		
	625	Y Comp 3	CD1				728	IO Status B1		
630	Logic Z				195		729	IO Status B2		
	631	Z Comp 1	CA1				72A	IO Status B3		
	632	Z Operator 1	&				72B	Area D Stat		
	633	Z Comp2	!A2				72B1	Area D LSB		
	634	Z Operator 2	&				72B2	Area D MSB		
	635	Z Comp 3	CD1				72C	VIO Status		
640	Timer1				196	730	Stored Val			210
	641	Timer1 Trig	Off				731	Run Time	00:00:00	
	642	Timer1 Mode	Off				7311	Reset RunTm	No	
	643	Timer1 Delay	0:00:00				732	Mains Time	00:00:00	
	644	Timer 1 T1	0:00:00				733	Energy	kWh	
	645	Timer1 T2	0:00:00				7331	Rst Energy	No	
	649	Timer1 Value	0:00:00			800	View TripLog			
650	Timer2				198	810	Trip Message (log list 1)			211
	651	Timer2 Trig	Off				811	Process Value		
	652	Timer2 Mode	Off				812	Speed		
	653	Timer2 Delay	0:00:00				813	Torque		
	654	Timer 2 T1	0:00:00				814	Shaft Power		
	655	Timer2 T2	0:00:00				815	EI Power		
	659	Tmer2 Value	0:00:00				816	Current		
660	Counters						817	Output voltage		
	661	Counter 1					818	Frequency		
	6611	C1 Trig	Off				819	DC voltage		
	6612	C1 Reset	Off				81A	Heatsink Tmp		
	6613	C1 High Val	0				81B	PT100_1, 2, 3		
	6614	C1 Low Val	0				81C	VSD Status		
	6615	C1 DecTimer	Off				81D	DigIn status		
	6619	C1 Value	0				81E	DigOut status		
	662	Counter 2					81F	AnIn 1 2		
	6621	C2 Trig	Off				81G	AnIn 3 4		
	6622	C2 Reset	Off				81H	AnOut 1 2		
	6623	C2 High Val	0				81I	IO Status B1		
	6624	C2 Low Val	0				81J	IO Status B2		
	6625	C2 DecTimer	Off				81K	IO Status B3		
	6629	C2 Value	0				81L	Run Time		
700	Oper/Status				203		81M	Mains Time		
	710	Operation					81N	Energy		
	711	Process Val					81O	Process reference		
	712	Speed					81P	VIO Status		
	713	Torque					81Q	PT100PT100_4_5_6		
	714	Shaft Power				820	Trip Message 821- 82P (log list 2)			212
	715	EI Power				830	Trip Message 831 - 83P (log list 3)			
	716	Current				840	Trip Message 841 - 84P (log list 4)			
	717	Output volt				850	Trip Message 851 - 85P (log list 5)			
	718	Frequency				860	Trip Message 861 - 86P (log list 6)			
	719	DC Voltage				870	Trip Message 871 - 87P (log list 7)			

		Factory setting	Customer	Page
880	Trip Message 881 - 88P (log list 8)			
890	Trip Message 891 - 89P (log list 9)			
8A0	Reset Trip	No		212
900	System Data			
920	AC drive Data			213
921	AC drive Type			
922	Software			
9221	Build Info			
9222	Build ID			
923	Unit name	0		
924	Bluetooth ID			
930	Clock			
931	Time			
932	Date			
933	Weekday			

Index

Symbols

+10VDC Supply voltage 251
+24VDC Supply voltage 251

Numerics

-10VDC Supply voltage 251
Menu..... 116, 120, 121, 139, 141, 154,
155, 156, 158, 162
4-20mA 166
Menu 164, 166

A

Abbreviations 12
Acceleration 127, 129
 Acceleration ramp 129
 Acceleration time 127
 Ramp type 129
Alarm trip 157
Alternating MASTER 147
Analogue comparators 181
Analogue input 164
 AnIn1 164
 AnIn2 168, 169
 Offset 165, 173
Analogue Output 172, 175, 251
 AnOut 1 172, 175
 Output configuration 173, 175
AND operator 191
AnIn2 168
AnIn3 169
AnIn4 169
Autoreset 2, 65, 110, 217
Autotune 142

B

Baudrate 84
Brake function 132
 Bake release time 132
 Brake 133
 Brake Engage Time 133
 Brake wait time 133
 Release speed 133
 Vector Brake 133
Brake functions
 Frequency 164
Brake resistors 225

C

Cable specifications 36
CE-marking 11
Change Condition 148
change sign of a value 79, 82, 84
Change Timer 148
Clockwise rotary field 170
Comparators 181
Connecting control signals 51
Connections
 Brake chopper connections 29
 Control signal connections 51

Mains supply 29, 55
Motor earth 29
Motor output 29, 55
Safety earth 29, 55
Control Panel memory
 Copy all settings to Control
 Panel 109
 Frequency 164
Control signal connections 51
Control signals 48, 53
 Edge-controlled 65, 96
 Level-controlled 65, 96
Counter-clockwise rotary field 170
Crane Option 157
Current 49
Current control (0-20mA) 54

D

Date 78, 213
DC-link residual voltage 2
Deceleration 127
 Deceleration time 127
 Ramp type 130
Declaration of Conformity 11
Default 109
Definitions 12
DeviceNet 71
Digital comparators 181
Digital inputs
 Board Relay 179
 DigIn 1 170
 DigIn 2 171
 DigIn 3 172
Dismantling and scrapping 11
Display 75, 80
Double-ended connection 53
Drive mode 92
 Frequency 164
Drives on Change 148

E

Edge control 65, 90, 96
Electrical 202
Electrical specification 240
EMC 29
 Current control (0-20mA) 54
 Double-ended connection 53
 RFI mains filter 29
 Single-ended connection 53
 Twisted cables 54
Emergency stop 69
EmoSoftCom 225
EN60204-1 11
EN61800-3 11
EN61800-5-1 11
Enable 64, 78, 81, 170
EtherCAT 71, 227
EtherNet 71
EtherNet IP 71
EXOR operator 191
Expression 191
External Control Panel 224

F

Factory settings 109
Fans 147
Fieldbus 71, 227
Fixed MASTER 147
Flux optimization 140
Frequency
 Frequency priority 63
 Jog Frequency 138
 Maximum Frequency 136
 Minimum Frequency 136
 Preset Frequency 141
 Skip Frequency 137
Frequency priority 63
Fuses and glands 246

G

General electrical specifications 240
Gland kits 225
Global parameters 108

H

Handheld Control Panel 2.0 224

I

I/O Board 227
I2t protection
 Motor I2t Current 104, 106
 Motor I2t Type 104
ID run 66, 100
Identification Run 66, 100
IEC269 246
Industrial Ethernet 71, 227
Internal speed control 142
Internal speed controller 142
 Speed I Time 143
 Speed P Gain 143
Interrupt 120, 121
IT Mains supply 2
IxR Compensation 139

J

Jog Frequency 138

K

Keyboard reference 142
Keys 78, 81
 - Key 80, 83
 + Key 80, 83
 Control keys 78, 81
 ENTER key 80, 83
 ESCAPE key 80, 83
 Function keys 80, 83
 NEXT key 80, 83
 PREVIOUS key 80, 83
 RUN L 78, 81
 RUN R 78, 81
 STOP/RESET 78, 81
 Toggle Key 79, 82

L			
LCD display	75, 80	(245)	110
Level control	65, 96	(250)	110
Liquid cooling	231	(251)	110
Load default	109	(252)	111
Load monitor	67, 157	(253)	111
Local/Remote	94	(254)	111
Lock code	95, 97	(255)	111
Long motor cables	31	(256)	112
Low Voltage Directive	11	(257)	112
Lower Band	149	(258)	112
Lower Band Limit	151	(259)	112
		(25A)	112
		(25B)	113
		(25C)	113
		(25D)	113
		(25E)	113
		(25F)	113
		(25G)	113
		(25H)	114
		(25I)	114
		(25J)	114
		(25K)	114
		(25L)	114
		(25M)	114
		(25N)	115
		(25O)	115
		(25P)	115
		(25Q)	115
		(25R)	115
		(25S)	115
		(25T)	116
		(25U)	116
		(260)	117
		(261)	117
		(262)	117
		(2621)	118
		(2622)	118
		(263)	118
		(2631)	118
		(2632)	118
		(2633)	119
		(2634)	119
		(264)	120
		(265)	120
		(269)	121
		(310)	122
		(320)	122
		(321)	122
		(322)	123
		(323)	124
		(324)	125
		(325)	125
		(326)	125
		(327)	126
		(328)	126
		(331)	127
		(332)	127
		(333)	128
		(334)	128
		(335)	128
		(336)	129
		(337)	129
		(338)	130
		(339)	130
		(33A)	130
		(33B)	131
		(33C)	132
		(33D)	133
		(33E)	133
		(33F)	133
		(33G)	133
		(33H1)	133
		(341)	136
		(342)	136
		(343)	136
		(344)	137
		(345)	137
		(346)	137
		(347)	138
		(348)	138
		(351)	139
		(354)	140
		(361)	141
		(362)	141
		(363)	141
		(364)	141
		(365)	141
		(366)	141
		(367)	141
		(368)	141
		(369)	142
		(371)	142
		(372)	143
		(373)	143
		(380)	143
		(381)	143
		(383)	143
		(384)	144
		(385)	144
		(386)	144
		(387)	145
		(388)	145
		(389)	146
		(391)	147
		(392)	147
		(393)	147
		(394)	148
		(395)	148
		(396)	148
		(398)	149
		(399)	150
		(39A)	150
		(39B)	150
		(39C)	151
		(39D)	151
		(39E)	151
		(39F)	152
		(39G)	152
		(39H-39M)	153
		(410)	157
		(411)	157
		(412)	157
		(413)	157
		(414)	157
		(415)	158
		(416)	158
M			
Machine Directive	11		
Main menu	84		
Mains supply	29, 47, 55		
Maintenance	221		
Manis cables	26		
Max Frequency	127, 136		
Memory	66		
Menu			
(110)	89		
(120)	90		
(210)	91		
(211)	91		
(212)	92		
(213)	92		
(214)	93		
(215)	93		
(216)	94		
(217)	94		
(218)	95, 97		
(219)	95		
(21A)	96		
(21B)	96		
(220)	97		
(221)	97		
(222)	98		
(223)	98		
(224)	98		
(225)	99		
(226)	99		
(227)	99		
(228)	99		
(229)	100		
(22B)	100		
(22C)	100		
(22D)	101		
(230)	104		
(231)	104		
(232)	104		
(233)	104		
(234)	106		
(235)	106		
(236)	106		
(237)	107		
(240)	108		
(241)	108		
(242)	108		
(243)	109		
(244)	109		

(4162)	159	(6141)	189	(811-81N)	209
(417)	159	(6142)	189	(820)	210
(4171)	159	(6143)	189	(830)	210
(4172)	159	(6144)	190	(8A0)	210
(418)	159	(6145)	190	(900)	211
(4181)	159	(6151)	190	(920)	211
(4182)	160	(6152)	190	(922)	211
(419)	160	(6153)	191	33F	133
(4191)	160	(6154)	191	616	187
(4192)	160, 162	(620)	191	Minimum Frequency	129
(41A)	160	(621)	191, 192	Modbus	71
(41B)	161	(622)	191, 192	Modbus/TCP	71, 227
(41C)	161	(623)	191, 192	Monitor function	
(421)	162	(624)	191	Alarm Select	161
(422)	163	(625)	191	Auto set	160
(423)	163	(630)	193	Delay time	157
(424)	163	(631)	193	Max Alarm	157
(511)	164	(632)	193	Overload	67, 157
(512)	165	(633)	194	Ramp Enable	157
(513)	166	(634)	194	Response delay	158, 159, 161
(514)	168	(635)	194	Start delay	157
(515)	168	(640)	194	Motor cables	29
(516)	169	(641)	194	Motor cos phi (power factor)	99
(517)	169	(642)	195	Motor data	97
(518)	169	(643)	195	Motor frequency	99
(519)	169	(644)	195	Motor I2t Current	218
(51A)	169	(645)	195	Motor identification run	100
(51B)	169	(649)	196	Motor Lost	112
(51C)	170	(650)	196	Motor lost	163
(521)	134, 135, 170	(651)	196	Motor Potentiometer	141, 171
(522)	171	(652)	196	Motor potentiometer	171
(529-52H)	172	(653)	196	Motor PTC	50, 51, 107
(531)	172	(654)	196	Motor ventilation	99
(532)	173	(655)	196	Motors	7
(533)	173	(659)	197	Motors in parallel	45
(534)	175	(711)	201	MotPot	128
(535)	175	(712)	201		
(536)	176	(713)	202	N	
(541)	176	(714)	202	Nominal motor frequency	136
(542)	178	(715)	202	Number of drives	147
(551)	178	(716)	202		
(552)	178	(717)	202	O	
(553)	179	(718)	203	Operation	91
(55D)	179	(719)	203	Options	54, 223
(561)	180	(71A)	203	External Control Panel (ECP) ...	224
(562)	180	(71B)	203	I/O Board	227
(563-56G)	180	(720)	204	OR operator	191
(610)	181	(721)	204	Output chokes	231
(6111)	181	(722)	205	Output Voltage	202
(6112)	183	(723)	205	Overload	67, 157
(6113)	185	(724)	206	Overload alarm	67
(6114)	185	(725)	206		
(6115)	186	(726)	206	P	
(6121)	186	(727)	207	Parameter sets	
(6122)	187	(728-72A)	207	Load default values	109
(6123)	187	(730)	208	Load parameter sets from	
(6124)	187	(731)	208	Control Panel	110
(6125)	187	(7311)	208	Parameter Set Selection	61
(6131)	188	(732)	208	Select a Parameter set	108
(6132)	188	(733)	208	PI Autotune	142
(6133)	188	(7331)	208	PID Controller	143
(6134)	188	(800)	209	Closed loop PID control	144
(6135)	189	(810)	209		

Feedback signal	143	Standby supply board	228
PID D Time	144	Start Delay	150
PID I Time	144	Start/Stop settings	127
PID P Gain	143	Status indications	75, 80
Priority	63	Stop categories	69
Process Protection	162	Stop command	170
Process Value	201	Stop Delay	150
Product standard, EMC	10	Stripping lengths	36
Profibus DP	71	Switches	49
Profinet IO	71	Switching in motor cables	31
Programming	84		
PT100 Inputs	106, 107	T	
PTC/PT100 board	227	Technical Data	233
Pump/Fan Control	147	Terminal connections	48
		Test Run	100
Q		Time	78, 212
Quick Setup Card	7	Timer	148
		Top cover	231
R		Torque	87, 139
Reference		Transition Frequency	151
Frequency	162	Trip	78, 81
Motor potentiometer	171	Trip causes and remedial action	216
Reference signal	92, 122	Trip Message log	209
Set reference value	122	Trips, warnings and limits	215
Torque	163	Twisted cables	54
View reference value	122	Type code number	9
Reference control	93		
Reference signal	93	U	
Relay output	178	Underload	67
Relay 1	178	Underload alarm	157
Relay 2	178	Unlock Code	95
Relay 3	179	Upper Band	149
Release speed	133	Upper Band Limit	150
Remote control	64		
Reset command	171	V	
Reset control	94	V/Hz Mode	92
Resolution	89	Vector Brake	133
RFI mains filter	29	Ventilation	99
Rotation	95	View reference value	122
RS232/485	71, 117	Voltage	49
RTC- Real time clock	227	VSD Data	211
RUN	78, 81		
Run command	78, 81	W	
Run Left command	170	Weekday	78, 213
Run Right command	170		
Running motor	130		
S			
Safe Stop option	229		
Select Drive	147		
Serial communication	227		
Settle Time	151		
Setup menu	84		
Menu structure	83		
Shaft power	202		
Signal ground	251		
Single-ended connection	53		
Software	211		
Speed	201		
Speed Mode	92		
Spinstart	130		
Standards	10		

TECHNICAL CENTERS

NORDIC

CG Drives & Automation

Mörsaregatan 12
Box 222 25
SE-250 24 HELSINGBORG
Sweden
Phone: +46 42 16 99 00
Fax: +46 42 16 99 49
info.se@cgglobal.com

CENTRAL EUROPE

(Germany, Austria, Switzerland)

CG Drives & Automation

Gießbergweg 3
D-38855 WERNIGERODE
Germany
Phone: +49 (0)3943-920 50
Fax: +49 (0)3943-920 55
info.de@cgglobal.com

BENELUX

CG Drives & Automation

Polakkers 5
5531 NX BLADEL
Postbus 132
5530 AC BLADEL
The Netherlands
Phone: +31 (0)497 389 222
Fax: +31 (0)497 386 275
info.nl@cgglobal.com

INDIA

CG Power and Industrial Solutions Ltd.

Drive & Automation Division
Plot. No, 09, Phase II, New Industrial Area
462046 MANDIDEEP
India
Phone: +91 748 042 642 1
drives.service@cgglobal.com

CG Drives & Automation Sweden AB

Mörsaregatan 12
Box 222 25
SE-250 24 Helsingborg
Sweden
T +46 42 16 99 00
F +46 42 16 99 49
www.emotron.com/www.cgglobal.com

Document set: 01-5324-01r6
Instruction manual, 01-5326-01r5
Quick setup card, 01-5328-01r2
2019-10-07